



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832


Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



Extractor Tool Instruction Sheet

Order No. 62100-6000

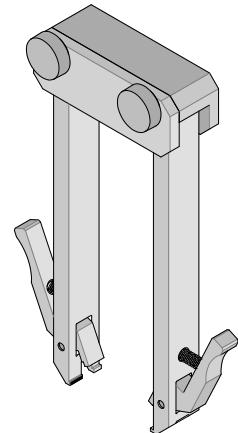

FEATURES

- Removes connector from latched Picoflex™ header (for removal from standard header, use tool 69008-1070)
- Durable tool steel construction
- Releases header latches during connector extraction
- Suitable for circuit sizes 4 to 26

DESCRIPTION:

This Extractor Tool is for the removal of 90327, 92315, 92316, 92317, and 92318 Series connectors from Latched Header Assemblies (series 90816). This tool is approximately 100mm (3.9") high x 50mm (2.0") wide x 20mm (0.8") deep and weighs about 0.4 kg (14 oz).

SCOPE

Products: Picoflex™ Connectors and Cable assemblies, 4 to 26 Circuits, to be extracted from the Latched Picoflex™ SMT header (90816 series)

Connector Series No.	Connector Order No.							
90327	90327-0004	90327-0006	90327-0008	90327-0010	90327-0012	90327-0014	90327-0016	90327-0018
	90327-0020	90327-0026	90327-0051	90327-0052	90327-0053	90327-0054	90327-0055	90327-0056
	90327-0057	90327-0058	90327-0059	90327-0060	90327-0061	90327-0062	90327-0063	90327-0064
	90327-0065	90327-0066	90327-0067	90327-0068	90327-0069	90327-0070	90327-0071	90327-0072
	90327-0073	90327-0074	90327-0075	90327-0076	90327-0077	90327-0078	90327-0079	90327-0080
	90327-0081	90327-0082	90327-0083	90327-0084	90327-0085	90327-0086	90327-0104	90327-0106
	90327-0108	90327-0110	90327-0112	90327-0114	90327-0116	90327-0118	90327-0120	90327-0126
	90327-0152	90327-0153	90327-0154	90327-0155	90327-0156	90327-0157	90327-0158	90327-0159
	90327-0160	90327-0161	90327-0162	90327-0163	90327-0164	90327-0165	90327-0166	90327-0167
	90327-0168	90327-0169	90327-0170	90327-0171	90327-0172	90327-0173	90327-0174	90327-0175
	90327-0176	90327-0177	90327-0178	90327-0179	90327-0180	90327-0181	90327-0182	90327-0183
	90327-0184	90327-0185	90327-0186	90327-0204	90327-0206	90327-0208	90327-0210	90327-0212
	90327-0214	90327-0216	90327-0218	90327-0220	90327-0226	90327-0252	90327-0253	90327-0254
	90327-0255	90327-0256	90327-0257	90327-0258	90327-0259	90327-0260	90327-0261	90327-0262
	90327-0263	90327-0264	90327-0265	90327-0266	90327-0267	90327-0268	90327-0269	90327-0270
	90327-0271	90327-0272	90327-0273	90327-0274	90327-0275	90327-0276	90327-0277	90327-0278
	90327-0279	90327-0280	90327-0281	90327-0282	90327-0283	90327-0284	90327-0285	90327-0286
	90327-0304	90327-0306	90327-0308	90327-0310	90327-0312	90327-0314	90327-0316	90327-0318
	90327-0320	90327-0322	90327-0324	90327-0326	90327-0351	90327-0352	90327-0353	90327-0354
	90327-0355	90327-0356	90327-0357	90327-0358	90327-0359	90327-0360	90327-0361	90327-0362
	90327-0363	90327-0364	90327-0365	90327-0366	90327-0367	90327-0368	90327-0369	90327-0370
	90327-0371	90327-0372	90327-0373	90327-0374	90327-0375	90327-0376	90327-0377	90327-0378
	90327-0379	90327-0380	90327-0381	90327-0382	90327-0383	90327-0384	90327-0385	90327-0386
	90327-0387	90327-0388	90327-0389	90327-0390	90327-0393	90327-0397	90327-0404	90327-0406
	90327-0408	90327-0410	90327-0412	90327-0414	90327-0416	90327-0418	90327-0420	90327-0426

Extractor Tool for Picoflex™ Connectors

Connector Series No.	Connector Order No.							
90327	90327-0452	90327-0453	90327-0454	90327-0455	90327-0456	90327-0457	90327-0458	90327-0459
	90327-0460	90327-0461	90327-0462	90327-0463	90327-0464	90327-0465	90327-0466	90327-0467
	90327-0468	90327-0469	90327-0470	90327-0471	90327-0472	90327-0473	90327-0474	90327-0475
	90327-0476	90327-0477	90327-0478	90327-0479	90327-0480	90327-0481	90327-0482	90327-0483
	90327-0484	90327-0485	90327-0486	90327-0504	90327-0506	90327-0508	90327-0510	90327-0512
	90327-0514	90327-0516	90327-0518	90327-0520	90327-0526	90327-0552	90327-0553	90327-0554
	90327-0555	90327-0556	90327-0557	90327-0558	90327-0559	90327-0560	90327-0561	90327-0562
	90327-0563	90327-0564	90327-0565	90327-0566	90327-0567	90327-0568	90327-0569	90327-0570
	90327-0571	90327-0572	90327-0573	90327-0574	90327-0575	90327-0576	90327-0577	90327-0578
	90327-0579	90327-0580	90327-0581	90327-0582	90327-0583	90327-0584	90327-0585	90327-0586
	90327-1004	90327-1006	90327-1008	90327-1010	90327-1012	90327-1014	90327-1016	90327-1018
	90327-1020	90327-1022	90327-1024	90327-1026	90327-1051	90327-1052	90327-1053	90327-1054
	90327-1055	90327-1056	90327-1057	90327-1058	90327-1059	90327-1060	90327-1061	90327-1062
	90327-1063	90327-1064	90327-1065	90327-1066	90327-1067	90327-1068	90327-1069	90327-1070
	90327-1071	90327-1072	90327-1073	90327-1074	90327-1075	90327-1076	90327-1077	90327-1078
	90327-1079	90327-1080	90327-1081	90327-1082	90327-1083	90327-1084	90327-1085	90327-1086
	90327-1087	90327-1088	90327-1089	90327-1090	90327-1104	90327-1106	90327-1108	90327-1110
	90327-1112	90327-1114	90327-1116	90327-1118	90327-1120	90327-1122	90327-1124	90327-1126
	90327-1151	90327-1152	90327-1153	90327-1154	90327-1155	90327-1156	90327-1157	90327-1158
	90327-1159	90327-1160	90327-1161	90327-1162	90327-1163	90327-1164	90327-1165	90327-1166
	90327-1167	90327-1168	90327-1169	90327-1170	90327-1171	90327-1172	90327-1173	90327-1174
	90327-1175	90327-1176	90327-1177	90327-1178	90327-1179	90327-1180	90327-1181	90327-1182
	90327-1183	90327-1184	90327-1185	90327-1186	90327-1187	90327-1188	90327-1189	90327-1190
	90327-1204	90327-1206	90327-1208	90327-1210	90327-1212	90327-1214	90327-1216	90327-1218
	90327-1220	90327-1226	90327-1251	90327-1252	90327-1253	90327-1254	90327-1255	90327-1256
	90327-1257	90327-1258	90327-1259	90327-1260	90327-1261	90327-1262	90327-1263	90327-1264
	90327-1265	90327-1266	90327-1267	90327-1268	90327-1269	90327-1270	90327-1271	90327-1272
	90327-1273	90327-1274	90327-1275	90327-1276	90327-1277	90327-1278	90327-1279	90327-1280
	90327-1281	90327-1282	90327-1283	90327-1284	90327-1285	90327-1286	90327-1304	90327-1306
	90327-1308	90327-1310	90327-1312	90327-1314	90327-1316	90327-1318	90327-1320	90327-1322
	90327-1324	90327-1326	90327-1351	90327-1352	90327-1353	90327-1354	90327-1355	90327-1356
	90327-1357	90327-1358	90327-1359	90327-1360	90327-1361	90327-1362	90327-1363	90327-1364
	90327-1365	90327-1366	90327-1367	90327-1368	90327-1369	90327-1370	90327-1371	90327-1372
	90327-1373	90327-1374	90327-1375	90327-1376	90327-1377	90327-1378	90327-1379	90327-1380
	90327-1381	90327-1382	90327-1383	90327-1384	90327-1385	90327-1386	90327-1387	90327-1388
	90327-1389	90327-1390	90327-1404	90327-1406	90327-1408	90327-1410	90327-1412	90327-1414
	90327-1416	90327-1418	90327-1420	90327-1426	90327-1451	90327-1452	90327-1453	90327-1454
	90327-1455	90327-1456	90327-1457	90327-1458	90327-1459	90327-1460	90327-1461	90327-1462
	90327-1463	90327-1464	90327-1465	90327-1466	90327-1467	90327-1468	90327-1469	90327-1470
	90327-1471	90327-1472	90327-1473	90327-1474	90327-1475	90327-1476	90327-1477	90327-1478
	90327-1479	90327-1480	90327-1481	90327-1482	90327-1483	90327-1484	90327-1485	90327-1486
	90327-1487	90327-1488	90327-1489	90327-1490	90327-1504	90327-1506	90327-1508	90327-1510
	90327-1512	90327-1514	90327-1516	90327-1518	90327-1520	90327-1526	90327-1551	90327-1552
	90327-1553	90327-1554	90327-1555	90327-1556	90327-1557	90327-1558	90327-1559	90327-1560
	90327-1561	90327-1562	90327-1563	90327-1564	90327-1565	90327-1566	90327-1567	90327-1568
	90327-1569	90327-1570	90327-1571	90327-1572	90327-1573	90327-1574	90327-1575	90327-1576
	90327-1577	90327-1578	90327-1579	90327-1580	90327-1581	90327-1582	90327-1583	90327-1584
	90327-1585	90327-1586	90327-1587	90327-1588	90327-1589	90327-1590	90327-2051	90327-2052
	90327-2053	90327-2054	90327-2055	90327-2056	90327-2057	90327-2058	90327-2059	90327-2060
	90327-2061	90327-2062	90327-2063	90327-2064	90327-2065	90327-2066	90327-2067	90327-2068
	90327-2069	90327-2070	90327-2071	90327-2072	90327-2073	90327-2074	90327-2075	90327-2076
	90327-2077	90327-2078	90327-2079	90327-2080	90327-2081	90327-2082	90327-2083	90327-2084
	90327-2085	90327-2086	90327-2087	90327-2088	90327-2089	90327-2090	90327-2104	90327-2106
	90327-2108	90327-2110	90327-2112	90327-2114	90327-2116	90327-2118	90327-2120	90327-2126

Extractor Tool for Picoflex™ Connectors

Connector Series No.	Connector Order No.							
90327	90327-2151	90327-2152	90327-2153	90327-2154	90327-2155	90327-2156	90327-2157	90327-2158
	90327-2159	90327-2160	90327-2161	90327-2162	90327-2163	90327-2164	90327-2165	90327-2166
	90327-2167	90327-2168	90327-2169	90327-2170	90327-2171	90327-2172	90327-2173	90327-2174
	90327-2175	90327-2176	90327-2177	90327-2178	90327-2179	90327-2180	90327-2181	90327-2182
	90327-2183	90327-2184	90327-2185	90327-2186	90327-2187	90327-2188	90327-2189	90327-2190
	90327-2204	90327-2206	90327-2208	90327-2210	90327-2212	90327-2214	90327-2216	90327-2218
	90327-2220	90327-2226	90327-2251	90327-2252	90327-2253	90327-2254	90327-2255	90327-2256
	90327-2257	90327-2258	90327-2259	90327-2260	90327-2261	90327-2262	90327-2263	90327-2264
	90327-2265	90327-2266	90327-2267	90327-2268	90327-2269	90327-2270	90327-2271	90327-2272
	90327-2273	90327-2274	90327-2275	90327-2276	90327-2277	90327-2278	90327-2279	90327-2280
	90327-2281	90327-2282	90327-2283	90327-2284	90327-2285	90327-2286	90327-2287	90327-2288
	90327-2289	90327-2290	90327-2304	90327-2306	90327-2308	90327-2310	90327-2312	90327-2314
	90327-2316	90327-2318	90327-2320	90327-2326	90327-2351	90327-2352	90327-2353	90327-2354
	90327-2355	90327-2356	90327-2357	90327-2358	90327-2359	90327-2360	90327-2361	90327-2362
	90327-2363	90327-2364	90327-2365	90327-2366	90327-2367	90327-2368	90327-2369	90327-2370
	90327-2371	90327-2372	90327-2373	90327-2374	90327-2375	90327-2376	90327-2377	90327-2378
	90327-2379	90327-2380	90327-2381	90327-2382	90327-2383	90327-2384	90327-2385	90327-2386
	90327-2388	90327-2389	90327-2390	90327-2404	90327-2406	90327-2408	90327-2410	90327-2412
	90327-2414	90327-2416	90327-2418	90327-2420	90327-2426	90327-2451	90327-2452	90327-2453
	90327-2454	90327-2455	90327-2456	90327-2457	90327-2458	90327-2459	90327-2460	90327-2461
	90327-2462	90327-2463	90327-2464	90327-2465	90327-2466	90327-2467	90327-2468	90327-2469
	90327-2470	90327-2471	90327-2472	90327-2473	90327-2474	90327-2475	90327-2476	90327-2477
	90327-2478	90327-2479	90327-2480	90327-2481	90327-2482	90327-2483	90327-2484	90327-2485
	90327-2486	90327-2487	90327-2488	90327-2489	90327-2490	90327-2504	90327-2506	90327-2508
	90327-2510	90327-2512	90327-2514	90327-2516	90327-2518	90327-2520	90327-2526	90327-2551
	90327-2552	90327-2553	90327-2554	90327-2555	90327-2556	90327-2557	90327-2558	90327-2559
	90327-2560	90327-2561	90327-2562	90327-2563	90327-2564	90327-2565	90327-2566	90327-2567
	90327-2568	90327-2569	90327-2570	90327-2571	90327-2572	90327-2573	90327-2574	90327-2575
	90327-2576	90327-2577	90327-2578	90327-2579	90327-2580	90327-2581	90327-2582	90327-2583
	90327-2584	90327-2585	90327-2586	90327-2587	90327-2588	90327-2589	90327-2590	90327-3051
	90327-3052	90327-3053	90327-3054	90327-3055	90327-3056	90327-3057	90327-3058	90327-3059
	90327-3060	90327-3061	90327-3062	90327-3063	90327-3064	90327-3065	90327-3066	90327-3067
	90327-3068	90327-3069	90327-3070	90327-3071	90327-3072	90327-3073	90327-3074	90327-3075
	90327-3076	90327-3077	90327-3078	90327-3079	90327-3080	90327-3081	90327-3082	90327-3083
	90327-3084	90327-3085	90327-3086	90327-3087	90327-3088	90327-3089	90327-3090	90327-3104
	90327-3106	90327-3108	90327-3110	90327-3112	90327-3114	90327-3116	90327-3118	90327-3120
	90327-3126	90327-3151	90327-3152	90327-3153	90327-3154	90327-3155	90327-3156	90327-3157
	90327-3158	90327-3159	90327-3160	90327-3161	90327-3162	90327-3163	90327-3164	90327-3165
	90327-3166	90327-3167	90327-3168	90327-3169	90327-3170	90327-3171	90327-3172	90327-3173
	90327-3174	90327-3175	90327-3176	90327-3177	90327-3178	90327-3179	90327-3180	90327-3181
	90327-3182	90327-3183	90327-3184	90327-3185	90327-3186	90327-3187	90327-3188	90327-3189
	90327-3190	90327-3204	90327-3206	90327-3208	90327-3210	90327-3212	90327-3214	90327-3216
	90327-3218	90327-3220	90327-3226	90327-3251	90327-3252	90327-3253	90327-3254	90327-3255
	90327-3256	90327-3257	90327-3258	90327-3259	90327-3260	90327-3261	90327-3262	90327-3263
	90327-3264	90327-3265	90327-3266	90327-3267	90327-3268	90327-3269	90327-3270	90327-3271
	90327-3272	90327-3273	90327-3274	90327-3275	90327-3276	90327-3277	90327-3278	90327-3279
	90327-3280	90327-3281	90327-3282	90327-3283	90327-3284	90327-3285	90327-3286	90327-3287
	90327-3288	90327-3289	90327-3290	90327-3304	90327-3306	90327-3308	90327-3310	90327-3312
	90327-3314	90327-3316	90327-3318	90327-3320	90327-3322	90327-3324	90327-3326	90327-3351
	90327-3352	90327-3353	90327-3354	90327-3355	90327-3356	90327-3357	90327-3358	90327-3359
	90327-3360	90327-3361	90327-3362	90327-3363	90327-3364	90327-3365	90327-3366	90327-3367
	90327-3368	90327-3369	90327-3370	90327-3371	90327-3372	90327-3373	90327-3374	90327-3375
	90327-3376	90327-3377	90327-3378	90327-3379	90327-3380	90327-3381	90327-3382	90327-3383
	90327-3384	90327-3385	90327-3386	90327-3387	90327-3388	90327-3389	90327-3390	90327-3404

Extractor Tool for Picoflex™ Connectors

Connector Series No.	Connector Order No.							
90327	90327-3406	90327-3408	90327-3410	90327-3412	90327-3414	90327-3416	90327-3418	90327-3420
	90327-3426	90327-3451	90327-3452	90327-3453	90327-3454	90327-3455	90327-3456	90327-3457
	90327-3458	90327-3459	90327-3460	90327-3461	90327-3462	90327-3463	90327-3464	90327-3465
	90327-3466	90327-3467	90327-3468	90327-3469	90327-3470	90327-3471	90327-3472	90327-3473
	90327-3474	90327-3475	90327-3476	90327-3477	90327-3478	90327-3479	90327-3480	90327-3481
	90327-3482	90327-3483	90327-3484	90327-3485	90327-3486	90327-3487	90327-3488	90327-3489
	90327-3490	90327-3504	90327-3506	90327-3508	90327-3510	90327-3512	90327-3514	90327-3516
	90327-3518	90327-3520	90327-3526	90327-3551	90327-3552	90327-3553	90327-3554	90327-3555
	90327-3556	90327-3557	90327-3558	90327-3559	90327-3560	90327-3561	90327-3562	90327-3563
	90327-3564	90327-3565	90327-3566	90327-3567	90327-3568	90327-3569	90327-3570	90327-3571
	90327-3572	90327-3573	90327-3574	90327-3575	90327-3576	90327-3577	90327-3578	90327-3579
	90327-3580	90327-3581	90327-3582	90327-3583	90327-3584	90327-3585	90327-3586	90327-3587
	90327-3588	90327-3589	90327-3590					
92315	92315-0401	92315-0402	92315-0403	92315-0404	92315-0405	92315-0406	92315-0407	92315-0408
	92315-0409	92315-0410	92315-0411	92315-0412	92315-0413	92315-0414	92315-0415	92315-0416
	92315-0417	92315-0418	92315-0419	92315-0420	92315-0421	92315-0422	92315-0423	92315-0424
	92315-0425	92315-0426	92315-0427	92315-0428	92315-0429	92315-0430	92315-0431	92315-0432
	92315-0433	92315-0434	92315-0435	92315-0436	92315-0437	92315-0438	92315-0439	92315-0440
	92315-0441	92315-0442	92315-0443	92315-0444	92315-0445	92315-0446	92315-0447	92315-0448
	92315-0449	92315-0450	92315-0451	92315-0452	92315-0453	92315-0454	92315-0455	92315-0456
	92315-0457	92315-0458	92315-0459	92315-0460	92315-0461	92315-0462	92315-0463	92315-0464
	92315-0465	92315-0466	92315-0467	92315-0468	92315-0469	92315-0470	92315-0471	92315-0472
	92315-0473	92315-0474	92315-0475	92315-0476	92315-0477	92315-0478	92315-0479	92315-0480
	92315-0481	92315-0482	92315-0483	92315-0484	92315-0485	92315-0486	92315-0487	92315-0488
	92315-0489	92315-0490	92315-0491	92315-0492	92315-0493	92315-0494	92315-0495	92315-0496
	92315-0497	92315-0498	92315-0499	92315-0601	92315-0602	92315-0603	92315-0604	92315-0605
	92315-0606	92315-0607	92315-0608	92315-0609	92315-0610	92315-0611	92315-0612	92315-0613
	92315-0614	92315-0615	92315-0616	92315-0617	92315-0618	92315-0619	92315-0620	92315-0621
	92315-0622	92315-0623	92315-0624	92315-0625	92315-0626	92315-0627	92315-0628	92315-0629
	92315-0630	92315-0631	92315-0632	92315-0633	92315-0634	92315-0635	92315-0636	92315-0637
	92315-0638	92315-0639	92315-0640	92315-0641	92315-0642	92315-0643	92315-0644	92315-0645
	92315-0646	92315-0647	92315-0648	92315-0649	92315-0650	92315-0651	92315-0652	92315-0653
	92315-0654	92315-0655	92315-0656	92315-0657	92315-0658	92315-0462	92315-0463	92315-0464
	92315-0465	92315-0466	92315-0467	92315-0659	92315-0660	92315-0661	92315-0662	92315-0663
	92315-0664	92315-0659	92315-0665	92315-0666	92315-0667	92315-0668	92315-0669	92315-0670
	92315-0665	92315-0671	92315-0672	92315-0673	92315-0674	92315-0675	92315-0676	92315-0671
	92315-0677	92315-0678	92315-0679	92315-0680	92315-0681	92315-0682	92315-0677	92315-0683
	92315-0684	92315-0685	92315-0686	92315-0687	92315-0688	92315-0683	92315-0689	92315-0690
	92315-0691	92315-0692	92315-0693	92315-0694	92315-0689	92315-0695	92315-0696	92315-0697
	92315-0698	92315-0699	92315-0801	92315-0695	92315-0802	92315-0803	92315-0804	92315-0805
	92315-0806	92315-0807	92315-0802	92315-0808	92315-0809	92315-0810	92315-0811	92315-0812
	92315-0813	92315-0808	92315-0814	92315-0815	92315-0816	92315-0817	92315-0818	92315-0819
	92315-0814	92315-0820	92315-0821	92315-0822	92315-0823	92315-0824	92315-0825	92315-0820
	92315-0826	92315-0827	92315-0828	92315-0829	92315-0830	92315-0831	92315-0826	92315-0832
	92315-0833	92315-0834	92315-0835	92315-0836	92315-0837	92315-0832	92315-0838	92315-0839
	92315-0840	92315-0841	92315-0842	92315-0843	92315-0838	92315-0844	92315-0845	92315-0846
	92315-0847	92315-0848	92315-0849	92315-0844	92315-0850	92315-0851	92315-0852	92315-0853
	92315-0854	92315-0855	92315-0850	92315-0856	92315-0857	92315-0858	92315-0859	92315-0860
	92315-0861	92315-0856	92315-0862	92315-0863	92315-0864	92315-0865	92315-0866	92315-0867
	92315-0862	92315-0868	92315-0869	92315-0870	92315-0871	92315-0872	92315-0873	92315-0868
	92315-0874	92315-0875	92315-0876	92315-0877	92315-0878	92315-0879	92315-0874	92315-0880
	92315-0881	92315-0882	92315-0883	92315-0884	92315-0885	92315-0886	92315-0887	92315-0888
	92315-0889	92315-0890	92315-0891	92315-0892	92315-0893	92315-0894	92315-0895	92315-0896
	92315-0897	92315-0898	92315-0899	92315-1001	92315-1002	92315-1003	92315-1004	92315-1005

Extractor Tool for Picoflex™ Connectors

Connector Series No.	Connector Order No.							
92315	92315-1006	92315-1007	92315-1008	92315-1009	92315-1010	92315-1011	92315-1012	92315-1013
	92315-1014	92315-1015	92315-1016	92315-1017	92315-1018	92315-1019	92315-1020	92315-1021
	92315-1022	92315-1023	92315-1024	92315-1025	92315-1026	92315-1027	92315-1028	92315-1029
	92315-1030	92315-1031	92315-1032	92315-1033	92315-1034	92315-1035	92315-1036	92315-1037
	92315-1038	92315-1039	92315-1040	92315-1041	92315-1042	92315-1043	92315-1044	92315-1045
	92315-1046	92315-1047	92315-1048	92315-1049	92315-1050	92315-1051	92315-1052	92315-1053
	92315-1054	92315-1055	92315-1056	92315-1057	92315-1058	92315-1059	92315-1060	92315-1061
	92315-1062	92315-1063	92315-1064	92315-1065	92315-1066	92315-1067	92315-1068	92315-1069
	92315-1070	92315-1071	92315-1072	92315-1073	92315-1074	92315-1075	92315-1076	92315-1077
	92315-1078	92315-1079	92315-1080	92315-1081	92315-1082	92315-1083	92315-1084	92315-1085
	92315-1086	92315-1087	92315-1088	92315-1089	92315-1090	92315-1091	92315-1092	92315-1093
	92315-1094	92315-1095	92315-1096	92315-1097	92315-1098	92315-1099	92315-1201	92315-1202
	92315-1203	92315-1204	92315-1205	92315-1206	92315-1207	92315-1208	92315-1209	92315-1210
	92315-1211	92315-1212	92315-1213	92315-1214	92315-1215	92315-1216	92315-1217	92315-1218
	92315-1219	92315-1220	92315-1221	92315-1222	92315-1223	92315-1224	92315-1225	92315-1226
	92315-1227	92315-1228	92315-1229	92315-1230	92315-1231	92315-1232	92315-1233	92315-1234
	92315-1235	92315-1236	92315-1237	92315-1238	92315-1239	92315-1240	92315-1241	92315-1242
	92315-1243	92315-1244	92315-1245	92315-1246	92315-1247	92315-1248	92315-1249	92315-1250
	92315-1251	92315-1252	92315-1253	92315-1254	92315-1255	92315-1256	92315-1257	92315-1258
	92315-1259	92315-1260	92315-1261	92315-1262	92315-1263	92315-1264	92315-1265	92315-1266
	92315-1267	92315-1268	92315-1269	92315-1270	92315-1271	92315-1272	92315-1273	92315-1274
	92315-1275	92315-1276	92315-1277	92315-1278	92315-1279	92315-1280	92315-1281	92315-1282
	92315-1283	92315-1284	92315-1285	92315-1286	92315-1287	92315-1288	92315-1289	92315-1290
	92315-1291	92315-1292	92315-1293	92315-1294	92315-1295	92315-1296	92315-1297	92315-1298
	92315-1299	92315-1401	92315-1402	92315-1403	92315-1404	92315-1405	92315-1406	92315-1407
	92315-1408	92315-1409	92315-1410	92315-1411	92315-1412	92315-1413	92315-1414	92315-1415
	92315-1416	92315-1417	92315-1418	92315-1419	92315-1420	92315-1421	92315-1422	92315-1423
	92315-1424	92315-1425	92315-1426	92315-1427	92315-1428	92315-1429	92315-1430	92315-1431
	92315-1432	92315-1433	92315-1434	92315-1435	92315-1436	92315-1437	92315-1438	92315-1439
	92315-1440	92315-1441	92315-1442	92315-1443	92315-1444	92315-1445	92315-1446	92315-1447
	92315-1448	92315-1449	92315-1450	92315-1451	92315-1452	92315-1453	92315-1454	92315-1455
	92315-1456	92315-1457	92315-1458	92315-1459	92315-1460	92315-1461	92315-1462	92315-1463
	92315-1464	92315-1465	92315-1466	92315-1467	92315-1468	92315-1469	92315-1470	92315-1471
	92315-1472	92315-1473	92315-1474	92315-1475	92315-1476	92315-1477	92315-1478	92315-1479
	92315-1480	92315-1481	92315-1482	92315-1483	92315-1484	92315-1485	92315-1486	92315-1487
	92315-1488	92315-1489	92315-1490	92315-1491	92315-1492	92315-1493	92315-1494	92315-1495
	92315-1496	92315-1497	92315-1498	92315-1499	92315-1601	92315-1602	92315-1603	92315-1604
	92315-1605	92315-1606	92315-1607	92315-1608	92315-1609	92315-1610	92315-1611	92315-1612
	92315-1613	92315-1614	92315-1615	92315-1616	92315-1617	92315-1618	92315-1619	92315-1620
	92315-1621	92315-1622	92315-1623	92315-1624	92315-1625	92315-1626	92315-1627	92315-1628
	92315-1629	92315-1630	92315-1631	92315-1632	92315-1633	92315-1634	92315-1635	92315-1636
	92315-1637	92315-1638	92315-1639	92315-1640	92315-1641	92315-1642	92315-1643	92315-1644
	92315-1645	92315-1646	92315-1647	92315-1648	92315-1649	92315-1650	92315-1651	92315-1652
	92315-1653	92315-1654	92315-1655	92315-1656	92315-1657	92315-1658	92315-1659	92315-1660
	92315-1661	92315-1662	92315-1663	92315-1664	92315-1665	92315-1666	92315-1667	92315-1668
	92315-1669	92315-1670	92315-1671	92315-1672	92315-1673	92315-1674	92315-1675	92315-1676
	92315-1677	92315-1678	92315-1679	92315-1680	92315-1681	92315-1682	92315-1683	92315-1684
	92315-1685	92315-1686	92315-1687	92315-1688	92315-1689	92315-1690	92315-1691	92315-1692
	92315-1693	92315-1694	92315-1695	92315-1696	92315-1697	92315-1698	92315-1699	92315-1801
	92315-1802	92315-1803	92315-1804	92315-1805	92315-1806	92315-1807	92315-1808	92315-1809
	92315-1810	92315-1811	92315-1812	92315-1813	92315-1814	92315-1815	92315-1816	92315-1817
	92315-1818	92315-1819	92315-1820	92315-1821	92315-1822	92315-1823	92315-1824	92315-1825
	92315-1826	92315-1827	92315-1828	92315-1829	92315-1830	92315-1831	92315-1832	92315-1833
	92315-1834	92315-1835	92315-1836	92315-1837	92315-1838	92315-1839	92315-1840	92315-1841

Extractor Tool for Picoflex™ Connectors

Extractor Tool for Picoflex™ Connectors

Connector Series No.	Connector Order No.							
92315	92315-2678	92315-2679	92315-2680	92315-2681	92315-2682	92315-2683	92315-2684	92315-2685
	92315-2686	92315-2687	92315-2688	92315-2689	92315-2690	92315-2691	92315-2692	92315-2693
	92315-2694	92315-2695	92315-2696	92315-2697	92315-2698	92315-2699		
92316	92316-0401	92316-0402	92316-0403	92316-0404	92316-0405	92316-0406	92316-0407	92316-0408
	92316-0409	92316-0410	92316-0411	92316-0412	92316-0413	92316-0414	92316-0415	92316-0416
	92316-0417	92316-0418	92316-0419	92316-0420	92316-0421	92316-0422	92316-0423	92316-0424
	92316-0425	92316-0426	92316-0427	92316-0428	92316-0429	92316-0430	92316-0431	92316-0432
	92316-0433	92316-0434	92316-0435	92316-0436	92316-0437	92316-0438	92316-0439	92316-0440
	92316-0441	92316-0442	92316-0443	92316-0444	92316-0445	92316-0446	92316-0447	92316-0448
	92316-0449	92316-0450	92316-0451	92316-0452	92316-0453	92316-0454	92316-0455	92316-0456
	92316-0457	92316-0458	92316-0459	92316-0460	92316-0461	92316-0462	92316-0463	92316-0464
	92316-0465	92316-0466	92316-0467	92316-0468	92316-0469	92316-0470	92316-0471	92316-0472
	92316-0473	92316-0474	92316-0475	92316-0476	92316-0477	92316-0478	92316-0479	92316-0480
	92316-0481	92316-0482	92316-0483	92316-0484	92316-0485	92316-0486	92316-0487	92316-0488
	92316-0489	92316-0490	92316-0491	92316-0492	92316-0493	92316-0494	92316-0495	92316-0496
	92316-0497	92316-0498	92316-0499	92316-0601	92316-0602	92316-0603	92316-0604	92316-0605
	92316-0606	92316-0607	92316-0608	92316-0609	92316-0610	92316-0611	92316-0612	92316-0613
	92316-0614	92316-0615	92316-0616	92316-0617	92316-0618	92316-0619	92316-0620	92316-0621
	92316-0622	92316-0623	92316-0624	92316-0625	92316-0626	92316-0627	92316-0628	92316-0629
	92316-0630	92316-0631	92316-0632	92316-0633	92316-0634	92316-0635	92316-0636	92316-0637
	92316-0638	92316-0639	92316-0640	92316-0641	92316-0642	92316-0643	92316-0644	92316-0645
	92316-0646	92316-0647	92316-0648	92316-0649	92316-0650	92316-0651	92316-0652	92316-0653
	92316-0654	92316-0655	92316-0656	92316-0657	92316-0658	92316-0659	92316-0660	92316-0661
	92316-0662	92316-0663	92316-0664	92316-0665	92316-0666	92316-0667	92316-0668	92316-0669
	92316-0670	92316-0671	92316-0672	92316-0673	92316-0674	92316-0675	92316-0676	92316-0677
	92316-0678	92316-0679	92316-0680	92316-0681	92316-0682	92316-0683	92316-0684	92316-0685
	92316-0686	92316-0687	92316-0688	92316-0689	92316-0690	92316-0691	92316-0692	92316-0693
	92316-0694	92316-0695	92316-0696	92316-0697	92316-0698	92316-0699	92316-0801	92316-0802
	92316-0803	92316-0804	92316-0805	92316-0806	92316-0807	92316-0808	92316-0809	92316-0810
	92316-0811	92316-0812	92316-0813	92316-0814	92316-0815	92316-0816	92316-0817	92316-0818
	92316-0819	92316-0820	92316-0821	92316-0822	92316-0823	92316-0824	92316-0825	92316-0826
	92316-0827	92316-0828	92316-0829	92316-0830	92316-0831	92316-0832	92316-0833	92316-0834
	92316-0835	92316-0836	92316-0837	92316-0838	92316-0839	92316-0840	92316-0841	92316-0842
	92316-0843	92316-0844	92316-0845	92316-0846	92316-0847	92316-0848	92316-0849	92316-0850
	92316-0851	92316-0852	92316-0853	92316-0854	92316-0855	92316-0856	92316-0857	92316-0858
	92316-0859	92316-0860	92316-0861	92316-0862	92316-0863	92316-0864	92316-0865	92316-0866
	92316-0867	92316-0868	92316-0869	92316-0870	92316-0871	92316-0872	92316-0873	92316-0874
	92316-0875	92316-0876	92316-0877	92316-0878	92316-0879	92316-0880	92316-0881	92316-0882
	92316-0883	92316-0884	92316-0885	92316-0886	92316-0887	92316-0888	92316-0889	92316-0890
	92316-0891	92316-0892	92316-0893	92316-0894	92316-0895	92316-0896	92316-0897	92316-0898
	92316-0899	92316-1001	92316-1002	92316-1003	92316-1004	92316-1005	92316-1006	92316-1007
	92316-1008	92316-1009	92316-1010	92316-1011	92316-1012	92316-1013	92316-1014	92316-1015
	92316-1016	92316-1017	92316-1018	92316-1019	92316-1020	92316-1021	92316-1022	92316-1023
	92316-1024	92316-1025	92316-1026	92316-1027	92316-1028	92316-1029	92316-1030	92316-1031
	92316-1032	92316-1033	92316-1034	92316-1035	92316-1036	92316-1037	92316-1038	92316-1039
	92316-1040	92316-1041	92316-1042	92316-1043	92316-1044	92316-1045	92316-1046	92316-1047
	92316-1048	92316-1049	92316-1050	92316-1051	92316-1052	92316-1053	92316-1054	92316-1055
	92316-1056	92316-1057	92316-1058	92316-1059	92316-1060	92316-1061	92316-1062	92316-1063
	92316-1064	92316-1065	92316-1066	92316-1067	92316-1068	92316-1069	92316-1070	92316-1071
	92316-1072	92316-1073	92316-1074	92316-1075	92316-1076	92316-1077	92316-1078	92316-1079
	92316-1080	92316-1081	92316-1082	92316-1083	92316-1084	92316-1085	92316-1086	92316-1087
	92316-1088	92316-1089	92316-1090	92316-1091	92316-1092	92316-1093	92316-1094	92316-1095
	92316-1096	92316-1097	92316-1098	92316-1099	92316-1201	92316-1202	92316-1203	92316-1204
	92316-1205	92316-1206	92316-1207	92316-1208	92316-1209	92316-1210	92316-1211	92316-1212

Extractor Tool for Picoflex™ Connectors

Connector Series No.	Connector Order No.							
92316-1213	92316-1214	92316-1215	92316-1216	92316-1217	92316-1218	92316-1219	92316-1220	
92316-1221	92316-1222	92316-1223	92316-1224	92316-1225	92316-1226	92316-1227	92316-1228	
92316-1229	92316-1230	92316-1231	92316-1232	92316-1233	92316-1234	92316-1235	92316-1236	
92316-1237	92316-1238	92316-1239	92316-1240	92316-1241	92316-1242	92316-1243	92316-1244	
92316-1245	92316-1246	92316-1247	92316-1248	92316-1249	92316-1250	92316-1251	92316-1252	
92316-1253	92316-1254	92316-1255	92316-1256	92316-1257	92316-1258	92316-1259	92316-1260	
92316-1261	92316-1262	92316-1263	92316-1264	92316-1265	92316-1266	92316-1267	92316-1268	
92316-1269	92316-1270	92316-1271	92316-1272	92316-1273	92316-1274	92316-1275	92316-1276	
92316-1277	92316-1278	92316-1279	92316-1280	92316-1281	92316-1282	92316-1283	92316-1284	
92316-1285	92316-1286	92316-1287	92316-1288	92316-1289	92316-1290	92316-1291	92316-1292	
92316-1293	92316-1294	92316-1295	92316-1296	92316-1297	92316-1298	92316-1299	92316-1401	
92316-1402	92316-1403	92316-1404	92316-1405	92316-1406	92316-1407	92316-1408	92316-1409	
92316-1410	92316-1411	92316-1412	92316-1413	92316-1414	92316-1415	92316-1416	92316-1417	
92316-1418	92316-1419	92316-1420	92316-1421	92316-1422	92316-1423	92316-1424	92316-1425	
92316-1426	92316-1427	92316-1428	92316-1429	92316-1430	92316-1431	92316-1432	92316-1433	
92316-1434	92316-1435	92316-1436	92316-1437	92316-1438	92316-1439	92316-1440	92316-1441	
92316-1442	92316-1443	92316-1444	92316-1445	92316-1446	92316-1447	92316-1448	92316-1449	
92316-1450	92316-1451	92316-1452	92316-1453	92316-1454	92316-1455	92316-1456	92316-1457	
92316-1458	92316-1459	92316-1460	92316-1461	92316-1462	92316-1463	92316-1464	92316-1465	
92316-1466	92316-1467	92316-1468	92316-1469	92316-1470	92316-1471	92316-1472	92316-1473	
92316-1474	92316-1475	92316-1476	92316-1477	92316-1478	92316-1479	92316-1480	92316-1481	
92316-1482	92316-1483	92316-1484	92316-1485	92316-1486	92316-1487	92316-1488	92316-1489	
92316-1490	92316-1491	92316-1492	92316-1493	92316-1494	92316-1495	92316-1496	92316-1497	
92316-1498	92316-1499	92316-1601	92316-1602	92316-1603	92316-1604	92316-1605	92316-1606	
92316-1607	92316-1608	92316-1609	92316-1610	92316-1611	92316-1612	92316-1613	92316-1614	
92316-1615	92316-1616	92316-1617	92316-1618	92316-1619	92316-1620	92316-1621	92316-1622	
92316-1623	92316-1624	92316-1625	92316-1626	92316-1627	92316-1628	92316-1629	92316-1630	
92316-1631	92316-1632	92316-1633	92316-1634	92316-1635	92316-1636	92316-1637	92316-1638	
92316-1639	92316-1640	92316-1641	92316-1642	92316-1643	92316-1644	92316-1645	92316-1646	
92316-1647	92316-1648	92316-1649	92316-1650	92316-1651	92316-1652	92316-1653	92316-1654	
92316-1655	92316-1656	92316-1657	92316-1658	92316-1659	92316-1660	92316-1661	92316-1662	
92316-1663	92316-1664	92316-1665	92316-1666	92316-1667	92316-1668	92316-1669	92316-1670	
92316-1671	92316-1672	92316-1673	92316-1674	92316-1675	92316-1676	92316-1677	92316-1678	
92316-1679	92316-1680	92316-1681	92316-1682	92316-1683	92316-1684	92316-1685	92316-1686	
92316-1687	92316-1688	92316-1689	92316-1690	92316-1691	92316-1692	92316-1693	92316-1694	
92316-1695	92316-1696	92316-1697	92316-1698	92316-1699	92316-1801	92316-1802	92316-1803	
92316-1804	92316-1805	92316-1806	92316-1807	92316-1808	92316-1809	92316-1810	92316-1811	
92316-1812	92316-1813	92316-1814	92316-1815	92316-1816	92316-1817	92316-1818	92316-1819	
92316-1820	92316-1821	92316-1822	92316-1823	92316-1824	92316-1825	92316-1826	92316-1827	
92316-1828	92316-1829	92316-1830	92316-1831	92316-1832	92316-1833	92316-1834	92316-1835	
92316-1836	92316-1837	92316-1838	92316-1839	92316-1840	92316-1841	92316-1842	92316-1843	
92316-1844	92316-1845	92316-1846	92316-1847	92316-1848	92316-1849	92316-1850	92316-1851	
92316-1852	92316-1853	92316-1854	92316-1855	92316-1856	92316-1857	92316-1858	92316-1859	
92316-1860	92316-1861	92316-1862	92316-1863	92316-1864	92316-1865	92316-1866	92316-1867	
92316-1868	92316-1869	92316-1870	92316-1871	92316-1872	92316-1873	92316-1874	92316-1875	
92316-1876	92316-1877	92316-1878	92316-1879	92316-1880	92316-1881	92316-1882	92316-1883	
92316-1884	92316-1885	92316-1886	92316-1887	92316-1888	92316-1889	92316-1890	92316-1891	
92316-1892	92316-1893	92316-1894	92316-1895	92316-1896	92316-1897	92316-1898	92316-1899	
92316-2001	92316-2002	92316-2003	92316-2004	92316-2005	92316-2006	92316-2007	92316-2008	
92316-2009	92316-2010	92316-2011	92316-2012	92316-2013	92316-2014	92316-2015	92316-2016	
92316-2017	92316-2018	92316-2019	92316-2020	92316-2021	92316-2022	92316-2023	92316-2024	
92316-2025	92316-2026	92316-2027	92316-2028	92316-2029	92316-2030	92316-2031	92316-2032	
92316-2033	92316-2034	92316-2035	92316-2036	92316-2037	92316-2038	92316-2039	92316-2040	
92316-2041	92316-2042	92316-2043	92316-2044	92316-2045	92316-2046	92316-2047	92316-2048	

Extractor Tool for Picoflex™ Connectors

Connector Series No.	Connector Order No.							
92316	92316-2049	92316-2050	92316-2051	92316-2052	92316-2053	92316-2054	92316-2055	92316-2056
	92316-2057	92316-2058	92316-2059	92316-2060	92316-2061	92316-2062	92316-2063	92316-2064
	92316-2065	92316-2066	92316-2067	92316-2068	92316-2069	92316-2070	92316-2071	92316-2072
	92316-2073	92316-2074	92316-2075	92316-2076	92316-2077	92316-2078	92316-2079	92316-2080
	92316-2081	92316-2082	92316-2083	92316-2084	92316-2085	92316-2086	92316-2087	92316-2088
	92316-2089	92316-2090	92316-2091	92316-2092	92316-2093	92316-2094	92316-2095	92316-2096
	92316-2097	92316-2098	92316-2099	92316-2201	92316-2202	92316-2203	92316-2204	92316-2205
	92316-2206	92316-2207	92316-2208	92316-2209	92316-2210	92316-2211	92316-2212	92316-2213
	92316-2214	92316-2215	92316-2216	92316-2217	92316-2218	92316-2219	92316-2220	92316-2221
	92316-2222	92316-2223	92316-2224	92316-2225	92316-2226	92316-2227	92316-2228	92316-2229
	92316-2230	92316-2231	92316-2232	92316-2233	92316-2234	92316-2235	92316-2236	92316-2237
	92316-2238	92316-2239	92316-2240	92316-2241	92316-2242	92316-2243	92316-2244	92316-2245
	92316-2246	92316-2247	92316-2248	92316-2249	92316-2250	92316-2251	92316-2252	92316-2253
	92316-2254	92316-2255	92316-2256	92316-2257	92316-2258	92316-2259	92316-2260	92316-2261
	92316-2262	92316-2263	92316-2264	92316-2265	92316-2266	92316-2267	92316-2268	92316-2269
	92316-2270	92316-2271	92316-2272	92316-2273	92316-2274	92316-2275	92316-2276	92316-2277
	92316-2278	92316-2279	92316-2280	92316-2281	92316-2282	92316-2283	92316-2284	92316-2285
	92316-2286	92316-2287	92316-2288	92316-2289	92316-2290	92316-2291	92316-2292	92316-2293
	92316-2294	92316-2295	92316-2296	92316-2297	92316-2298	92316-2299	92316-2401	92316-2402
	92316-2403	92316-2404	92316-2405	92316-2406	92316-2407	92316-2408	92316-2409	92316-2410
	92316-2411	92316-2412	92316-2413	92316-2414	92316-2415	92316-2416	92316-2417	92316-2418
	92316-2419	92316-2420	92316-2421	92316-2422	92316-2423	92316-2424	92316-2425	92316-2426
	92316-2427	92316-2428	92316-2429	92316-2430	92316-2431	92316-2432	92316-2433	92316-2434
	92316-2435	92316-2436	92316-2437	92316-2438	92316-2439	92316-2440	92316-2441	92316-2442
	92316-2443	92316-2444	92316-2445	92316-2446	92316-2447	92316-2448	92316-2449	92316-2450
	92316-2451	92316-2452	92316-2453	92316-2454	92316-2455	92316-2456	92316-2457	92316-2458
	92316-2459	92316-2460	92316-2461	92316-2462	92316-2463	92316-2464	92316-2465	92316-2466
	92316-2467	92316-2468	92316-2469	92316-2470	92316-2471	92316-2472	92316-2473	92316-2474
	92316-2475	92316-2476	92316-2477	92316-2478	92316-2479	92316-2480	92316-2481	92316-2482
	92316-2483	92316-2484	92316-2485	92316-2486	92316-2487	92316-2488	92316-2489	92316-2490
	92316-2491	92316-2492	92316-2493	92316-2494	92316-2495	92316-2496	92316-2497	92316-2498
	92316-2499	92316-2601	92316-2602	92316-2603	92316-2604	92316-2605	92316-2606	92316-2607
	92316-2608	92316-2609	92316-2610	92316-2611	92316-2612	92316-2613	92316-2614	92316-2615
	92316-2616	92316-2617	92316-2618	92316-2619	92316-2620	92316-2621	92316-2622	92316-2623
	92316-2624	92316-2625	92316-2626	92316-2627	92316-2628	92316-2629	92316-2630	92316-2631
	92316-2632	92316-2633	92316-2634	92316-2635	92316-2636	92316-2637	92316-2638	92316-2639
	92316-2640	92316-2641	92316-2642	92316-2643	92316-2644	92316-2645	92316-2646	92316-2647
	92316-2648	92316-2649	92316-2650	92316-2651	92316-2652	92316-2653	92316-2654	92316-2655
	92316-2656	92316-2657	92316-2658	92316-2659	92316-2660	92316-2661	92316-2662	92316-2663
	92316-2664	92316-2665	92316-2666	92316-2667	92316-2668	92316-2669	92316-2670	92316-2671
	92316-2672	92316-2673	92316-2674	92316-2675	92316-2676	92316-2677	92316-2678	92316-2679
	92316-2680	92316-2681	92316-2682	92316-2683	92316-2684	92316-2685	92316-2686	92316-2687
	92316-2688	92316-2689	92316-2690	92316-2691	92316-2692	92316-2693	92316-2694	92316-2695
	92316-2696	92316-2697	92316-2698	92316-2699				
92317	92317-0401	92317-0402	92317-0403	92317-0404	92317-0405	92317-0406	92317-0407	92317-0408
	92317-0409	92317-0410	92317-0411	92317-0412	92317-0413	92317-0414	92317-0415	92317-0416
	92317-0417	92317-0418	92317-0419	92317-0420	92317-0421	92317-0422	92317-0423	92317-0424
	92317-0425	92317-0426	92317-0427	92317-0428	92317-0429	92317-0430	92317-0431	92317-0432
	92317-0433	92317-0434	92317-0435	92317-0436	92317-0437	92317-0438	92317-0439	92317-0440
	92317-0441	92317-0442	92317-0443	92317-0444	92317-0445	92317-0446	92317-0447	92317-0448
	92317-0449	92317-0450	92317-0451	92317-0452	92317-0453	92317-0454	92317-0455	92317-0456
	92317-0457	92317-0458	92317-0459	92317-0460	92317-0461	92317-0462	92317-0463	92317-0464
	92317-0465	92317-0466	92317-0467	92317-0468	92317-0469	92317-0470	92317-0471	92317-0472
	92317-0473	92317-0474	92317-0475	92317-0476	92317-0477	92317-0478	92317-0479	92317-0480

Extractor Tool for Picoflex™ Connectors

Connector Series No.	Connector Order No.							
92317	92317-0481	92317-0482	92317-0483	92317-0484	92317-0485	92317-0486	92317-0487	92317-0488
	92317-0489	92317-0490	92317-0491	92317-0492	92317-0493	92317-0494	92317-0495	92317-0496
	92317-0497	92317-0498	92317-0499	92317-0601	92317-0602	92317-0603	92317-0604	92317-0605
	92317-0606	92317-0607	92317-0608	92317-0609	92317-0610	92317-0611	92317-0612	92317-0613
	92317-0614	92317-0615	92317-0616	92317-0617	92317-0618	92317-0619	92317-0620	92317-0621
	92317-0622	92317-0623	92317-0624	92317-0625	92317-0626	92317-0627	92317-0628	92317-0629
	92317-0630	92317-0631	92317-0632	92317-0633	92317-0634	92317-0635	92317-0636	92317-0637
	92317-0638	92317-0639	92317-0640	92317-0641	92317-0642	92317-0643	92317-0644	92317-0645
	92317-0646	92317-0647	92317-0648	92317-0649	92317-0650	92317-0651	92317-0652	92317-0653
	92317-0654	92317-0655	92317-0656	92317-0657	92317-0658	92317-0659	92317-0660	92317-0661
	92317-0662	92317-0663	92317-0664	92317-0665	92317-0666	92317-0667	92317-0668	92317-0669
	92317-0670	92317-0671	92317-0672	92317-0673	92317-0674	92317-0675	92317-0676	92317-0677
	92317-0678	92317-0679	92317-0680	92317-0681	92317-0682	92317-0683	92317-0684	92317-0685
	92317-0686	92317-0687	92317-0688	92317-0689	92317-0690	92317-0691	92317-0692	92317-0693
	92317-0694	92317-0695	92317-0696	92317-0697	92317-0698	92317-0699	92317-0801	92317-0802
	92317-0803	92317-0804	92317-0805	92317-0806	92317-0807	92317-0808	92317-0809	92317-0810
	92317-0811	92317-0812	92317-0813	92317-0814	92317-0815	92317-0816	92317-0817	92317-0818
	92317-0819	92317-0820	92317-0821	92317-0822	92317-0823	92317-0824	92317-0825	92317-0826
	92317-0827	92317-0828	92317-0829	92317-0830	92317-0831	92317-0832	92317-0833	92317-0834
	92317-0835	92317-0836	92317-0837	92317-0838	92317-0839	92317-0840	92317-0841	92317-0842
	92317-0843	92317-0844	92317-0845	92317-0846	92317-0847	92317-0848	92317-0849	92317-0850
	92317-0851	92317-0852	92317-0853	92317-0854	92317-0855	92317-0856	92317-0857	92317-0858
	92317-0859	92317-0860	92317-0861	92317-0862	92317-0863	92317-0864	92317-0865	92317-0866
	92317-0867	92317-0868	92317-0869	92317-0870	92317-0871	92317-0872	92317-0873	92317-0874
	92317-0875	92317-0876	92317-0877	92317-0878	92317-0879	92317-0880	92317-0881	92317-0882
	92317-0883	92317-0884	92317-0885	92317-0886	92317-0887	92317-0888	92317-0889	92317-0890
	92317-0891	92317-0892	92317-0893	92317-0894	92317-0895	92317-0896	92317-0897	92317-0898
	92317-0899	92317-1001	92317-1002	92317-1003	92317-1004	92317-1005	92317-1006	92317-1007
	92317-1008	92317-1009	92317-1010	92317-1011	92317-1012	92317-1013	92317-1014	92317-1015
	92317-1016	92317-1017	92317-1018	92317-1019	92317-1020	92317-1021	92317-1022	92317-1023
	92317-1024	92317-1025	92317-1026	92317-1027	92317-1028	92317-1029	92317-1030	92317-1031
	92317-1032	92317-1033	92317-1034	92317-1035	92317-1036	92317-1037	92317-1038	92317-1039
	92317-1040	92317-1041	92317-1042	92317-1043	92317-1044	92317-1045	92317-1046	92317-1047
	92317-1048	92317-1049	92317-1050	92317-1051	92317-1052	92317-1053	92317-1054	92317-1055
	92317-1056	92317-1057	92317-1058	92317-1059	92317-1060	92317-1061	92317-1062	92317-1063
	92317-1064	92317-1065	92317-1066	92317-1067	92317-1068	92317-1069	92317-1070	92317-1071
	92317-1072	92317-1073	92317-1074	92317-1075	92317-1076	92317-1077	92317-1078	92317-1079
	92317-1080	92317-1081	92317-1082	92317-1083	92317-1084	92317-1085	92317-1086	92317-1087
	92317-1088	92317-1089	92317-1090	92317-1091	92317-1092	92317-1093	92317-1094	92317-1095
	92317-1096	92317-1097	92317-1098	92317-1099	92317-1201	92317-1202	92317-1203	92317-1204
	92317-1205	92317-1206	92317-1207	92317-1208	92317-1209	92317-1210	92317-1211	92317-1212
	92317-1213	92317-1214	92317-1215	92317-1216	92317-1217	92317-1218	92317-1219	92317-1220
	92317-1221	92317-1222	92317-1223	92317-1224	92317-1225	92317-1226	92317-1227	92317-1228
	92317-1229	92317-1230	92317-1231	92317-1232	92317-1233	92317-1234	92317-1235	92317-1236
	92317-1237	92317-1238	92317-1239	92317-1240	92317-1241	92317-1242	92317-1243	92317-1244
	92317-1245	92317-1246	92317-1247	92317-1248	92317-1249	92317-1250	92317-1251	92317-1252
	92317-1253	92317-1254	92317-1255	92317-1256	92317-1257	92317-1258	92317-1259	92317-1260
	92317-1261	92317-1262	92317-1263	92317-1264	92317-1265	92317-1266	92317-1267	92317-1268
	92317-1269	92317-1270	92317-1271	92317-1272	92317-1273	92317-1274	92317-1275	92317-1276
	92317-1277	92317-1278	92317-1279	92317-1280	92317-1281	92317-1282	92317-1283	92317-1284
	92317-1285	92317-1286	92317-1287	92317-1288	92317-1289	92317-1290	92317-1291	92317-1292
	92317-1293	92317-1294	92317-1295	92317-1296	92317-1297	92317-1298	92317-1299	92317-1401
	92317-1402	92317-1403	92317-1404	92317-1405	92317-1406	92317-1407	92317-1408	92317-1409
	92317-1410	92317-1411	92317-1412	92317-1413	92317-1414	92317-1415	92317-1416	92317-1417

Extractor Tool for Picoflex™ Connectors

Connector Series No.	Connector Order No.							
92317	92317-1418	92317-1419	92317-1420	92317-1421	92317-1422	92317-1423	92317-1424	92317-1425
	92317-1426	92317-1427	92317-1428	92317-1429	92317-1430	92317-1431	92317-1432	92317-1433
	92317-1434	92317-1435	92317-1436	92317-1437	92317-1438	92317-1439	92317-1440	92317-1441
	92317-1442	92317-1443	92317-1444	92317-1445	92317-1446	92317-1447	92317-1448	92317-1449
	92317-1450	92317-1451	92317-1452	92317-1453	92317-1454	92317-1455	92317-1456	92317-1457
	92317-1458	92317-1459	92317-1460	92317-1461	92317-1462	92317-1463	92317-1464	92317-1465
	92317-1466	92317-1467	92317-1468	92317-1469	92317-1470	92317-1471	92317-1472	92317-1473
	92317-1474	92317-1475	92317-1476	92317-1477	92317-1478	92317-1479	92317-1480	92317-1481
	92317-1482	92317-1483	92317-1484	92317-1485	92317-1486	92317-1487	92317-1488	92317-1489
	92317-1490	92317-1491	92317-1492	92317-1493	92317-1494	92317-1495	92317-1496	92317-1497
	92317-1498	92317-1499	92317-1601	92317-1602	92317-1603	92317-1604	92317-1605	92317-1606
	92317-1607	92317-1608	92317-1609	92317-1610	92317-1611	92317-1612	92317-1613	92317-1614
	92317-1615	92317-1616	92317-1617	92317-1618	92317-1619	92317-1620	92317-1621	92317-1622
	92317-1623	92317-1624	92317-1625	92317-1626	92317-1627	92317-1628	92317-1629	92317-1630
	92317-1631	92317-1632	92317-1633	92317-1634	92317-1635	92317-1636	92317-1637	92317-1638
	92317-1639	92317-1640	92317-1641	92317-1642	92317-1643	92317-1644	92317-1645	92317-1646
	92317-1647	92317-1648	92317-1649	92317-1650	92317-1651	92317-1652	92317-1653	92317-1654
	92317-1655	92317-1656	92317-1657	92317-1658	92317-1659	92317-1660	92317-1661	92317-1662
	92317-1663	92317-1664	92317-1665	92317-1666	92317-1667	92317-1668	92317-1669	92317-1670
	92317-1671	92317-1672	92317-1673	92317-1674	92317-1675	92317-1676	92317-1677	92317-1678
	92317-1679	92317-1680	92317-1681	92317-1682	92317-1683	92317-1684	92317-1685	92317-1686
	92317-1687	92317-1688	92317-1689	92317-1690	92317-1691	92317-1692	92317-1693	92317-1694
	92317-1695	92317-1696	92317-1697	92317-1698	92317-1699	92317-1801	92317-1802	92317-1803
	92317-1804	92317-1805	92317-1806	92317-1807	92317-1808	92317-1809	92317-1810	92317-1811
	92317-1812	92317-1813	92317-1814	92317-1815	92317-1816	92317-1817	92317-1818	92317-1819
	92317-1820	92317-1821	92317-1822	92317-1823	92317-1824	92317-1825	92317-1826	92317-1827
	92317-1828	92317-1829	92317-1830	92317-1831	92317-1832	92317-1833	92317-1834	92317-1835
	92317-1836	92317-1837	92317-1838	92317-1839	92317-1840	92317-1841	92317-1842	92317-1843
	92317-1844	92317-1845	92317-1846	92317-1847	92317-1848	92317-1849	92317-1850	92317-1851
	92317-1852	92317-1853	92317-1854	92317-1855	92317-1856	92317-1857	92317-1858	92317-1859
	92317-1860	92317-1861	92317-1862	92317-1863	92317-1864	92317-1865	92317-1866	92317-1867
	92317-1868	92317-1869	92317-1870	92317-1871	92317-1872	92317-1873	92317-1874	92317-1875
	92317-1876	92317-1877	92317-1878	92317-1879	92317-1880	92317-1881	92317-1882	92317-1883
	92317-1884	92317-1885	92317-1886	92317-1887	92317-1888	92317-1889	92317-1890	92317-1891
	92317-1892	92317-1893	92317-1894	92317-1895	92317-1896	92317-1897	92317-1898	92317-1899
	92317-2001	92317-2002	92317-2003	92317-2004	92317-2005	92317-2006	92317-2007	92317-2008
	92317-2009	92317-2010	92317-2011	92317-2012	92317-2013	92317-2014	92317-2015	92317-2016
	92317-2017	92317-2018	92317-2019	92317-2020	92317-2021	92317-2022	92317-2023	92317-2024
	92317-2025	92317-2026	92317-2027	92317-2028	92317-2029	92317-2030	92317-2031	92317-2032
	92317-2033	92317-2034	92317-2035	92317-2036	92317-2037	92317-2038	92317-2039	92317-2040
	92317-2041	92317-2042	92317-2043	92317-2044	92317-2045	92317-2046	92317-2047	92317-2048
	92317-2049	92317-2050	92317-2051	92317-2052	92317-2053	92317-2054	92317-2055	92317-2056
	92317-2057	92317-2058	92317-2059	92317-2060	92317-2061	92317-2062	92317-2063	92317-2064
	92317-2065	92317-2066	92317-2067	92317-2068	92317-2069	92317-2070	92317-2071	92317-2072
	92317-2073	92317-2074	92317-2075	92317-2076	92317-2077	92317-2078	92317-2079	92317-2080
	92317-2081	92317-2082	92317-2083	92317-2084	92317-2085	92317-2086	92317-2087	92317-2088
	92317-2089	92317-2090	92317-2091	92317-2092	92317-2093	92317-2094	92317-2095	92317-2096
	92317-2097	92317-2098	92317-2099	92317-2201	92317-2202	92317-2203	92317-2204	92317-2205
	92317-2206	92317-2207	92317-2208	92317-2209	92317-2210	92317-2211	92317-2212	92317-2213
	92317-2214	92317-2215	92317-2216	92317-2217	92317-2218	92317-2219	92317-2220	92317-2221
	92317-2222	92317-2223	92317-2224	92317-2225	92317-2226	92317-2227	92317-2228	92317-2229
	92317-2230	92317-2231	92317-2232	92317-2233	92317-2234	92317-2235	92317-2236	92317-2237
	92317-2238	92317-2239	92317-2240	92317-2241	92317-2242	92317-2243	92317-2244	92317-2245
	92317-2246	92317-2247	92317-2248	92317-2249	92317-2250	92317-2251	92317-2252	92317-2253

Extractor Tool for Picoflex™ Connectors

Extractor Tool for Picoflex™ Connectors

Extractor Tool for Picoflex™ Connectors

Connector Series No.	Connector Order No.							
92318	92318-1623	92318-1624	92318-1625	92318-1626	92318-1627	92318-1628	92318-1629	92318-1630
	92318-1631	92318-1632	92318-1633	92318-1634	92318-1635	92318-1636	92318-1637	92318-1638
	92318-1639	92318-1640	92318-1641	92318-1642	92318-1643	92318-1644	92318-1645	92318-1646
	92318-1647	92318-1648	92318-1649	92318-1650	92318-1651	92318-1652	92318-1653	92318-1654
	92318-1655	92318-1656	92318-1657	92318-1658	92318-1659	92318-1660	92318-1661	92318-1662
	92318-1663	92318-1664	92318-1665	92318-1666	92318-1667	92318-1668	92318-1669	92318-1670
	92318-1671	92318-1672	92318-1673	92318-1674	92318-1675	92318-1676	92318-1677	92318-1678
	92318-1679	92318-1680	92318-1681	92318-1682	92318-1683	92318-1684	92318-1685	92318-1686
	92318-1687	92318-1688	92318-1689	92318-1690	92318-1691	92318-1692	92318-1693	92318-1694
	92318-1695	92318-1696	92318-1697	92318-1698	92318-1699	92318-1801	92318-1802	92318-1803
	92318-1804	92318-1805	92318-1806	92318-1807	92318-1808	92318-1809	92318-1810	92318-1811
	92318-1812	92318-1813	92318-1814	92318-1815	92318-1816	92318-1817	92318-1818	92318-1819
	92318-1820	92318-1821	92318-1822	92318-1823	92318-1824	92318-1825	92318-1826	92318-1827
	92318-1828	92318-1829	92318-1830	92318-1831	92318-1832	92318-1833	92318-1834	92318-1835
	92318-1836	92318-1837	92318-1838	92318-1839	92318-1840	92318-1841	92318-1842	92318-1843
	92318-1844	92318-1845	92318-1846	92318-1847	92318-1848	92318-1849	92318-1850	92318-1851
	92318-1852	92318-1853	92318-1854	92318-1855	92318-1856	92318-1857	92318-1858	92318-1859
	92318-1860	92318-1861	92318-1862	92318-1863	92318-1864	92318-1865	92318-1866	92318-1867
	92318-1868	92318-1869	92318-1870	92318-1871	92318-1872	92318-1873	92318-1874	92318-1875
	92318-1876	92318-1877	92318-1878	92318-1879	92318-1880	92318-1881	92318-1882	92318-1883
	92318-1884	92318-1885	92318-1886	92318-1887	92318-1888	92318-1889	92318-1890	92318-1891
	92318-1892	92318-1893	92318-1894	92318-1895	92318-1896	92318-1897	92318-1898	92318-1899
	92318-2001	92318-2002	92318-2003	92318-2004	92318-2005	92318-2006	92318-2007	92318-2008
	92318-2009	92318-2010	92318-2011	92318-2012	92318-2013	92318-2014	92318-2015	92318-2016
	92318-2017	92318-2018	92318-2019	92318-2020	92318-2021	92318-2022	92318-2023	92318-2024
	92318-2025	92318-2026	92318-2027	92318-2028	92318-2029	92318-2030	92318-2031	92318-2032
	92318-2033	92318-2034	92318-2035	92318-2036	92318-2037	92318-2038	92318-2039	92318-2040
	92318-2041	92318-2042	92318-2043	92318-2044	92318-2045	92318-2046	92318-2047	92318-2048
	92318-2049	92318-2050	92318-2051	92318-2052	92318-2053	92318-2054	92318-2055	92318-2056
	92318-2057	92318-2058	92318-2059	92318-2060	92318-2061	92318-2062	92318-2063	92318-2064
	92318-2065	92318-2066	92318-2067	92318-2068	92318-2069	92318-2070	92318-2071	92318-2072
	92318-2073	92318-2074	92318-2075	92318-2076	92318-2077	92318-2078	92318-2079	92318-2080
	92318-2081	92318-2082	92318-2083	92318-2084	92318-2085	92318-2086	92318-2087	92318-2088
	92318-2089	92318-2090	92318-2091	92318-2092	92318-2093	92318-2094	92318-2095	92318-2096
	92318-2097	92318-2098	92318-2099	92318-2201	92318-2202	92318-2203	92318-2204	92318-2205
	92318-2206	92318-2207	92318-2208	92318-2209	92318-2210	92318-2211	92318-2212	92318-2213
	92318-2214	92318-2215	92318-2216	92318-2217	92318-2218	92318-2219	92318-2220	92318-2221
	92318-2222	92318-2223	92318-2224	92318-2225	92318-2226	92318-2227	92318-2228	92318-2229
	92318-2230	92318-2231	92318-2232	92318-2233	92318-2234	92318-2235	92318-2236	92318-2237
	92318-2238	92318-2239	92318-2240	92318-2241	92318-2242	92318-2243	92318-2244	92318-2245
	92318-2246	92318-2247	92318-2248	92318-2249	92318-2250	92318-2251	92318-2252	92318-2253
	92318-2254	92318-2255	92318-2256	92318-2257	92318-2258	92318-2259	92318-2260	92318-2261
	92318-2262	92318-2263	92318-2264	92318-2265	92318-2266	92318-2267	92318-2268	92318-2269
	92318-2270	92318-2271	92318-2272	92318-2273	92318-2274	92318-2275	92318-2276	92318-2277
	92318-2278	92318-2279	92318-2280	92318-2281	92318-2282	92318-2283	92318-2284	92318-2285
	92318-2286	92318-2287	92318-2288	92318-2289	92318-2290	92318-2291	92318-2292	92318-2293
	92318-2294	92318-2295	92318-2296	92318-2297	92318-2298	92318-2299	92318-2401	92318-2402
	92318-2403	92318-2404	92318-2405	92318-2406	92318-2407	92318-2408	92318-2409	92318-2410
	92318-2411	92318-2412	92318-2413	92318-2414	92318-2415	92318-2416	92318-2417	92318-2418
	92318-2419	92318-2420	92318-2421	92318-2422	92318-2423	92318-2424	92318-2425	92318-2426
	92318-2427	92318-2428	92318-2429	92318-2430	92318-2431	92318-2432	92318-2433	92318-2434
	92318-2435	92318-2436	92318-2437	92318-2438	92318-2439	92318-2440	92318-2441	92318-2442
	92318-2443	92318-2444	92318-2445	92318-2446	92318-2447	92318-2448	92318-2449	92318-2450
	92318-2451	92318-2452	92318-2453	92318-2454	92318-2455	92318-2456	92318-2457	92318-2458

Connector Series No.	Connector Order No.							
92318	92318-2459	92318-2460	92318-2461	92318-2462	92318-2463	92318-2464	92318-2465	92318-2466
	92318-2467	92318-2468	92318-2469	92318-2470	92318-2471	92318-2472	92318-2473	92318-2474
	92318-2475	92318-2476	92318-2477	92318-2478	92318-2479	92318-2480	92318-2481	92318-2482
	92318-2483	92318-2484	92318-2485	92318-2486	92318-2487	92318-2488	92318-2489	92318-2490
	92318-2491	92318-2492	92318-2493	92318-2494	92318-2495	92318-2496	92318-2497	92318-2498
	92318-2499	92318-2601	92318-2602	92318-2603	92318-2604	92318-2605	92318-2606	92318-2607
	92318-2608	92318-2609	92318-2610	92318-2611	92318-2612	92318-2613	92318-2614	92318-2615
	92318-2616	92318-2617	92318-2618	92318-2619	92318-2620	92318-2621	92318-2622	92318-2623
	92318-2624	92318-2625	92318-2626	92318-2627	92318-2628	92318-2629	92318-2630	92318-2631
	92318-2632	92318-2633	92318-2634	92318-2635	92318-2636	92318-2637	92318-2638	92318-2639
	92318-2640	92318-2641	92318-2642	92318-2643	92318-2644	92318-2645	92318-2646	92318-2647
	92318-2648	92318-2649	92318-2650	92318-2651	92318-2652	92318-2653	92318-2654	92318-2655
	92318-2656	92318-2657	92318-2658	92318-2659	92318-2660	92318-2661	92318-2662	92318-2663
	92318-2664	92318-2665	92318-2666	92318-2667	92318-2668	92318-2669	92318-2670	92318-2671
	92318-2672	92318-2673	92318-2674	92318-2675	92318-2676	92318-2677	92318-2678	92318-2679
	92318-2680	92318-2681	92318-2682	92318-2683	92318-2684	92318-2685	92318-2686	92318-2687
	92318-2688	92318-2689	92318-2690	92318-2691	92318-2692	92318-2693	92318-2694	92318-2695
	92318-2696	92318-2697	92318-2698	92318-2699				

SET UP

This extraction tool can remove Picoflex™ connectors from 4 through 26 circuits, but it must be adjusted for the circuit size prior to operation.

To adjust the tool, remove the two thumbscrews from the adjustment block cover. Lift out the jaws and move them to the required position hole. See Figure 1.

NOTE: Each position hole covers two circuit sizes. That is, the innermost holes are for 4 and 6 circuit connectors. The next set of holes is for 8 and 10 circuit, and then the next is for 12 and 14 circuit, and so on.

Make sure the jaws are positioned equally from the middle of the tool. Put the adjustment block cover on and tighten the thumbscrews (finger-tight only).

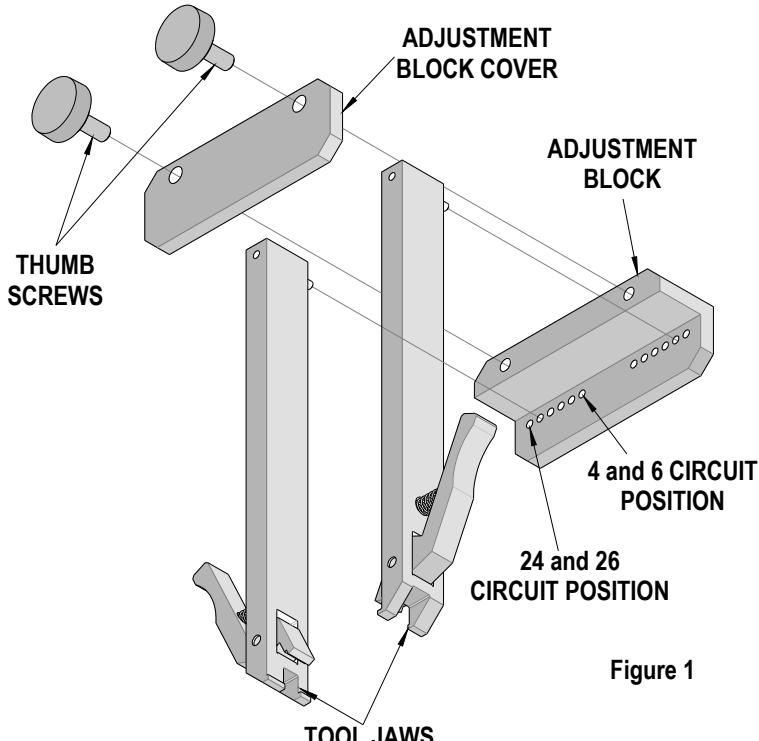


Figure 1



OPERATION:

CAUTION: Disconnect any electrical power from the circuit before using this tool.

To remove a connector from the header assembly, follow the steps below:

1. Open the tool slightly wider than the connector width.

2. Position the tool over the header. The header has a narrow end wall and a wider end wall. The tool has matching narrow and wide slots in the jaws. See Figure 2.
3. Close the tool jaws on the connector. Make sure the teeth in the jaws engage the slot on the connector. See Figure 3.

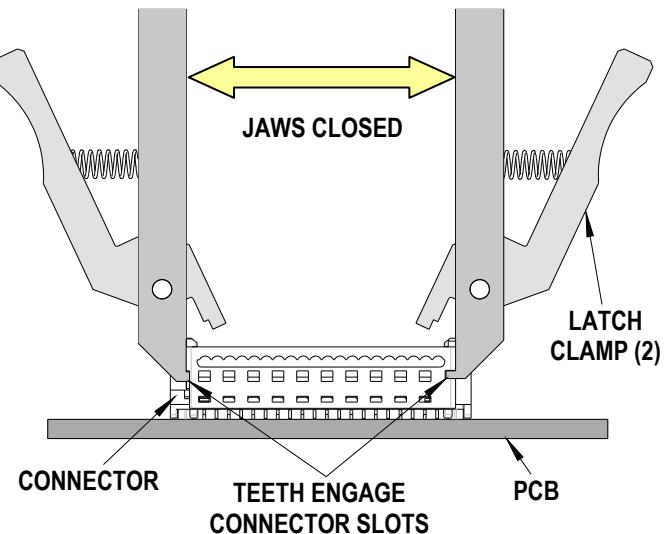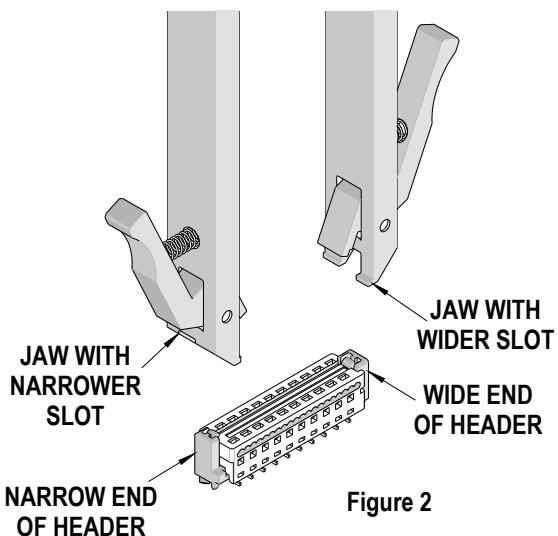

4. While keeping the jaws closed on the connector, squeeze the latch clamps until they stop against the sides of the tool jaws. This releases the header latches so the connector can be removed without latch damage. See Figure 3.
5. Holding the tool closed by the latch clamps, pull the tool straight up to remove the connector from the header. Damage may occur to the header or connector if it is extracted at an angle.

Warning: Care must be taken during this procedure to prevent bending of the pins that are left in place in the header assembly.

Maintenance

1. Keep the tool clean and dry. For replacement parts, see Parts List.

CAUTION: Molex specifications are valid only when used with Molex connectors and tooling.

Contact Information

For more information on Molex application tooling please contact Molex at 1-800-786-6539.

Parts List

Item	Order No	Description	Quantity
	62100-6000	Extractor Tool	Figure 4
1	62100-6001	Left Jaw	1
2	62100-6002	Right Jaw	1
3	62100-6003	Clamp	2
4	62100-6004	Jaw Adjustment Block	1
5	62100-6005	Adjusting Block Cover	1
6	63600-2014	1.5 Diameter by 10 Long Dowel	2
7	63600-2015	2.0 Diameter by 10 Long Dowel	2
8	63600-2016	Compression Spring	2
9	63600-2025	Thumb Screw	2

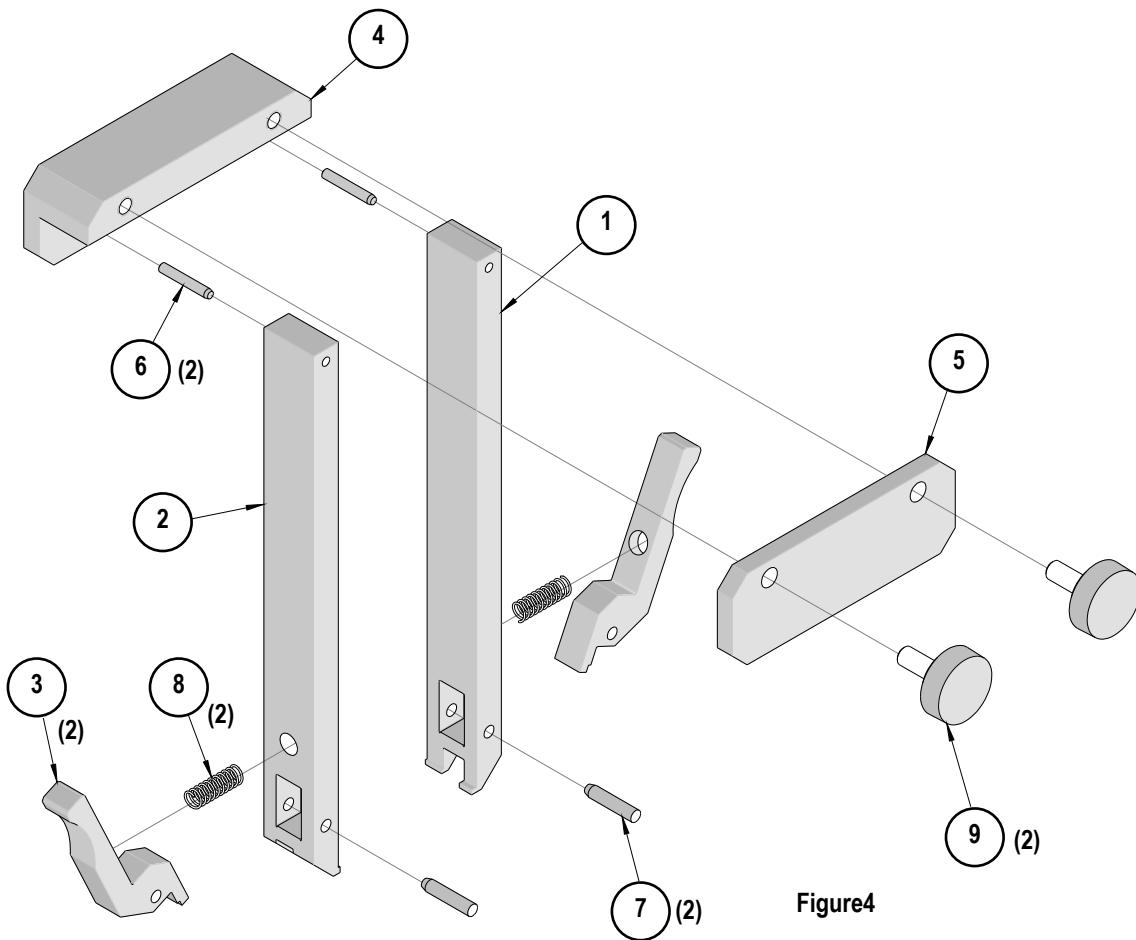


Figure4

Americas Headquarters
Lisle, Illinois 60532 U.S.A.
1-800-78MOLEX
amerinfo@molex.com

Far East North Headquarters
Yamato, Kanagawa, Japan
81-462-65-2324
feninfo@molex.com

Far East South Headquarters
Jurong, Singapore
65-6-268-6868
fesinfo@molex.com

European Headquarters
Munich, Germany
49-89-413092-0
eurinfo@molex.com

Corporate Headquarters
2222 Wellington Ct.
Lisle, IL 60532 U.S.A.
630-969-4550
Fax: 630-969-1352

Visit our Web site at <http://www.molex.com>