



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts,Customers Priority,Honest Operation,and Considerate Service",our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





Product Information

Filter Adapter 603

Issue Date 5/1/09

The 3M™ Filter Adapter 603 is designed for use with 3M™ Particulate Filter 5N11 or 3M™ Particulate Filter 5P71 and 3M™ Filter Retainer 501.

Features

- Platform for 5N11 and 5P71 N95 and P95 prefilters.
- Enables these filters to be directly attached to all 3M™ Full or Half Facepiece 6000 and 7000 Series Respirators.

Benefits

- The filter adapter 603 may be used multiple times on all 3M full or half facepiece 6000 and 7000 series respirators.
- Provides cost-effective filtering solution when multiple filters are needed for elastomeric facepieces.
 - Break even analysis shows savings when used multiple times (based on suggested list per pair and similar replacement frequency)
 - 5N11 filters x 7 = \$25.72 (integrating the 603 and 501 adapters)
 - 2071 disc filter x 7 = \$26.18


You save using the 603, 501, 5N11 when you use more than 7 pairs of the 5N11

Packaging and Ordering Information


Part No.	Stock ID/UPC	Case Packaging
603	70-0707-5800-1 50051138 54376 6	2 adapters per box, 8 boxes per case

How to use the filter adapter 603


1. Align notch on edge of 603 adapter with facepiece mark, as shown, and push together.

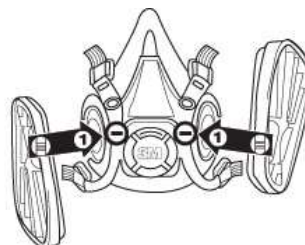

2. Turn adapter ¼ turn clockwise to stop. To remove adapter, turn ¼ turn counter-clockwise.

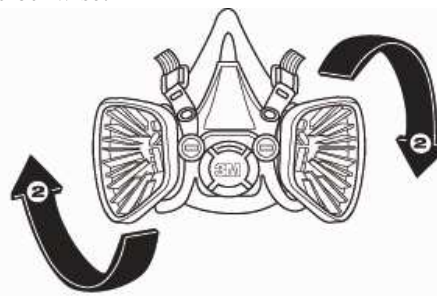

3. Place filter into retainer (Part No. 501) with filter printing facing towards the 603 adapter. Snap together and ensure the filter seal is free from creases or gaps.

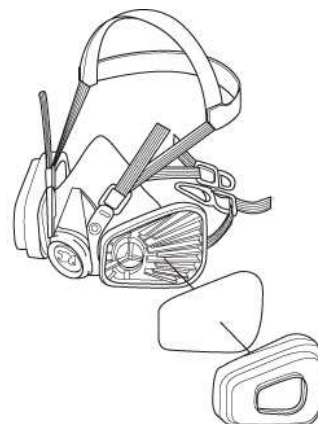

For more information, please contact:

In the U.S., contact:

Customer Service

1-800-328-1667

Technical Assistance

1-800-243-4630

Internet

www.3M.com/OccSafety

For other 3M products

1-800-3M HELPS

In Canada, contact:

3M Canada Company, OH&ESD

P.O. Box 5757

London, Ontario N6A 4T1

Customer Service

1-800-265-1840

Technical Assistance (Canada only)

1-800-267-4414

Internet

www.3M.com/CA/OccSafety

Technical Assistance in Mexico

01-800-712-0646

5270-2255, 5270-2119 (Mexico City only)

Technical Assistance in Brazil

0800-132333



Occupational Health and Environmental Safety Division

3M Center, Building 235-2E-91

St. Paul, MN 55144-1000