

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China










Features and Benefits

- AEC-Q100 automotive qualified
- Unipolar switchpoints
- Externally enabled diagnostics feature
- Diagnostics feature exercises the entire magnetic and electrical signal path within the IC
- Resistant to physical stress
- Superior temperature stability through advanced chopper stabilization techniques
- Output short-circuit protection
- Internal regulator enables operation from unregulated supplies
- Reverse-battery protection
- Solid-state reliability
- Small surface-mount package

Package: 5-pin SOT23W (suffix LH)

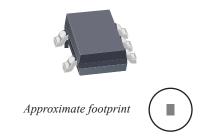

Description


The A1160 is a unipolar, Hall-effect switch with an externally enabled diagnostic function. In normal operating mode, the A1160 functions as a standard, unipolar Hall-effect switch. The output transistor turns on (output signal switches low) in the presence of a sufficient magnetic field (>B_{OP}(max)). Additionally, the output transistor of the A1160 switches off (output signal switches high) when the magnetic field is removed (<B_{RP}(min)).

The A1160 includes conductive coils in close proximity to the Hall element. When the diagnostic feature is enabled, these coils are energized. The energized coils generate an internal magnetic field that can be sensed by the Hall element. While in Diagnostic mode, the output of the A1160 provides a square wave output, which confirms the IC is properly sensing the internally generated magnetic field. The Diagnostic mode exercises the entire magnetic and electrical signal path internal to the IC, fully confirming functionality. Therefore, use of the A1160 either eliminates the need for redundant sensors in safety critical applications or increases robustness in safety critical applications that require redundant sensors (drive-by-wire systems and so forth).

The A1160 Hall-effect sensor IC is extremely temperaturestable and stress-resistant, especially suited for operation

Continued on the next page...

Functional Block Diagram

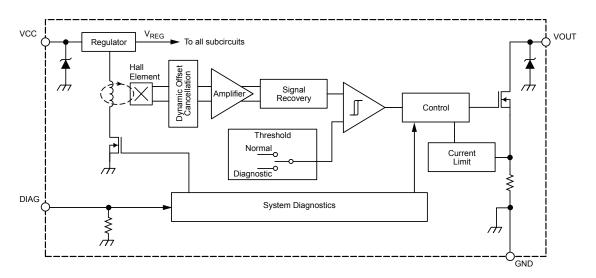

Description (continued)

at temperature ranges up to 150°C. Superior high-temperature performance is made possible through advanced dynamic offset cancellation techniques, which reduce the residual offset voltage normally caused by device overmolding, temperature dependencies, and thermal stress. This device includes on a single silicon chip: a voltage regulator, Hall-voltage generator, small-signal amplifier,

chopper stabilization, Schmitt trigger, and a open-drain output able to sink up to 25 mA. An on-board regulator permits operation with supply voltages of 3.8 to 24 V.

The A1160 is provided in a 5-pin SOT23W. The package is lead (Pb) free, with 100% matte-tin leadframe plating.

Selection Guide


Part Number	Packing*	
A1160LLHLX-T	10,000 pieces per 13-in. reel	



Absolute Maximum Ratings

Characteristic	Symbol	Notes	Rating	Unit	
Forward Supply Voltage	V _{CC}		30	V	
Reverse Supply Voltage	V _{RCC}		-18	V	
Forward Diagnostic Enable Voltage	V_{DIAG}		5.5	V	
Reverse Diagnostic Enable Voltage	V _{RDIAG}		-0.5	V	
Output-Off Voltage	V _{OUT}		30	V	
Continuous Output Current	I _{OUT}		25	mA	
Reverse Output Current	I _{ROUT}		-50	mA	
Operating Ambient Temperature	T _A	L temperature range	-40 to 150	°C	
Maximum Junction Temperature	T _J (max)		165	°C	
Storage Temperature	T _{stg}		-65 to 170	°C	

Pin-Out Diagram

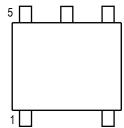

Terminal List Table

Name	Number	Function
DIAG	1, 3	Diagnostics enable (use either pin 1 or pin 3)
VCC	2	Connects power supply to chip
GND	4	Ground
VOUT	5	Output from circuit



^{*}Contact Allegro™ for additional packing options.

A1160

Chopper-Stabilized Precision Hall-Effect Switch With Advanced Diagnostics

OPERATING CHARACTERISTICS: Valid across full operating voltage and ambient temperature ranges, unless otherwise specified

Characteristic	Symbol	Test Conditions	Min.	Typ.1	Max.	Unit ²
Electrical Characteristics						
Supply Voltage		Operating, T _J < 165°C	3.8	_	24	V
	V _{CC}	V _{CC} required for diagnostic functionality	3.8	_	24	V
Output Leakage Current	I _{OUTOFF}	V _{OUT} = 24 V, B < B _{RP}	_	_	10	μA
Output Saturation Voltage	V _{OUT(SAT)}	I _{OUT} = 20 mA, B > B _{OP}	-	185	400	mV
Output Current Limit	I _{OM}	B > B _{OP}	30	-	60	mA
Power-On Time ³	t _{PN}	V _{CC} > 3.8 V, B < B _{RP} (min) – 10 G, B > B _{OP} (max) + 10 G	_	_	25	μs
Chopping Frequency	f _C		_	400	-	kHz
Output Rise Time ^{3,4}	t _r	R _{LOAD} = 820 Ω, C _L = 20 pF	-	0.2	2	μs
Output Fall Time ^{3,4}	t _f	$R_{LOAD} = 820 \Omega, C_{L} = 20 pF$	_	0.1	2	μs
	I _{CC(ON)}	B < B _{RP} , V _{CC} = 12 V	_	_	5	mA
Supply Current ⁵	I _{CC(OFF)}	B > B _{OP} , V _{CC} = 12 V	_	_	5	mA
	I _{CC(DIAG)}	V _{CC} = 12 V, DIAG = 1	_	16	25	mA
Reverse Battery Current	I _{RCC}	V _{RCC} = -18 V	_	_	-10	mA
Supply Zener Clamp Voltage	V _{ZSUP}	I _{CC} = 8 mA, T _A = 25°C	30	_	-	V
Output Zener Voltage	V _{ZOUT}	I _{OUT} = 3 mA, T _A = 25°C	28	-	-	V
PWM Carrier Frequency	f _{PWMout}	With Diagnostic mode enabled	-	3	-	kHz
Diagnostic Characteristics						
Duty Cycle (Diagnostic Mode) ⁶	D _{FAIL}	DIAG = 1, device malfunction	_	≈ 0 or ≈ 100	-	%
	D _{PASS}	DIAG = 1, device normal	40	50	60	%
DIAG Pin Input Resistance	R _{DIAG}	Internal pulldown resistor	_	1	_	МΩ
DIAG Pin Input Low Voltage Threshold	V _{IL}	Device in Normal mode	_	_	0.6	V
DIAG Pin Input High Voltage Threshold	V _{IH}	Device in Diagnostic mode	1.5	_	5.0	V
Diagnostic Enable Time	t _D	Time from V _{IH} reaching 1.5 to 5.0 V until valid diagnostic output	1	_	-	ms
Diagnostic Disable Time	t _{DIS}	Time from DIAG pin release (high to low transition) until valid normal sensor IC output	_	_	25	μs

Continued on the next page...



OPERATING CHARACTERISTICS (continued): Valid across full operating voltage and ambient temperature ranges, unless otherwise specified

Characteristic	Symbol	Test Conditions	Min.	Typ.1	Max.	Unit ²
Magnetic Characteristics ⁷						
Operate Point	B _{OP}		115	180	245	G
Release Point	B _{RP}		60	125	190	G
Hysteresis	B _{HYS}	B _{OP} – B _{RP}	30	55	80	G
Maximum External Field in Diagnostic Mode ⁸	B _{EXT(DIAG)}		800	10,000	-	G
Drift Detection Threshold						
Operate Point Drift	B _{OP(DRIFT)}		30	_	420	G
Release Point Drift	B _{RP(DRIFT)}		15	_	325	G

¹ Typical data is at $T_A = 25$ °C and $V_{CC} = 12$ V and it is for design information only.



² 1 G (gauss) = 0.1 mT (millitesla).

³ Power-On Time, Output Rise Time, and Output Fall Time are ensured through device characterization and not final test.

⁴ C_L = oscilloscope probe capacitance.

⁵ In Diagnostic mode the supply current level is different from the Normal mode operation current level. This is important when determining the power derating for Diagnostic mode.

⁶ When the A1160 passes the diagnostic tests, it outputs a 50% duty cycle signal. Any other output indicates the test failed. Please see the Diagnostic Mode of Operation section for more information.


⁷ Magnetic flux density, B, is indicated as a negative value for north-polarity magnetic fields, and as a positive value for south-polarity magnetic fields.


^{8 800} G is the maximum test capability due to practical equipment limitations. Design simulations show that a 10,000 G external field will not adversely affect the A1160 in Diagnostic mode when a 1% sensitivity mismatch between the Hall elements in the IC is assumed.

Thermal Characteristics: may require derating at maximum conditions; see application information

Characteristic	Symbol	Test Conditions*	Value	Unit
Package Thermal Resistance	$R_{ heta JA}$	On 4-layer PCB based on JEDEC standard	124	°C/W


^{*}Additional thermal information available on the Allegro website

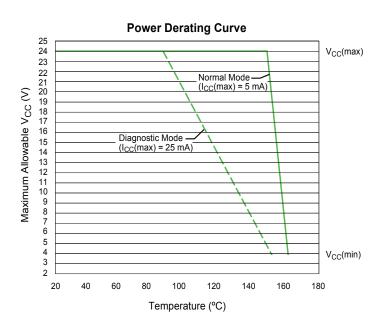


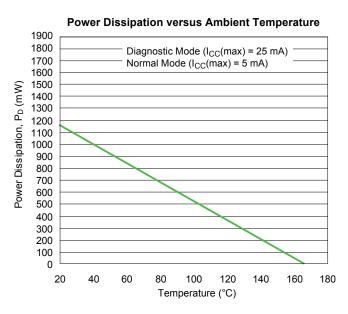






Characteristic Performance

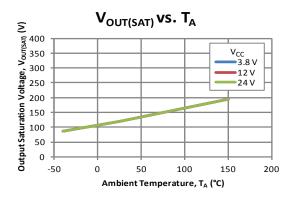


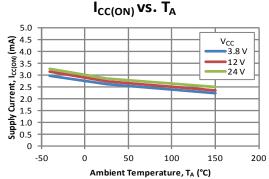


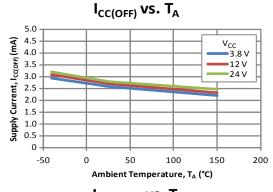


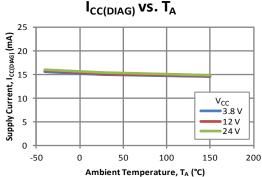


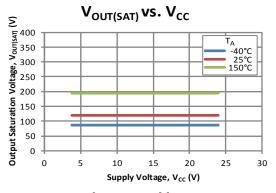


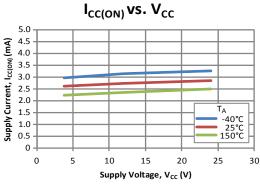


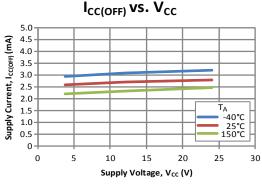


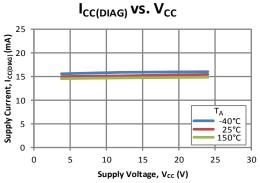

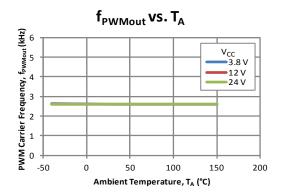


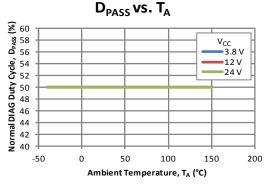


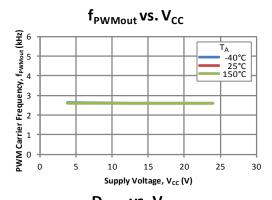


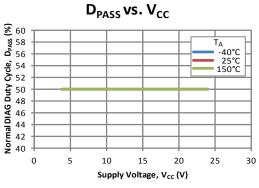





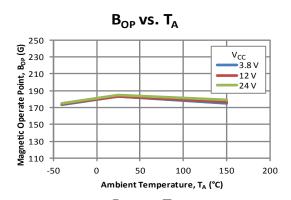


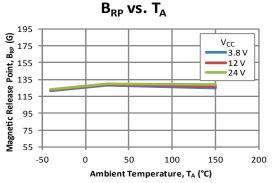

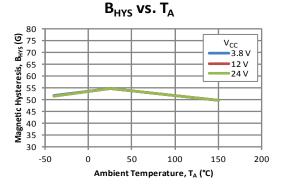

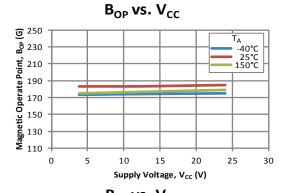

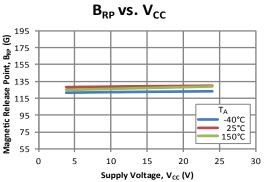

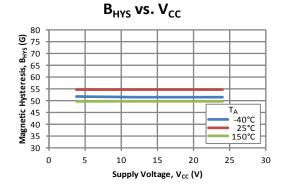

Functional Description

Operation

The output of the A1160 switches low (turns on) when a magnetic field perpendicular to the Hall element exceeds the operate point threshold, B_{OP} . After turn-on, the output is capable of sinking 25 mA and the output voltage is $V_{OUT(SAT)}$. When the magnetic field is reduced below the release point, B_{RP} , the output goes high (turns off). This is illustrated in figure 1.

The difference in the magnetic operate and release points is the hysteresis, B_{HYS} , of the IC. This built-in hysteresis allows clean switching of the output, including when in the presence of external mechanical vibration and electrical noise.

Powering-on the IC in the hysteresis range (applied magnetic lower than B_{OP} but also higher than B_{RP}) results in output at the high state. The output will not switch until there is a valid transition beyond B_{OP} or B_{RP} . The correct output state is attained after the first excursion beyond B_{OP} or B_{RP} .

Applications

It is strongly recommended that an external bypass capacitor be connected between the supply and ground of the A1160 (in close proximity to the device) to reduce both external noise and noise generated by the chopper stabilization technique. As is shown in figure 2, a 0.1 µF capacitor is typical.

Extensive applications information on magnets and Hall-effect sensor ICs is available on the Allegro website, including the following application notes:

- Hall-Effect IC Applications Guide, AN27701
- Soldering Methods for Allegro's Products SMT and Through-Hole, AN26009

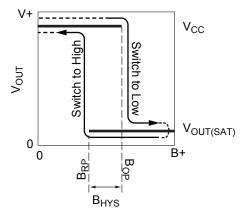


Figure 1. Switching behavior of Hall effect switches. On the horizontal axis, the B+ direction indicates increasing south polarity magnetic field strength, and the B– direction indicates decreasing south polarity field strength (including the case of increasing north polarity).

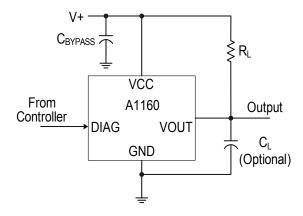


Figure 2. Typical application circuit

Diagnostic Mode of Operation

The Diagnostic mode is accessed by applying a voltage of V_{IH} on the diagnostic enable pin (DIAG). The Diagnostic mode uses an internally generated magnetic signal to exercise the signal path. This signal is compared to two reference signals in the Schmitt trigger.

If the diagnostic signal is between the two reference signals, the device is considered to be working within specification and a 50% PWM signal is set at the output pin (VOUT), as shown in figure 3. If the diagnostic signal is above the upper reference or below the lower reference, the output PWM is set at a fixed value that is either at nearly 0% or at nearly 100% duty cycle.

The Diagnostic mode of operation not only detects catastrophic failures but also identifies drifts in the magnetic switchpoints. If B_{OP} or B_{RP} drift to values below or above the values stated in the Drift Detection Threshold section of the Operating Characteristics table, the output PWM is set at a fixed value that is either at nearly 0% or at nearly 100% duty cycle.

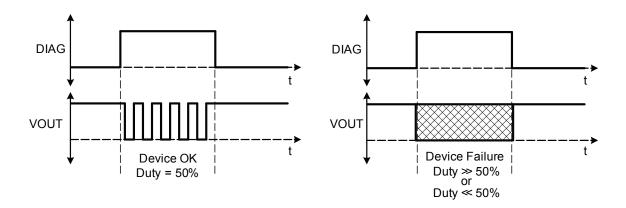


Figure 3. Diagnostics Functional Diagram. When the A1160 passes the diagnostic test, a 50% duty cycle signal is sent out (left panel). In the event of a failure, the output will be forced either high or low (right panel). Diagnostic mode is only active when the DIAG input pin is pulled high.



Chopper Stabilization Technique

When using Hall-effect technology, a limiting factor for switchpoint accuracy is the small signal voltage developed across the Hall element. This voltage is disproportionally small relative to the offset that can be produced at the output of the Hall IC. This makes it difficult to process the signal while maintaining an accurate, reliable output across the specified operating temperature and voltage ranges.

Chopper stabilization is a unique approach used to minimize Hall offset on the chip. The Allegro technique, namely Dynamic Quadrature Offset Cancellation, removes key sources of the output drift induced by thermal and mechanical stresses. This offset reduction technique is based on a signal modulation-demodulation process. The unwanted offset signal is separated from the magnetic field-induced signal in the frequency domain, through modulation. The subsequent demodulation acts as a modulation process for the offset, causing the magnetic field induced signal to recover its original spectrum at baseband, while the DC offset becomes a high-frequency signal. The magnetic sourced signal then can pass through a low-pass filter, while the modulated DC offset is suppressed. This configuration is illustrated in figure 4.

The chopper stabilization technique uses a 400 kHz, high

frequency clock. For demodulation process, a sample-and-hold technique is used, where the sampling is performed at twice the chopper frequency (800 kHz). This high-frequency operation allows a greater sampling rate, which results in higher accuracy and faster signal-processing capability. This approach desensitizes the chip to the effects of thermal and mechanical stresses, and produces devices that have extremely stable quiescent Hall output voltages and precise recoverability after temperature cycling. This technique is made possible through the use of a BiCMOS process, which allows the use of low-offset, low-noise amplifiers in combination with high-density logic integration and sample-and-hold circuits.

The repeatability of magnetic field-induced switching is affected slightly by a chopper technique. However, the Allegro high frequency chopping approach minimizes the affect of jitter and makes it imperceptible in most applications. Applications that are more likely to be sensitive to such degradation are those requiring precise sensing of alternating magnetic fields; for example, speed sensing of ring-magnet targets. For such applications, Allegro recommends its digital sensor IC families with lower sensitivity to jitter. For more information on those products, contact your Allegro sales representative.


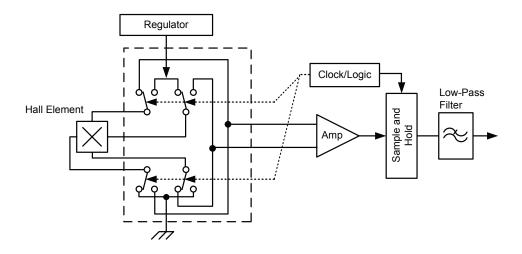


Figure 4. Chopper stabilization circuit (Dynamic Quadrature Offset Cancellation)



Package LH, 5-Pin SOT23W

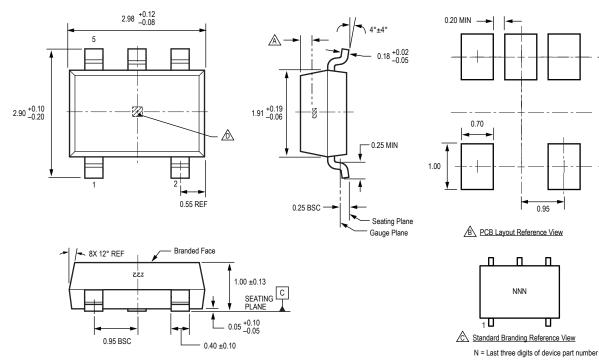

For Reference Only; not for tooling use Dimensions in millimeters

Dimensions exclusive of mold flash, gate burrs, and dambar protrusions

Exact case and lead configuration at supplier discretion within limits shown

Active Area Depth, 0.28 mm REF

Reference land pattern layout
All pads a minimum of 0.20 mm from all adjacent pads; adjust as necessary to meet application process requirements and PCB layout tolerances

Branding scale and appearance at supplier discretion

hall element, not to scale, location application dependant



2.40

A1160

Chopper-Stabilized Precision Hall-Effect Switch With Advanced Diagnostics

Revision History

Revision	Revision Date	Description of Revision
_	December 12, 2013	Initial Release
1	September 21, 2015	Added AEC-Q100 qualification under Features and Benefits

Copyright ©2016, Allegro MicroSystems, LLC

Allegro MicroSystems, LLC reserves the right to make, from time to time, such departures from the detail specifications as may be required to permit improvements in the performance, reliability, or manufacturability of its products. Before placing an order, the user is cautioned to verify that the information being relied upon is current.

Allegro's products are not to be used in any devices or systems, including but not limited to life support devices or systems, in which a failure of Allegro's product can reasonably be expected to cause bodily harm.

The information included herein is believed to be accurate and reliable. However, Allegro MicroSystems, LLC assumes no responsibility for its use; nor for any infringement of patents or other rights of third parties which may result from its use.

For the latest version of this document, visit our website:

www.allegromicro.com

