



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





金龙机电股份有限公司

JINLONG MACHINERY & ELECTRONICS

www.jinlong-machinery.com

sales@jinlong-machinery.com

PRODUCT SPECIFICATION

客户信息	客户名称/Customer	
	客户代码/Part No.	
	客户确认签章 /Customer Approved Signatures	

K O T L	文件编号/Spec No.	KOTL-S15035	
	品名描述/ Product Description	水平线性振动电机 Horizontal linear vibration motor	
	型号/Part No.	LV061228B-L65-A	
	送样日期/Date		
	设计/Designed by	审核/Checked by	批准/Approved by
	Lin Fengjun	Yan Xinjiang	James Chen
	2016.7.5	2016.7.5	2016.7.7

Keywords: Linear Vibrator, 150hms, 6x12x2.8mm, Wire Contact, GP Compliant

NO. | Issue: X1 | Revision Date: 03/07/2017 | Page: 2/11

Mechanical Eng.	Lin Fengjun	Check/Apr.	James Chen
Package Eng.	Huang Haojing		
Application Eng.		Check/Apr.	

Date	Issue	Detail changes
03/07/2017	X1	Document created

Table of contents

1. Scope
2. Environmental Requirement
3. Description And Application
4. Standard Operating Condition
5. Characteristics
6. Performance
7. Standard Test Condition
8. Recommended Stimulus
9. Reliability Tests
10. Caution For Use
11. Mechanical Drawing
12. Permitted force to vibrator
13. Package

Keywords: Linear Vibrator, 150hms, 6x12x2.8mm, Wire Contact, GP Compliant

NO. Issue: X1 Revision Date: 03/07/2017 Page: 3/11

1. Scope

This document contains required environmental, electrical, vibratory, mechanical, package and reliability test requirements.

2. Environmental Requirement

The vibration including all components and solder joints must be free from lead (Pb) and other banned or restricted substances according to customer's requirements.

3. Description And Application

This is a FPC contact vibrator which is applied with an AC signal (sine wave or square wave) around the resonant frequency. This device is recommended to be used for haptic feedback device, ex. Mobile phone.

4. Standard Operation Condition.

4.1 Rated voltage 2.0Vrms (square wave or sine wave)

4.2 Operating voltage range 0~2.1Vrms

4.3 Operating temperature range
-20°C to +70°C Ordinary humidity (No condensation of moisture)

4.4 Storage temperature range
0°C to +40°C Ordinary humidity at normal atmospheric pressure (No condensation of moisture)

5. Characteristics

5.1 Coil resistance 15±15%Ω

5.2 Rated current Max 135mA @ rated voltage

5.3 Insulation resistance Min 10MΩ @ 100VDC Between terminal and housing.


6. Performance

6.1 Acceleration Min 0.65 Grms at F0 @100g fixture in the middle
@ 2Vrms sine wave (Refer to standard test condition)

Keywords: Linear Vibrator, 150hms, 6x12x2.8mm, Wire Contact, GP Compliant

NO. Issue: X1 Revision Date: 03/07/2017 Page: 4/11

6.2 Resonant frequency	200±10 Hz 220-180hz sweep down(Refer to standard test condition)
6.3 Rise time	100ms Max (from 0 to 90% nominal acceleration) (Refer to standard test condition)
6.4 Fall time	120ms Max (free fall from 100% to 10% nominal acceleration) (Refer to standard test condition)
6.5 Noise	≤45 dBA @ 10 cm @ 100g test jig @ F0 @ 2Vrms, DRV2604 (10cm distance from microphone)

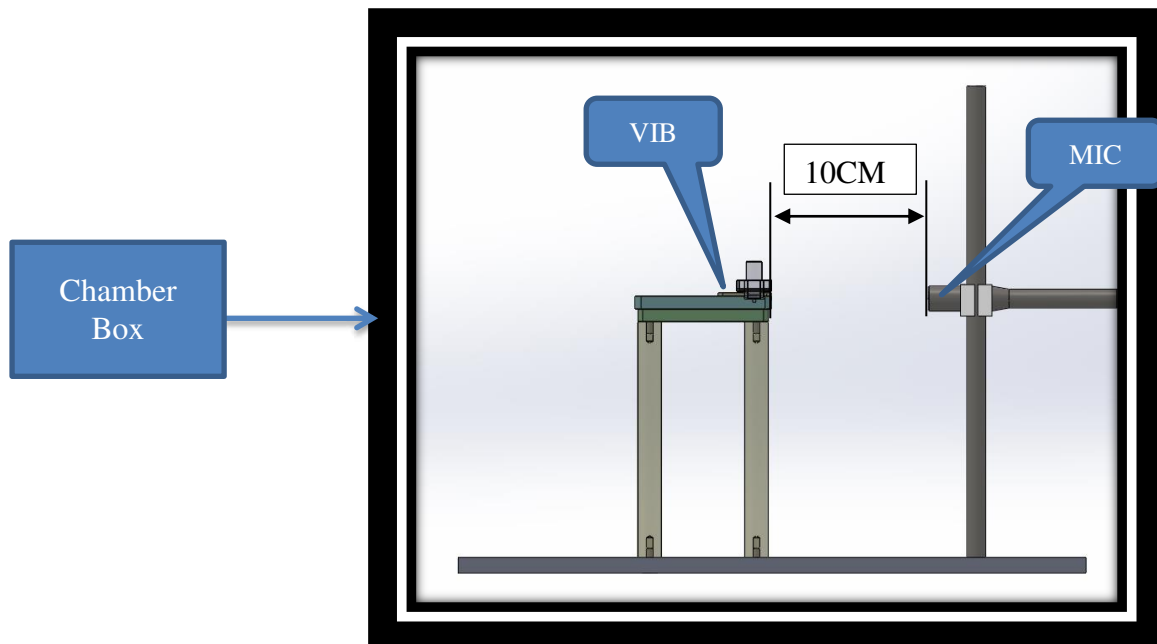

Keywords: Linear Vibrator, 15Ohms, 6x12x2.8mm, Wire Contact, GP Compliant

NO. Issue: X1 Revision Date: 03/07/2017 Page: 5/11

7. Standard Test Condition

7.1 Climatic condition

The measurement at $25^{\circ}\text{C} \pm 3^{\circ}\text{C}$ & $65\% \text{RH} \pm 20\% \text{RH}$ is standard. If the judgment is not questionable, recognize measurement at 5°C to 35°C & relative humidity $45\% \text{RH}$ to $85\% \text{RH}$.

7.2 Input Frequency sine wave/F0
(input F0 from frequency response curve)

7.3 Input voltage 2Vrms

7.4 Suspending method

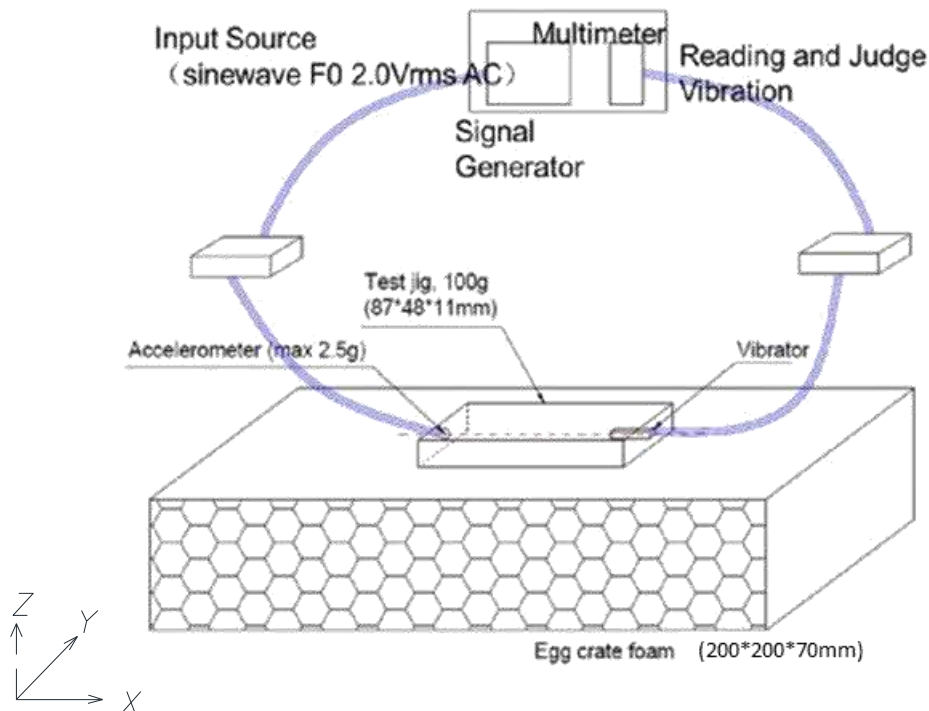


Fig 2. test method

1. Placed a 100g test jig in the center of the soft foam, 87*48 mm plane must be located on foam.

2. Attached the vibrator and accelerometer to the x axis face of the block, both vibrate and measure direction should be mounted to x axis.

Keywords: Linear Vibrator, 150hms, 6x12x2.8mm, Wire Contact, GP Compliant

NO. Issue: X1 Revision Date: 03/07/2017 Page: 6/11

7.5 Drawing of test jig

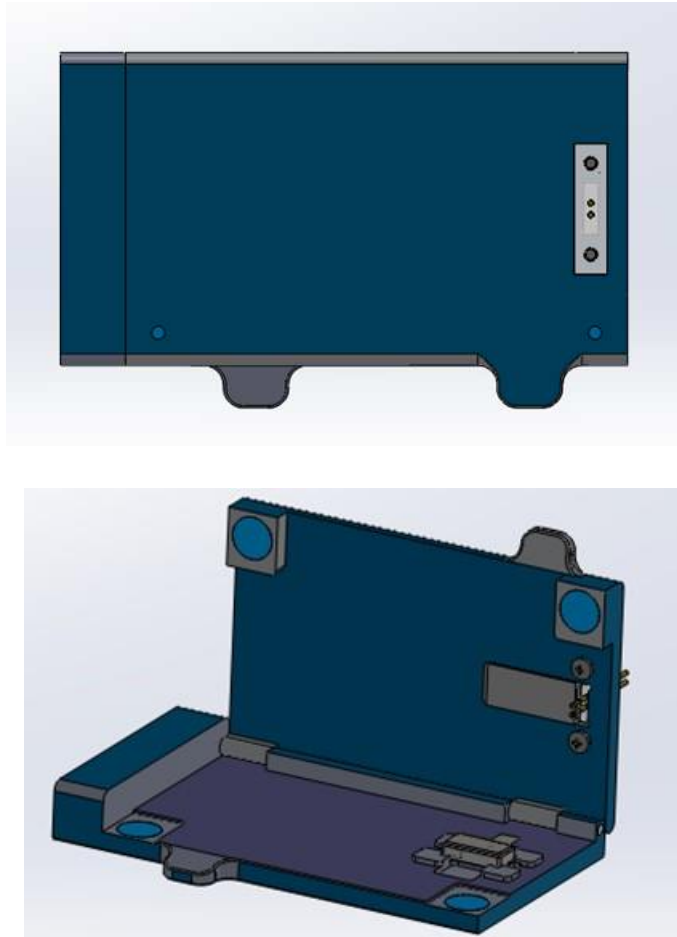


Fig 3. test jig

Caution:

Be sure the attached both accelerometer and vibrator tightly to get precise test result. Or may get wrong acceleration data or noise.

7.6 Measure method

7.6.1 Reading the vibration for 0.5~2.0S.

7.6.2 For more precision measurement, average of 3 times measure data is required.

Keywords: Linear Vibrator, 150ohms, 6x12x2.8mm, Wire Contact, GP Compliant

NO. Issue: X1 Revision Date: 03/07/2017 Page: 7/11

8. Recommended Stimulus

Auto resonance driver is strongly recommended. Vibration can be adjusted by changing voltage.

9. Reliability Tests

Immediately after reliability test, the samples shall be stored under climatic conditions such as normally exist in ordinary rooms or laboratories. Unless otherwise noted, the recovery period shall be 4 hours at least before performance testing.

After reliability test, all samples must be meet the requirements as follow:

- 1 Resonant frequency: within $\pm 5\%$ of original
- 2 Noise: Max 55dBA
- 3 Acceleration: Min 0.50Grms
- 4 Rise time: Max 150ms
- 5 Fall time: Max 170ms

9.1 Free Fall Test: 10 samples


The samples should be mounted in a 150 gram fixture, drop to the granite floor, 1.5 meters 18 times, 1 time every face and 1 time every edge;

9.2 Life Test: 20 samples

sample should be operated on standard condition(100g jig on foam @ 2Vrms sinewave F0) ON(2s)/OFF(1S) for 120hours

9.3 Temperature shock: 10 samples

-40°C/+85°C in each of 60min, total 10 cycles. 7 min transition time;

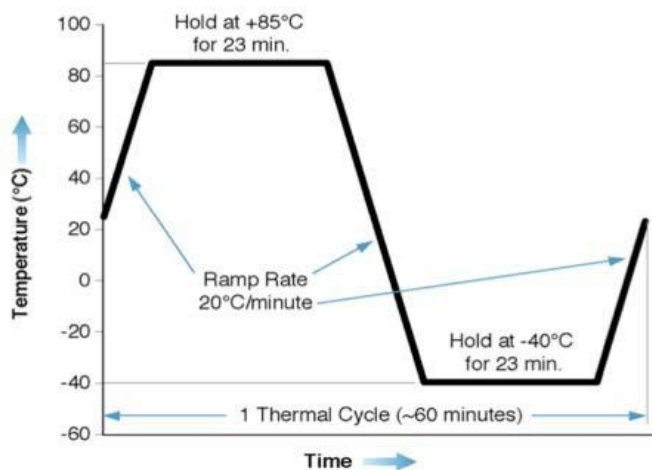

9.4 High temperature storage: 10 samples

+85°C, 168 hours

9.5 Low temperature storage: 10 samples

-40°C, 168 hours

9.6 Salt Mist Test: 10 samples

+35°C, 5%Nacl, 24 hours

Keywords: Linear Vibrator, 15Ohms, 6x12x2.8mm, Wire Contact, GP Compliant

NO. Issue: X1 Revision Date: 03/07/2017 Page: 8/11

10. Caution for use

10.1 Do not press vibrator with force more than 12N. It may lead to transformation of appearance or performance.

10.2 Do not use vibrator in follow environment. It may cause decline of performance or damage to vibrator.

10.2.1 Do not keep vibrator at high humidity or high temperature for extended too long time.

10.2.2 Do not use vibrator near magnetic device or magnetizer.

10.2.3 Do not use vibrator near erosion gas.

10.2.4 Do not drop vibrator into liquid.

10.3 There is strong magnetic on the surface of vibrator. Do not set components sensitive to magnetic within 3 mm in Z-direction of vibrator surface.

10.4 To use vibrator reliable, vibrator should be fixed to house firmly in vibrate direction. Or it may be cause bad noise.

10.5 Soft material (such as poron or foam etc.) is not adequate to fix vibrator in vibration direction. it can only be used as a auxiliary to reinforce reliability. Or it may be cause lower vibration.

Keywords: Linear Vibrator, 150hms, 6x12x2.8mm, Wire Contact, GP Compliant

NO. Issue: X1 Revision Date: 03/07/2017 Page: 9/11

11. Mechanical Drawing:

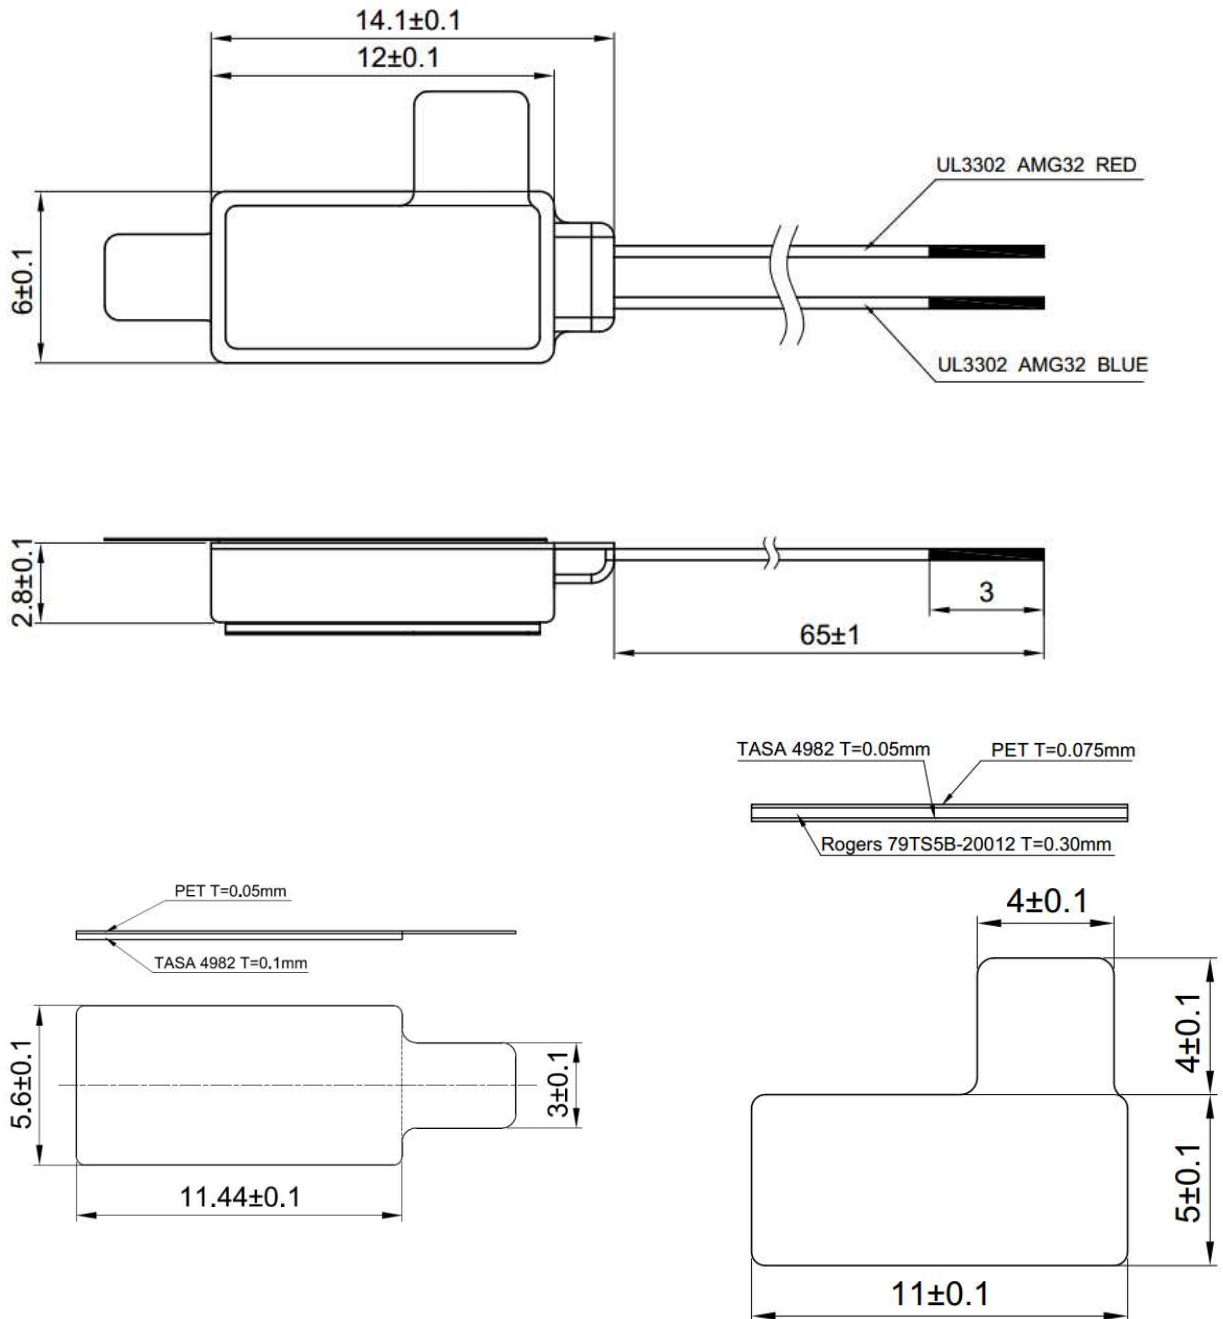


Fig 4. mechanical layout

Keywords: Linear Vibrator, 150ohms, 6x12x2.8mm, Wire Contact, GP Compliant

NO. Issue: X1 Revision Date: 03/07/2017 Page: 10/11

12. Permitted force to vibrator

No.	Meaning of the force	Magnitude(N)
1		Handling force on center of crust Max.12
2		Handling force on sidewise of crust Max.12
3		Handling force on sideface of crust Max.5
4		Handling force on center of cover Max.12
5		Handling force on sidewise of cover Max.12
6		Handling force pull out the wire Max.15N

Keywords: Linear Vibrator, 150hms, 6x12x2.8mm, Wire Contact, GP Compliant

NO.

Issue:

X1

Revision Date: 03/07/2017

Page:11/11

13. Package

tray, outer size L × W (mm) : 162 × 250

