

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



# Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China









# QT-Brightek PLCC4 Series PLCC4 RGB LED

Part No.: QBLP677-RGB2 (High Bright)

| Product: QBLP677-RGB2 (High Bright) | Date: June 28, 2016 | Page 1 of 10 |
|-------------------------------------|---------------------|--------------|
|                                     | Version# 2.1        |              |



# QBLP677-RGB2 (High Bright) PLCC4 RGB LED **BLACK FACE HIGH BRIGHT**

| Product: QBLP677-RGB2 (High Bright) | Date: June 28, 2016 | Page 2 of 10 |
|-------------------------------------|---------------------|--------------|
|                                     | Version# 2.1        |              |



# Introduction

### Feature:

- Black Face
- High Bright
- White diffused lens
- Ultra bright PLCC4 RGB LED
- Common Anode
- Triangle die placement
- InGaN technology for IB/IG
- AlInGaP technology for R
- 120 degree viewing angle

### **Description:**

This PLCC4 RGB LEDs have a height profile of 1.85mm. Combination of high brightness output and robust package, this LED is ideal for architecture lighting, status indication, and color mixing applications.

### **Application:**


- Status indication
- Back lighting application
- Full Color LED panel

### **Certification & Compliance:**

- TS16949
- ISO9001
- RoHS Compliant



### **Dimension:**

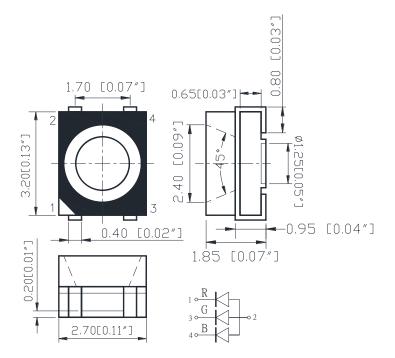

Units: mm / tolerance = +/-0.2mm

| Product: QBLP677-RGB2 (High Bright) | Date: June 28, 2016 | Page 3 of 10 |
|-------------------------------------|---------------------|--------------|
|                                     | Version# 2.1        |              |



Electrical / Optical Characteristic: (T=25 °C)

| Droduot                       | Product Color |                     | ν <sub>F</sub> (V) |      | λ <sub>D</sub> (nm) |      | I <sub>V</sub> (mcd) |           |      |
|-------------------------------|---------------|---------------------|--------------------|------|---------------------|------|----------------------|-----------|------|
| Product                       | Coloi         | I <sub>F</sub> (mA) | Тур.               | Max. | Min.                | Тур. | Max.                 | Min. Typ. | Тур. |
| 00,000                        | Red           | 20                  | 2.0                | 2.5  | 615                 | 624  | 630                  | 510       | 700  |
| QBLP677-RGB2<br>(High Bright) | True Green    | 20                  | 3.1                | 3.7  | 519                 | 525  | 534                  | 1080      | 1450 |
| (g 2.1g.it)                   | Blue          | 20                  | 3.1                | 3.7  | 461                 | 470  | 476                  | 200       | 280  |

**Absolute Maximum Rating** 

| Material      | P <sub>d</sub> (mW) | I <sub>F</sub> (mA) | I <sub>FP</sub> (mA)* | V <sub>R</sub> (V) | T <sub>OP</sub> (°C) | T <sub>ST</sub> (°C) | T <sub>SOL</sub> (°C)** |
|---------------|---------------------|---------------------|-----------------------|--------------------|----------------------|----------------------|-------------------------|
| AllnGaP (R)   | 75                  | 30                  | 125                   | 5                  | -40 ~ +80            | -40 ~ +85            | 260                     |
| InGaN (IB/IG) | 111                 | 30                  | 125                   | 5                  | -40 ~ +80            | -40 ~ +85            | 260                     |

<sup>\*</sup>Duty 1/8 @ 1kHz

Luminous Intensity Iv for Red @ IF=20mA

| Bin | Min. | Max. | Unit |
|-----|------|------|------|
| 12  | 510  | 645  |      |
| 13  | 645  | 800  | mcd  |
| 14  | 800  | 1000 |      |

# Luminous Intensity I<sub>V</sub> for True Green @ I<sub>F</sub>=20mA

| Bin | Min. | Max. | Unit |
|-----|------|------|------|
| 12  | 1080 | 1350 |      |
| 13  | 1350 | 1700 | mcd  |
| 14  | 1700 | 2125 |      |

Luminous Intensity I<sub>V</sub> for Blue @ I<sub>F</sub>=20mA

| Bin | Min. | Max. | Unit |
|-----|------|------|------|
| 10  | 200  | 250  |      |
| 11  | 250  | 315  | mcd  |
| 12  | 315  | 395  |      |

| Product: QBLP677-RGB2 (High Bright) | Date: June 28, 2016 | Page 4 of 10 |
|-------------------------------------|---------------------|--------------|
|                                     | Version# 2.1        |              |

<sup>\*\*</sup>IR Reflow for no more than 10 sec @ 260 °C



Dominant Wavelength  $\lambda_D$  for Red @ I<sub>F</sub>=20mA

| Bin | Min. | Max. | Unit |
|-----|------|------|------|
| 2   | 615  | 620  |      |
| 3   | 620  | 625  | nm   |
| 4   | 625  | 630  |      |

Dominant Wavelength λ<sub>D</sub> for True Green @ I<sub>F</sub>=20mA

| Bin | Min. | Max. | Unit |
|-----|------|------|------|
| 2   | 519  | 524  |      |
| 3   | 524  | 529  | nm   |
| 4   | 529  | 534  |      |


Dominant Wavelength  $\lambda_D$  for Blue @ I<sub>F</sub>=20mA


| Bin | Min. | Max. | Unit |
|-----|------|------|------|
| 2   | 461  | 466  |      |
| 3   | 466  | 471  | nm   |
| 4   | 471  | 476  |      |


| Product: QBLP677-RGB2 (High Bright) | Date: June 28, 2016 | Page 5 of 10 |
|-------------------------------------|---------------------|--------------|
|                                     | Version# 2.1        |              |





# **Characteristic Curves**

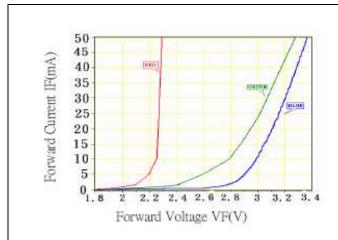


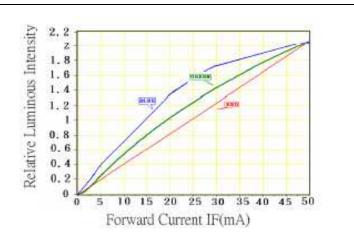

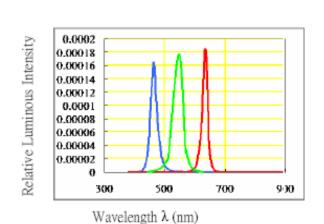

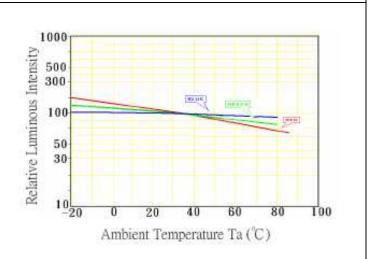

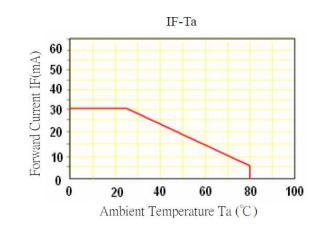

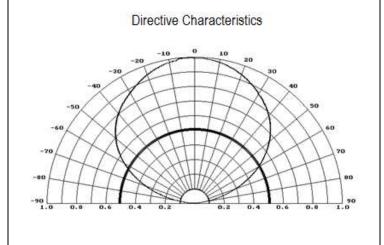



| Product: QBLP677-RGB2 (High Bright) | Date: June 28, 2016 | Page 6 of 10 |
|-------------------------------------|---------------------|--------------|
|                                     | Version# 2.1        |              |



# **Solder Profile & Footprint**

- -Recommended tin solder specifications: melting temperature in the range of 178~192 °C
- -The recommended reflow soldering profile is as follows (temperatures indicated are as measured on the surface of the LED resin):

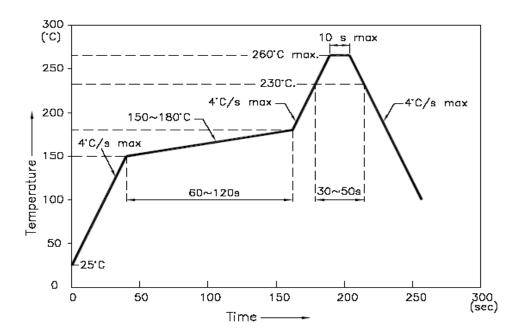

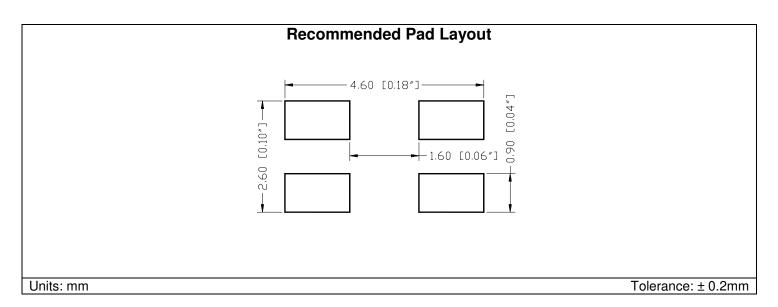


| Product: QBLP677-RGB2 (High Bright) | Date: June 28, 2016 | Page 7 of 10 |
|-------------------------------------|---------------------|--------------|
|                                     | Version# 2.1        |              |




# **Packing & Labeling**

Reel Dimension:

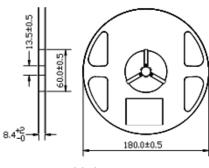


Unit: mm


# Tape Dimension:

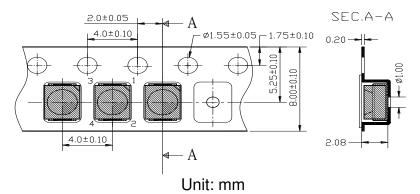

# Arrangement of Tape:

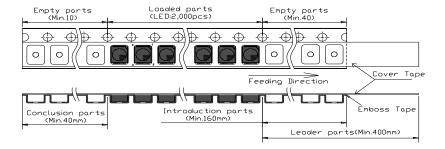

# Packaging Specifications:

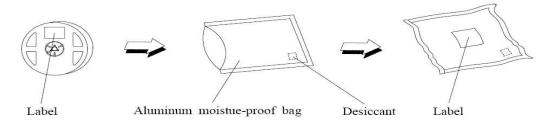

| Product: QBLP677-RGB2 (High Bright) | Date: June 28, 2016 | Page 8 of 10 |
|-------------------------------------|---------------------|--------------|
|                                     | Version# 2.1        |              |



# Labeling

| Part No:            |
|---------------------|
| Customer P/N:       |
| ltem:               |
| Q'ty:               |
| Vf:                 |
| Iv:                 |
| WI:                 |
| Date: Made in China |

**Ordering Information** 

| Part # | Orderable Part # | Spec Range                         | Quantity per reel |
|--------|------------------|------------------------------------|-------------------|
|        | OBL P677-RGR2    | Per bin selection on page 4 and 5. | 1,000 units       |

| Product: QBLP677-RGB2 (High Bright) | Date: June 28, 2016 | Page 9 of 10 |
|-------------------------------------|---------------------|--------------|
|                                     | Version# 2.1        |              |



**Revision History** 

| Description:                                     | Revision # | Revision Date |
|--|------------|---------------|
| New Release of QBLP677-RGB2                      | V1.0       | 02/28/2011    |
| Update Brightness                                | V1.1       | 10/13/2011    |
| Bin code added/ Indicate the High bright version | V1.2       | 12/28/2011    |
| Amend the bin code                               | V1.3       | 12/29/2011    |
| Amend the brightness/ Wavelength                 | V1.4       | 04/03/2012    |
| Update drawing and packing spec                  | V2.0       | 10/12/2013    |
| Update dimension                                 | V2.1       | 06/28/2016    |

# **Disclaimer**

QT-BRIGHTEK reserves the right to make changes without further notice to any products herein to improve reliability, function or design. QT-BRIGHTEK does not assume any liability arising out of the application or use of any product or circuit described herein; neither does it convey any license under its patent rights, nor the rights of others.

# **Life Support Policy**

QT-BRIGHTEK's products are not authorized for use as critical components in life support devices or systems without the express written approval of QT-BRIGHTEK. As used herein:

- 1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into the body, or (b) support or sustain life, and (c) whose failure to perform when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in a significant injury of the user.
- 2. A critical component in any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

| Product: QBLP677-RGB2 (High Bright) | Date: June 28, 2016 | Page 10 of 10 |
|-------------------------------------|---------------------|---------------|
|                                     | Version# 2.1        |               |