



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





Technical Information

bioFila® silk & linen


By: Benno Besler & Eva Besler
from: 7. November 2014
Version: 2

GENERAL INFORMATION

bioFila® silk and bioFila® linen are compounds of biopolymers designed for 3D printing and also qualified for extrusion and injection molding.

The newest material information you'll find on our homepage: <http://www.two-bears.eu>, section data sheets.

Ender's classification of biopolymers:

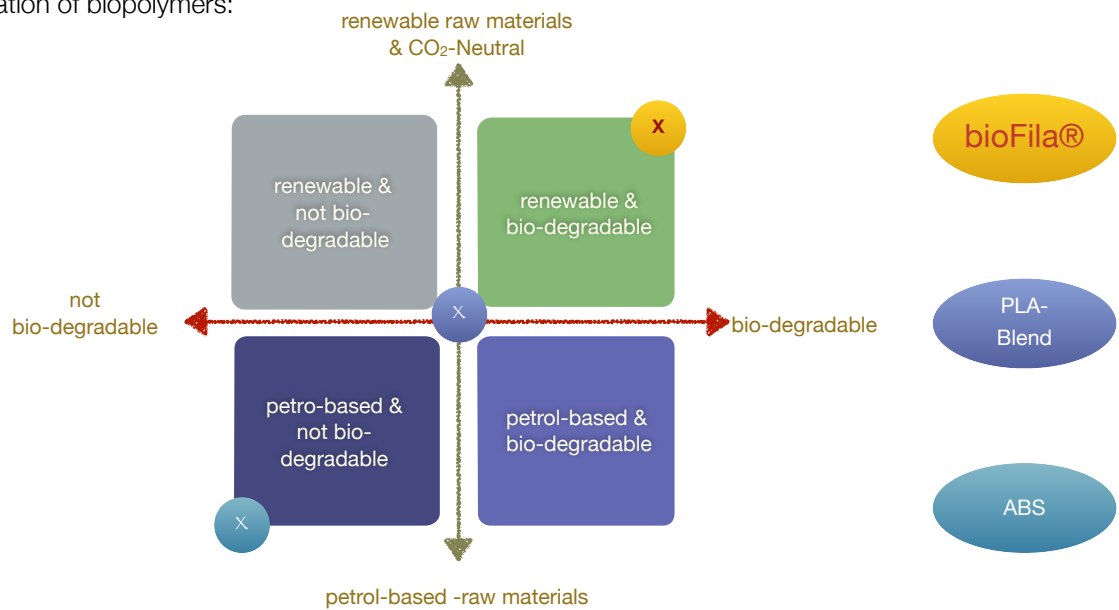

QUALIFICATION & CERTIFICATS

Renewable raw material

Our material are made out of biopolymers, which were produced out of renewable raw material, like wood, stark, lignin and we ensure, that they are not out of the food chain.

These resources do not depend on speculation of raw oil prices and they will be available in future, even after petrol time.

Bio-degradable

bioFila® silk and bioFila® linen are both tested and conform with DIN/ISO 14851/14852.

That means that the material is biodegradable like wood and will be complete re-integrated in natural process and do not pollutes the environment, like standard plastics.

No waste, no impact to the environment and humans. The perfect material for the industrial future.

Food-save material

The material is tested as food-safe and is conform with the following standards

bioFila® linen:

EG 1935/2004 from 13.11.2004

Germany: Lebensmittel-, Bedarfsgegenstände- und Futtermittelgesetz (LFGB from 24.07.2009)

EU 10/2011 from 14.01.2011

bioFila® silk:

EG 1935/2004 from 13.11.2004

Germany: Lebensmittel-, Bedarfsgegenstände- und Futtermittelgesetz (LFGB from 24.07.2009)

EU 10/2011 from 14.01.2011

U.S. Food and Drug Administration(FDA)

21 CFR § 177.1660 21 CFR § 182

21 CFR § 184

21 CFR § 186

21 CFR § 175.105 "Adhesives"

21 CFR § 175.300 "Resinous and polymeric coatings"

21 CFR § 176.170 "Components of paper and paperboard in contact with aqueous and fatty foods"

21 CFR § 176.200 "Defoaming agents used in coatings"

21 CFR § 177.2600 "Rubber articles intended for repeated use"

21 CFR § 178.2010 "Antioxidants and/or stabilizers for polymers".

Reach Conformity

Our material is conform with the REACH requests. A certificate is available on our homepage.

3D PRINTING PARAMETERS

Temperatures & speed

Depending for the printer the temperatures should be in the following range:

Product	Dim.	bioFila® silk	bioFila® linen
Hotend	(°C)	165-195	175 -230
Heat-bed	(°C)	55°C	55°C
speed	mm/sec	30 - 90	30 -90
decomposition temperature	°C	215	235

Attention:

Please be aware, that you will get a change in the surface if you print higher than the decomposition temperature.

With bioFila® linen you can change the surface form smooth to rough if you printer with a higher temperature than 205°C. That can be used for some very interesting special effects and designs.

Start easy printing

The printing with bioFila is very easy. Here a short description how to start.

1. Start in park position and with the lowest temperature (see table)
2. Try to extrude with your hot-end 10mm material.
3. If the material sticks, increase the temperature by 5 degrees and continue with point 2 until the material start to flow. This is the minimum temperature for printing.
4. With 10 degree higher than the minimum temperature you will have the best process temperature for printing with the lowest speed (here 30mm/sec)

Optimization of printing

If you want to increase the speed of printing you normally need some optimization loops.

As rule of thumb you should increase the temperature by 10°C if you print 20mm/s faster.

At the end the sojourn time is responsible for the material temperature, which should not be higher than the decomposition temperature. If you print with very high speed, you have to minimize the ramp-up and stop times to prevent / minimize a decomposition of the material.

For any problems with the printing, don't hesitate to contact us and we will help you to solve it.

EXTRUSION & INJECTION MOLDING

Both materials are tested for injection molding and extrusion, so it's easy for you to use prototype parts out of the 3D printer and transfer the results to a mass production line. General you will get better mechanical results in your extrusion or injection molding than in 3D-printing. That will be a safety margin for your design.

You will be faster and better if you use bioFila® from design to production.

For any question or support, don't hesitate to contact us.

MATERIAL DATA OVERVIEW

bioFila vs. PLA & ABS

Measurement	Test method	Dim.	bioFila silk	bioFila linen	PLA	ABS
Density 23°C	DIN EN ISO 1183	g/cm ³	1,25	1,40	1,28	1,07
Tensile test Stress at yield	DIN EN ISO 527-2	MPa	53	51	55	48
Tensile modulus	DIN EN ISO 527-1	GPa	2,50	2,70	5,10	2,20
Charpy impact strength 23°C	DIN EN ISO 179/1eU	kJ/m ²	60	58	8	55
Softening temperatur (Vicat / VST A50)	DIN EN ISO 306	°C	57	58	60	100
Melding temperature	ISO 11357	°C	165	153	180	180

This information and all technical and other advice are based on twoBEars's present knowledge and experience. However, twoBEars assumes no liability for such information or advice, including the extent to which such information or advice may relate to third party intellectual property rights. twoBEars reserves the right to make any changes to information or advice at any time, without prior or subsequent notice. twoBEars disclaims all representations and warranties, whether express or implied, and shall have no liability for, merchantability of the product or its fitness for a particular purpose (even if twoBEars is aware of such purpose), or otherwise. twoBEars shall not be responsible for consequential, indirect or incidental damages (including loss of profits) of any kind. It is the customer's sole responsibility to arrange for inspection and testing of all products by qualified experts. Reference to trade names used by other companies is neither a recommendation nor an endorsement of the corresponding product, and does not imply that similar products could not be used.

Contact:

**twoBEars Gbr,
Benno & Eva Besler
Hufe 11
19303 Tewswoos
Germany
info@two-bears.eu**