

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China









POWER TRANSFORMER CHASSIS MOUNT: TOROIDAL MEDICAL SERIES



VPM48-3330

Description:

The toroidal construction inherently reduces stray fields, increases efficiency and minimizes size compared to traditional El transformers. The addition of a Flux Band further reduces the remaining stray fields. The shield between Primary and Secondary improves safety, reduces common mode signals and minimizes leakage current. Built with a Class F (155°) insulation system. A 140°C self-resetting thermal switch is included in each primary.

Electrical Specifications (@25C)

1. Maximum Power: 160VA

2. Input Voltages: 100, 120, 220, 240VAC, 50/60Hz

3. Output Voltages: 24VAC @6.66A or 48VAC CT @ 3.33A 4. Voltage Regulation: 7.5% TYP from full load to no load

5. Temperature Rise: 50°C TYP

6. Hipot: 4000VAC, Primary to Secondary, Primary & Secondary to Shield & mounting surface

7. Efficiency: 92% TYP. @ full load

8. Earth Leakage: ≤10μA (See Fig. 1), Patient Leakage: ≤ 25μA (see Fig. 2)

Agency File:

UL: File E122529, UL 60601-1/(R) 2012 Medical Electrical Equipment – Part 1 with 2 MOPP CE: ES 60601-1 (IEC 60601-1:2005, MOD)

cUL: C22.2 No. 60601-1:14, Medical Electrical Equipment – Part 1 CB Certified.





Dimensions: Inches (mm)

O.D.	I.D.	HT.*
4.4 (113)	1.6(40)	2.0(52)

*Add 0.188 (3) to the height for mounting hardware

Weight: 1.8Kg

Mounting:

Transformer is provided with one metal mounting plate, two rubber pads, M6 x 60mm bolt, nut, spring and flat washer.

Connections:

Transformer is provided with8" (203mm) long, 0.25" (6.35mm) stripped and tinned, stranded UL 1015 lead wire. Primaries are 22AWG, Secondaries are 18AWG, and Shield is 20AWG. The GRN/YEL shield lead is typically grounded. Do not lift transformer by leads!

Input Options:

100VAC: Input to Gray & Blue, jumper White & Brown, jumper Blue & Violet. **120VAC:** Input to White & Blue, jumper White & Brown, jumper Blue & Violet.

220VAC: Input to Gray & Violet, jumper Blue & Brown **240VAC:** Input to White and Violet, jumper Blue & Brown

Output Options:

24VAC: Output from Black & Red, jumper Black & Orange, jumper Red to Yellow

48VAC: Output from Black & Yellow, jumper Red & Orange

Primary and secondary windings are designed to be connected in series or parallel. Windings are not intended to be used independently.


RoHS Compliance: Meets the requirements of 2011/65/EU, known as the RoHS 2 initiative.


* At printing, this document is considered "uncontrolled". Contact Triad Magnetics' website for current version

Web: www.TriadMagnetics.com Phone 951-277-0757 Fax 951-277-2757

460 Harley Knox Blvd. Perris, California 92571



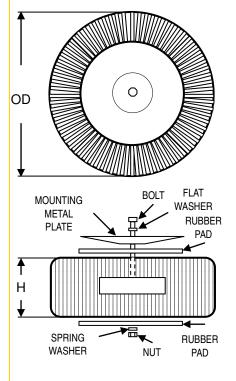

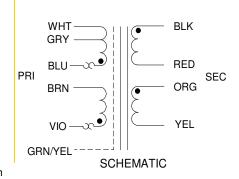

Publish Date: July 7, 2016



POWER TRANSFORMER **CHASSIS MOUNT:** TOROIDAL MEDICAL SERIES



Earth Leakage Current:

Vin: Apply 264VAC @60Hz, BLU & BRN - YEL/GRN

Connect resistor and meter between: RED & ORG - YEL/GRN

Leakage Current = 10 **uA MAX**

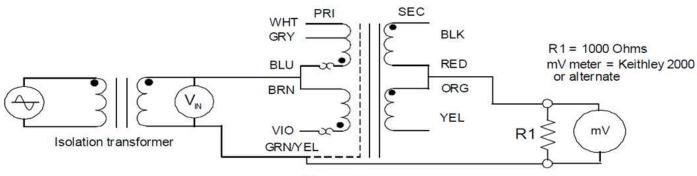


Figure 1

Patient Leakage Current:

V_{in}: Apply 264VAC @60Hz, WHT - VIO,

(Tie BLU & BRN, Tie RED & ORG)

GRN/YEL - BLK = 25 uARMS MAX GRN/YEL - Red & ORG = 25 uARMS MAX GRN/YEL - YEL = 25 uARMS MAX

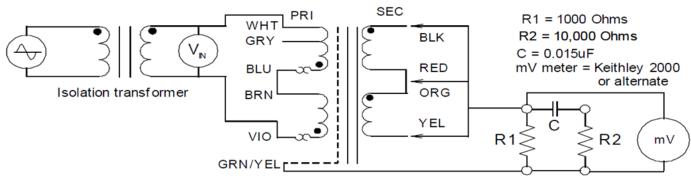


Figure 2