



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts,Customers Priority,Honest Operation,and Considerate Service",our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



SE880 EVK User Manual

1v0301048 Rev. 1 – 2013-01-16



- 5.4. Receiver Commands 22
 - 5.4.1. Sending Resets 23
 - 5.4.2. Switch Protocol..... 23
 - 5.4.3. Setting the IC Configuration 25
 - 5.4.4. Logging Data 27
- 6. APPENDIX 29**
 - 6.1. Internal LNA and Antenna..... 29
 - 6.1.1. Active Antenna 29
 - 6.1.2. Passive Antenna 29
- 7. Document History 30**



1. Introduction

1.1. Scope

Scope of this document is to give an overview of the Evaluation kit of the GPS standalone module SE880.

1.2. Audience

This document is intended for customers who are evaluating one or more products in the applicability table.

1.3. Contact Information, Support

For general contact, technical support, to report documentation errors and to order manuals, contact Telit Technical Support Center (TTSC) at:

TS-EMEA@telit.com
TS-NORTHAMERICA@telit.com
TS-LATINAMERICA@telit.com
TS-APAC@telit.com

Alternatively, use:

<http://www.telit.com/en/products/technical-support-center/contact.php>

For detailed information about where you can buy the Telit modules or for recommendations on accessories and components visit:

<http://www.telit.com>

To register for product news and announcements or for product questions contact Telit Technical Support Center (TTSC).

Our aim is to make this guide as helpful as possible. Keep us informed of your comments and suggestions for improvements.

Telit appreciates feedback from the users of our information.



2. Preparing for the SE880

What is Necessary

To use the SE880 Evaluation kit, you will need:

- FTDI USB Drivers
- SiRFLive2.0 and above or
- SiRFDemo
- A PC with a USB port that fulfills the minimum software requirements:
 - Windows XP
 - .NET Framework 2.0
 - This will be automatically installed by the SiRFLive package if necessary (internet connection is required).

2.1. Installing the USB Drivers

Before connecting the SE880 Evaluation Kit, install the necessary USB drivers.

- 1 Double-click the USB driver executable and follow the directions to install the USB drivers.

2.2. Installing SiRFLive

*****NOTE***** SiRFLive does not work on 64-bit OS machine at this time!

Minimum PC requirements:

- Pentium CPU 2 GHz
- 1 GB of RAM
- 100 MB hard drive

Recommended

- 2 GB of RAM
- 1280 x 1024 screen resolution



Ensure that all previous installation versions of SiRFLive have been uninstalled before installing any newer versions!

Install the current SiRFLive with the attached installer. Follow the installer directions until finished. Users should allow SiRFLive to install to the default location – C:\Program Files\SiRF\SiRFLive, but it can be changed if necessary.



3. SE880 Evaluation Kit

3.1. What's in the Box



3.2. Jupiter Evaluation Board


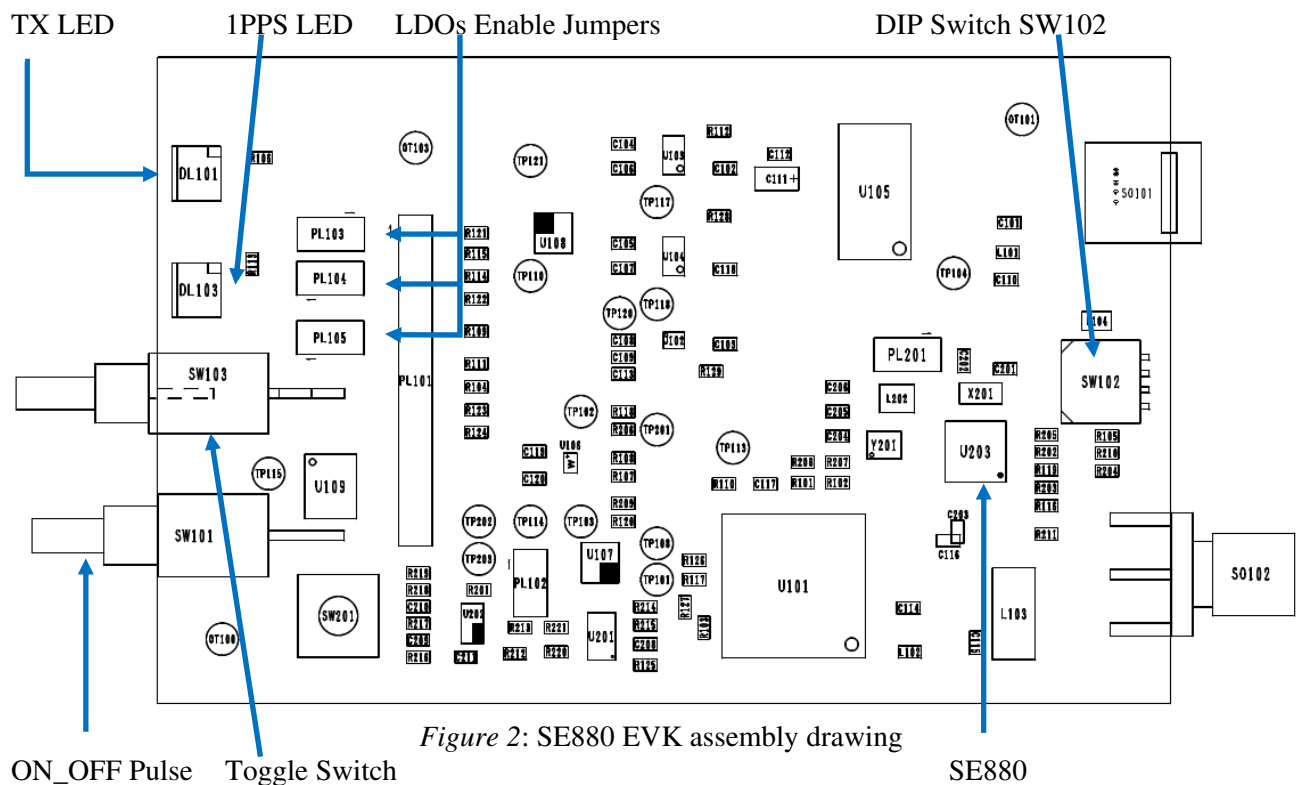


Figure 2: SE880 EVK assembly drawing

| <u>Item</u> | <u>Function</u> |
|---------------------------|--|
| TX LED | LED that is tied to the USB to UART bridge TX line. The LED blinks whenever there is activity on the TX line. |
| 1PPS LED | LED that pulses ON at ¼ a second and OFF at ¾ a second, indicating a fix with the receiver. |
| Toggle Switch | Switch that acts on the enable signals of the 3V and SE880 VDD; it permits to turn on and off these two voltages while living the SE880 VKA on, thus allowing to simulate a battery backed-up configuration. |
| ON_OFF Pulse | Pushbutton that sends a 1.8V voltage pulse to the ON_OFF input of the SE880 module. |
| DIP Switch | Externally accessible DIP switch for power supply, active antenna and boot mode configuration (please refer to paragraph 3.2.1 for details) |
| LDO Enable Jumpers | These jumpers allow the connection/disconnection of the enable signals of the 3 LDOs available on the board. |



3.2.1. Switch Configuration

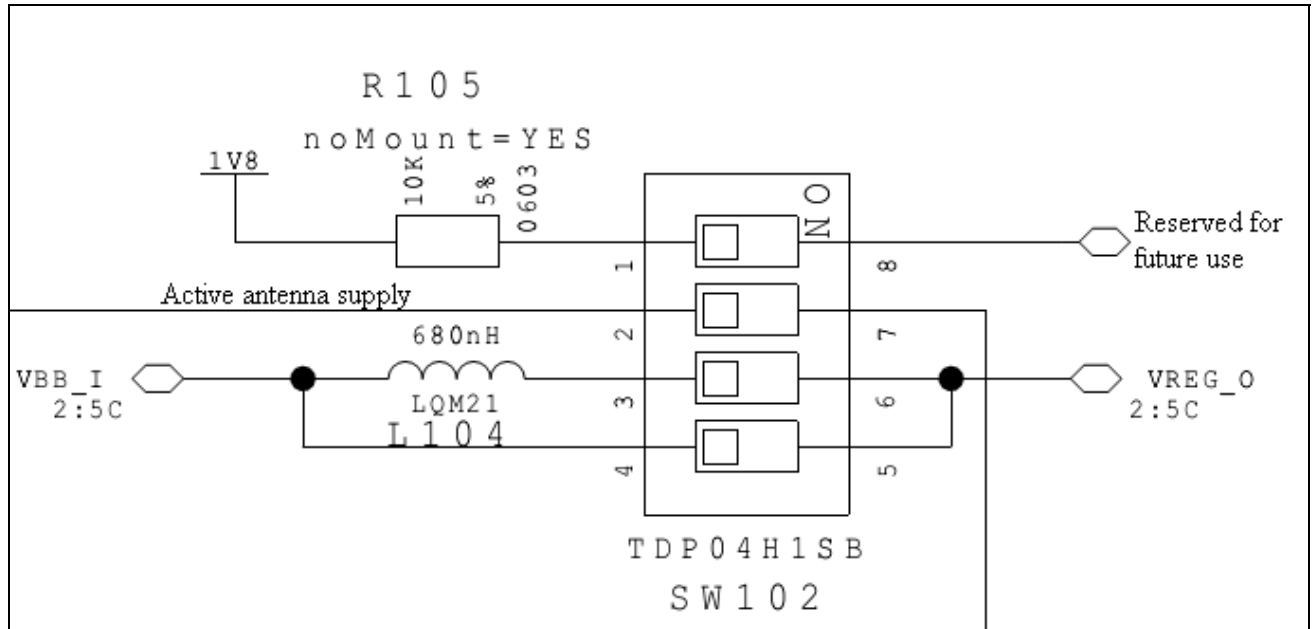

| Switch position | Function in ON state |
|-----------------|---|
| 1 | Reserved fo future use |
| 2 | Active antenna supply connection |
| 3 | L104 connection for SE880 switching mode power supply |
| 4 | L104 bypass for SE880 LDO mode power supply |

Notes:

- Each switch is in ON state when in low position.
- Switches in position 3 and 4 must be active alternatively, since they are acting on the same signal.



4. Step-by-Step: Installing and running the SE880 EVK

4.1. Step-by-Step: First Time Connection

1. Before connecting the evaluation board, ensure that the USB drivers have been installed.
2. As soon as the evaluation board is connected to the PC, it will be detected and installed.

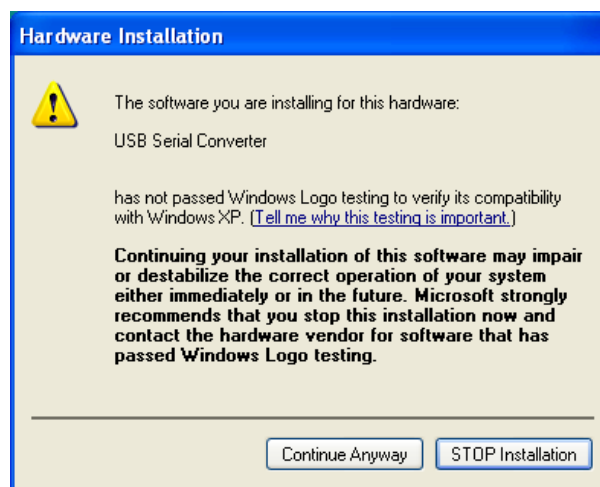


Figure 3: USB installation, select “Continue Anyway” to proceed.

3. After the evaluation board has been installed, check the “Device Manager” window for the evaluation board COM port number. This information is needed for use with the GPS tools.

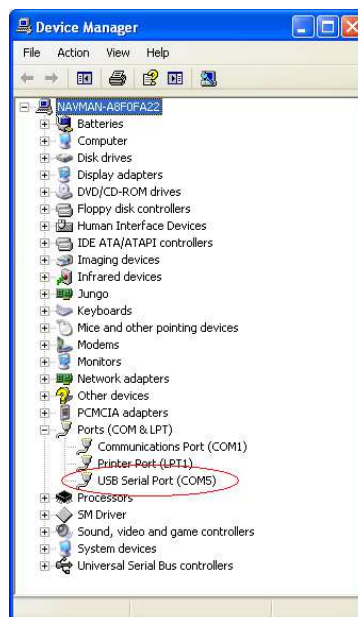


Figure 4: In this case, the COM port is assigned as COM5



5. SE880 on SiRFLive

Launch the SiRFLive application.



5.1. Main Interface

After launching SiRFLive, first notice the application’s main interface.

File Receiver Features AGPS Window Help

Figure 5: Main Menu Bar



Figure 6: Main Tool Bar

5.2. Connecting To the SE880

The user can utilize either the *Main Menu Bar* or the *Main Tool Bar*.

5.2.1. Main Menu Bar

Under the option “Receiver” on the *Main Menu Bar*, there is a selection “Connect. . .” This will open the Receiver settings for connection.

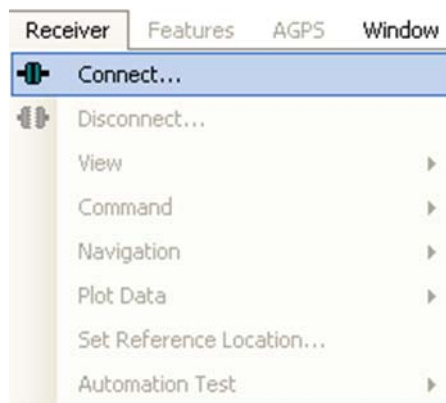


Figure 7: Connect to Receiver

5.2.2. Main Tool Bar



Select the “Receiver Settings” button



Or the “Connect” button



5.2.3. Rx Port Settings

Select the GSD4e Product Family, RS232/USB, and the Correct COM Port.

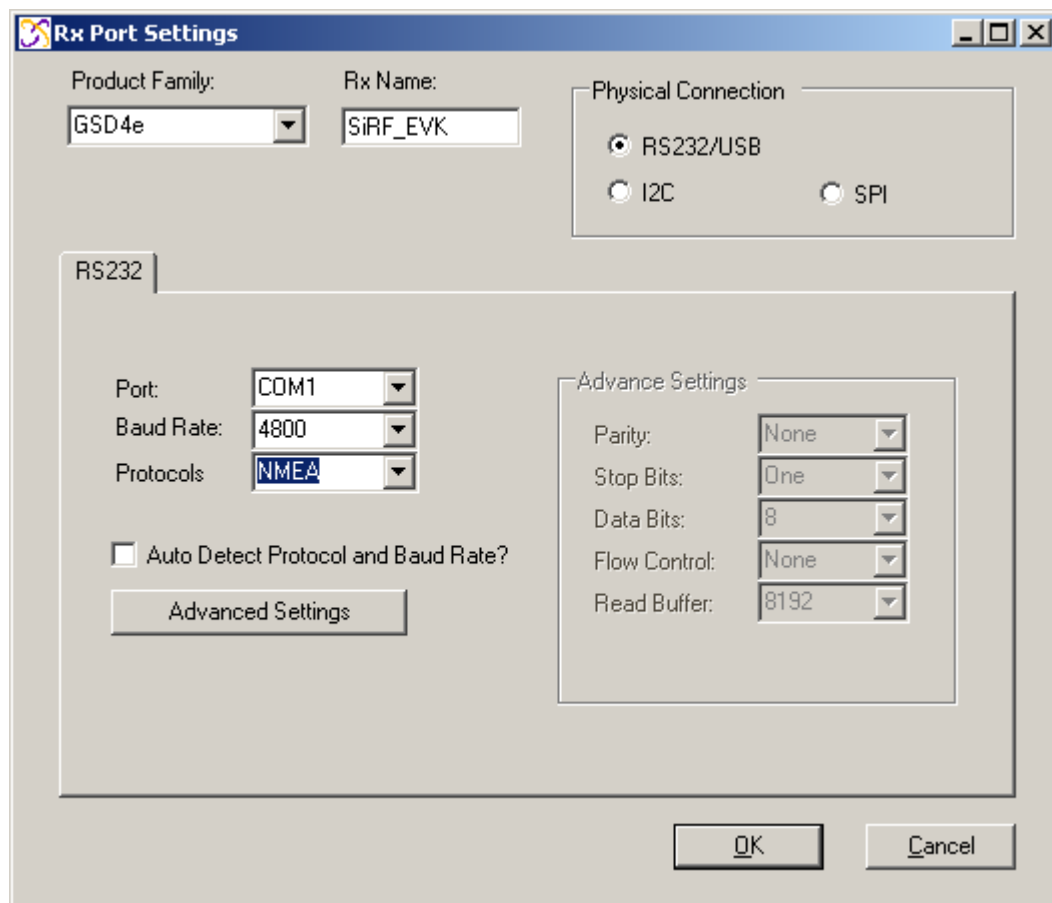



Figure 8: The Rx Port Connection Window



Default Baud rate for NMEA is 4800, and 115200 for OSP.

5.3. SiRFLive Windows

After a successful connection with the receiver is established, the default SiRFLive windows should be arranged and become filled with data.



If not all the default windows are arranged or opened, under the *Main Menu Bar*, go to “Window” > “Restore Layout” > “Default.”

5.3.1. Signal View



(main tool bar icon)

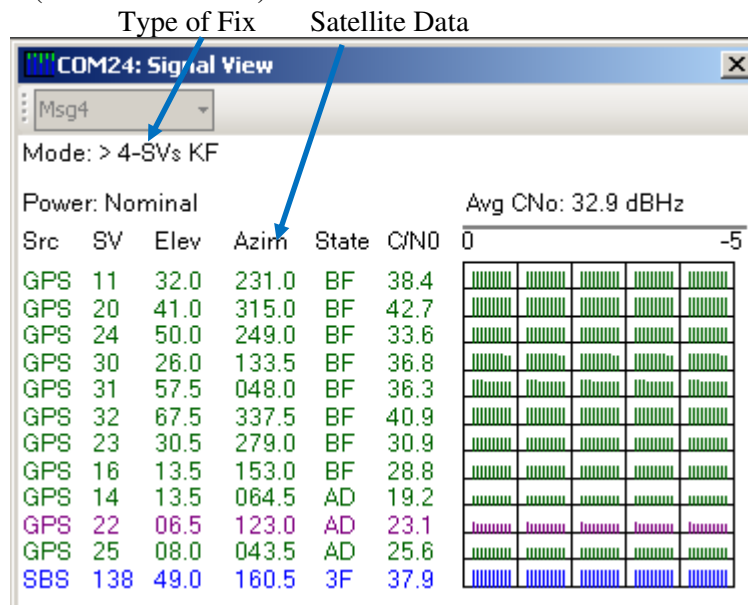


Figure 9 Shows the satellite signal levels.



5.3.4. Location View



(main tool bar icon)

Displays more detailed information regarding the UTC, TOW, Latitude, Longitude, Altitude, etc.

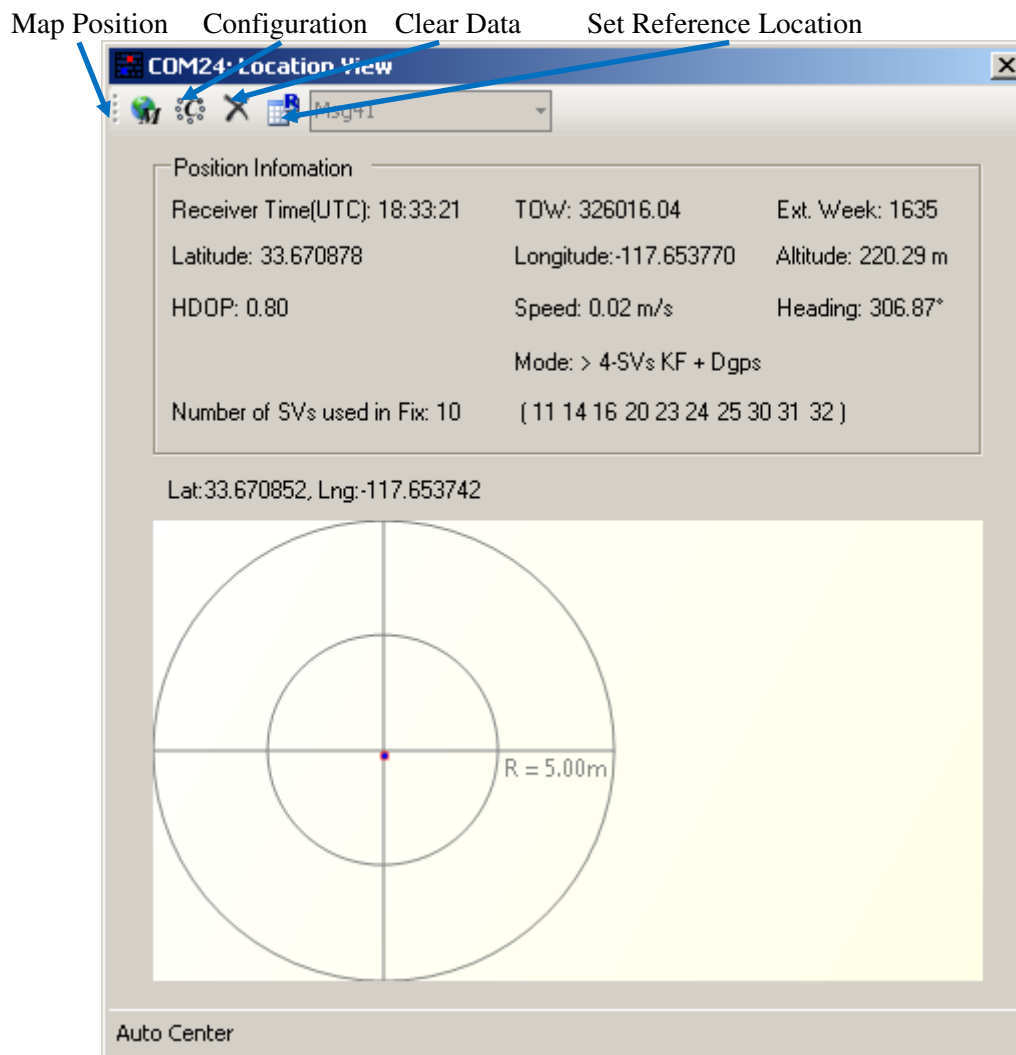



Figure 12: Location view



Map position button requires Internet access to work.



5.4. Receiver Commands

Most of the Receiver Commands can be accessed through the *Main Menu Bar* under “Receiver” > “Command.” There are also shortcuts on the *Main Tool Bar* which will be covered in this section.

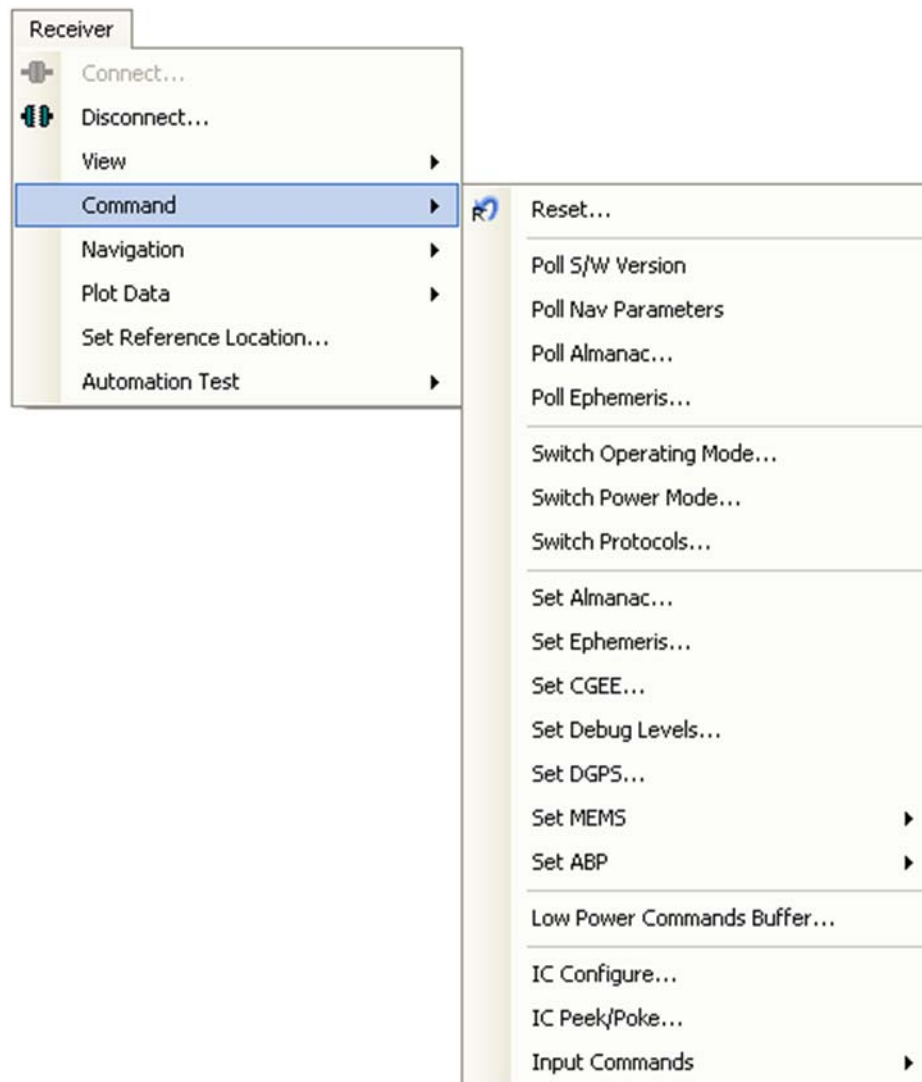


Figure 13: All the commands for the receiver.



All of the *Receiver Commands* become available in One Socket Protocol (OSP) only.

5.4.1. Sending Resets



(main tool bar icon)

1. Select “Reset. . .” under the *Main Menu Bar* “Receiver” > “Command” > “Reset. . .”

Or

Select the Reset icon on the *Main Tool Bar*.

The “Reset” window should open.

Reference Location allows the user to change the position used as the reference. This helps determine position accuracy in conjunction with Time-To-First-Fix values.

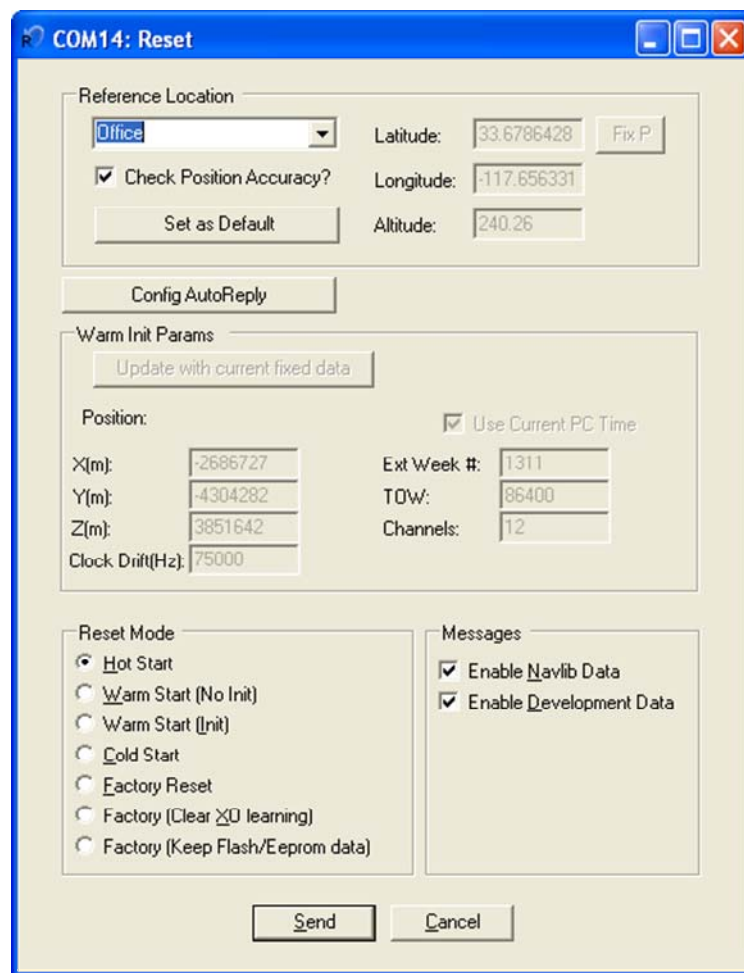


Figure 14: Reset window.



Resets are used to measure the TTF of the receiver. The TTF/Nav Accuracy window conveniently displays the TTF in seconds and Navigation accuracy based on the Reference Location.

5.4.



Switch Protocol

The number of available commands in NMEA is limited compared to OSP. Switching to OSP for testing is recommended.

1. On the *Main Menu Bar*, select “Receiver” > “Command” > “Switch Protocols. . .”

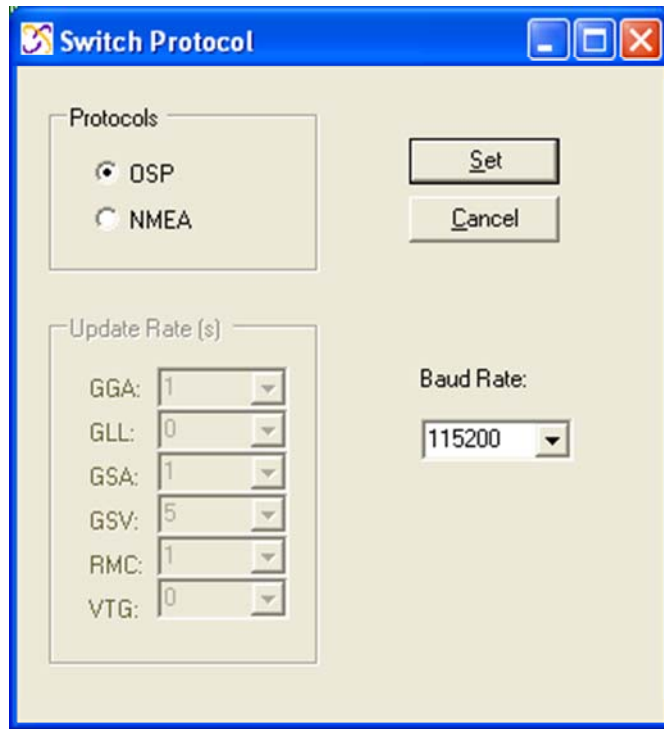


Figure 15: Switching to OSP protocol with its default 115200 baud rate

2. Click “Set” to apply settings.

Switching to NMEA should be similar.



5.4.3. Setting the IC Configuration

The SE880 module has two LNA modes, a high gain mode, and a low gain mode. The high gain mode is ideal for passive antenna applications, while the low gain mode is ideal for active antenna applications.

| LNA Gain Setting | Gain (dB) | Noise Figure (dB) | Recommended External Gain Range |
|------------------|-----------|-------------------|---------------------------------|
| Low | 6.0-10.0 | 8.5-9.5 | 16-30 |
| High | 16.0-20.0 | 1.2-2.0 | 8-18 |

Table 1: LNA information and antenna gain requirements

The development kit hardware is set up to use an active antenna. The antenna feed is outputting 3.3V for the antenna. To ensure that no cross-correlation occurs, ensure that the correct LNA gain setting is selected for the chosen GPS antenna for use. In this case, the provided GPS antenna, the M820B-S, has 16dB typical gain.

1. On the *Main Menu Bar*, select “Receiver” > “Command” > “IC Configure. . .”
2. Click on “Advanced. . .” to open the IC Configuration fields.



A message will pop up warning about incorrectly configuring the IC parameters. Ensure that you are aware of the correct parameter changes so as not to render your receiver non-operational.

- i. Click “Yes” to proceed.
- ii. Under the selection “LNA Gain Mode:” choose “Low” from the drop down menu. Choosing Low will configure the internal LNA to its low gain mode. This will make the Evaluation Kit better fitted to work with an active antenna. *Figure 16* displays the IC Configuration window.

