



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts,Customers Priority,Honest Operation,and Considerate Service",our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China






GS2B, GS2BL MS90387-1 GS2B-CR

GS2B-CR MAINTENANCE ONLY


Occasionally lubricate pivot and sliding surfaces as indicated, with Dow #7 compound, light consistency.

- * Lubrication locations (remove cover as needed)

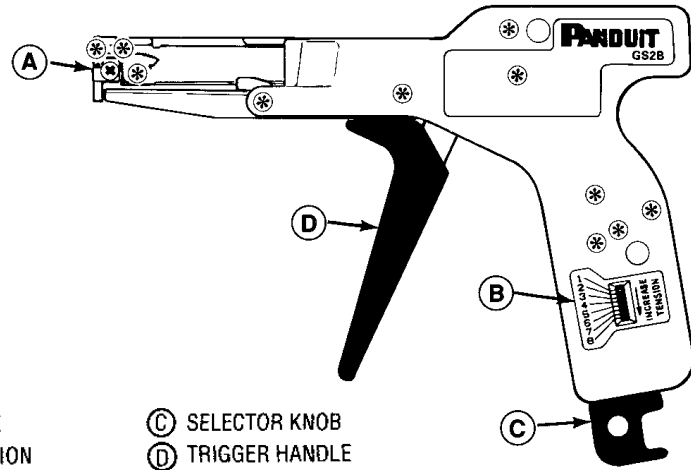


- A NOSE
- B TENSION INDICATOR
- C SELECTOR KNOB
- D TRIGGER HANDLE


OPERATING INSTRUCTIONS

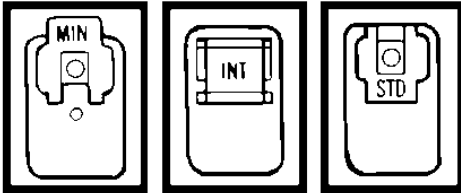

1. Reading the selector knob from the bottom of tool, flip knob to correct position for cross-section of cable ties being installed.
MIN.: .10" (2.5mm) WIDE CABLE TIES
INT.: .14" (3.6mm) WIDE CABLE TIES
STD.: .19" (4.8mm) WIDE CABLE TIES

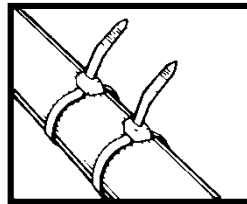


2. Loop cable tie around bundle with head out and insert tip through head. Pull tie up snug on bundle by hand.

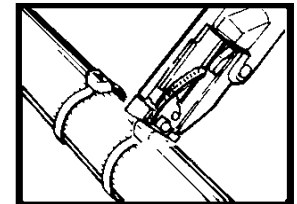

3. Insert tail of cable tie into tool (as shown). With nose of tool flush to cable tie head, squeeze trigger handle. Tool will tighten cable tie and cut off excess.


ADJUSTMENT INSTRUCTIONS

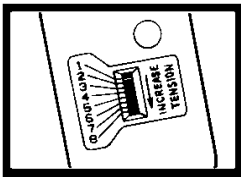

1. There is a TENSION INDICATOR on the tool. Suggested tension settings are:
No. 3 for MIN.
No. 5 for INT.
No. 8 for STD.

These are factory set for maximum tension.

- * No. 1 for .6SM/.7M

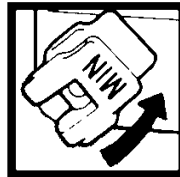

2. To DECREASE TENSION, turn knob counter clockwise.

TOOL MAINTENANCE GS2B, GS2BL

These tools require no special operator maintenance.

REPLACEMENT KITS AND ACCESSORIES

Blade Replacement Kit: K2-BLD2
Tension Locking Kit: TTLK3
(see next page for instructions)