



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





UDS2100

Device Server User Guide

Intellectual Property

© 2017 Lantronix. All rights reserved. No part of the contents of this book may be transmitted or reproduced in any form or by any means without the written permission of Lantronix.

Lantronix is a registered trademark and *DeviceInstaller* is a trademark of Lantronix, Inc. in the United States and other countries.

Patented: <http://patents.lantronix.com>; additional patents pending.

Windows and *Internet Explorer* are registered trademarks of Microsoft Corporation. *Mozilla* and *Firefox* are registered trademarks of the Mozilla Foundation. *Chrome* is a trademark of Google. *Opera* is a trademark of Opera Software ASA. All other trademarks and trade names are the property of their respective holders.

Warranty

For details on the Lantronix warranty policy, please go to our Web site at www.lantronix.com/support/warranty.

Contacts

Lantronix

7535 Irvine Center Drive
Suite 100
Irvine, CA 92618, USA

Toll Free: 800-526-8766
Phone: 949-453-3990
Fax: 949-453-3995

Technical Support

Online: www.lantronix.com/support

Sales Offices

For a current list of our domestic and international sales offices, go to the Lantronix web site at www.lantronix.com/about/contact.

Disclaimer

The information in this guide may change without notice. The manufacturer assumes no responsibility for any errors that may appear in this guide.

Revision History

Date	Rev.	Comments
September 2006	A	Initial document
May 2007	B	Updated to reflect firmware version 6.5.0.0, including UDP Broadcast; added two more Monitor Mode commands and diagrams of mounting brackets.
August 2008	C	Updated for firmware version 6.6.0.0.
January 2009	D	Reference to documentation on Lantronix website; minor corrections
October 2012	E	Updated for firmware version 6.8.0.0.
June 2015	F	Updated for firmware version 6.11.0.0.
December 2017	G	Updated enhanced password information.

Table of Contents

Intellectual Property _____	2
Warranty _____	2
Contacts _____	2
Disclaimer _____	2
Revision History _____	3
List of Figures _____	8
List of Tables _____	8
1: Using This Guide _____	9
Purpose and Audience _____	9
Chapter Summary _____	9
Additional Documentation _____	10
2: Introduction _____	11
Applications _____	11
Application Examples _____	11
Protocol Support _____	13
Additional Features _____	13
Configuration Methods _____	13
Product Information Label _____	14
3: Installation of UDS2100 _____	15
Package Contents _____	15
Installing the UDS _____	15
Required Information _____	16
Hardware Address _____	16
IP Address _____	16
4: Using DeviceInstaller _____	18
Installing DeviceInstaller _____	18
Assigning an IP Address _____	18
Adding the Unit to the Manage List _____	19
Accessing the UDS2100 Using DeviceInstaller _____	19
Viewing the Current Configuration _____	19
Next Step _____	21
Assigning the IP Address: Serial Port Login _____	22
5: Configuration Using Web Manager _____	23
Accessing UDS2100 Using DeviceInstaller _____	23
Network Configuration _____	25
Network Mode _____	25
Automatic IP Address Configuration _____	25
Static IP Address Configuration _____	26
Ethernet Configuration _____	27
Server Configuration _____	27

Host List Configuration _____	29
Channel 1 and Channel 2 Configuration _____	30
Serial Settings _____	30
Connection Settings - TCP _____	33
Connection Settings - UDP _____	36
Apply Settings _____	37
Apply Defaults _____	37
6: Configuration via Telnet or Serial Port (Setup Mode)	39
Accessing Setup Mode _____	39
Telnet Connection _____	39
Serial Port Connection _____	40
Exiting Setup Mode _____	41
7: Setup Mode: Server Configuration	42
Server Configuration (Option 0) _____	42
IP Address _____	42
Set Gateway IP Address _____	42
Netmask: Number of Bits for Host Part _____	43
Set DNS Server IP Address _____	43
Change Telnet/Web Configuration Password _____	43
DHCP Name _____	44
Enable DHCP FQDN Option _____	44
8: Setup Mode: Channel Configuration	45
Channel 1 (Option 1) _____	45
Baudrate _____	45
I/F (Interface) Mode _____	46
Flow _____	46
Port Number _____	47
Connect Mode _____	47
Send the Escape Sequence (+++) in Modem Mode _____	55
Show IP addr after 'RING' _____	55
Auto Increment Source Port _____	55
Remote IP Address _____	55
Remote Port _____	55
DisConnMode _____	55
Flush Mode (Buffer Flushing) _____	56
Pack Control _____	57
Packing Interval _____	58
Trailing Characters _____	58
Send Characters _____	58
DisConnTime (Inactivity Timeout) _____	58
Send Characters _____	58

Telnet Terminal Type _____	59
Channel (Port) Password _____	59
9: Setup Mode: Advanced Settings	60
Expert Settings (Option 5) _____	60
TCP Keepalive Time In Seconds _____	60
ARP Cache Timeout In Seconds _____	60
CPU Performance _____	60
Disable Monitor Mode at Bootup _____	61
HTTP Port Number _____	61
MTU Size _____	61
TCP Re-Transmission Timeout _____	61
Enable Alternate MAC _____	61
Ethernet Connection Type _____	61
Security Settings (Option 6) _____	62
Disable SNMP _____	62
SNMP Community Name _____	62
Disable Telnet Setup _____	62
Disable TFTP Firmware Update _____	63
Disable Port 77FE (Hex) _____	63
77FEh Access Mode _____	63
Disable Web Server _____	63
Disable Web Setup _____	64
Disable ECHO Ports _____	64
Enable Enhanced Password _____	64
Default Settings (Option 7) _____	64
Channel 1 & 2 Configuration Defaults _____	64
Expert Settings Defaults _____	64
Security Settings Defaults _____	65
10: Firmware Upgrades	66
Obtaining Firmware _____	66
Reloading Firmware _____	66
Using TFTP: Graphical User Interface _____	66
Using TFTP: Command Line Interface _____	67
Recovering the Firmware Using the Serial Port and DeviceInstaller _____	67
11: Monitor Mode	69
Entering Monitor Mode Using the Serial Port _____	69
Entering Monitor Mode Using the Network Port _____	69
Monitor Mode Commands _____	69
A: Troubleshooting and Contact Information	72
LEDs _____	72
Problems and Error Messages _____	74

Lantronix Technical Support _____	76
B: Connections and Pinouts	77
Serial Port _____	77
Serial Connector Pinouts _____	77
Modem Cable _____	78
Network Port _____	78
Reset Button _____	78
Ethernet Connector Pinouts _____	79
Power Plug _____	79
C: Technical Specifications	80
D: Mounting Brackets	83
E: Alternative Ways to Assign an IP Address	84
DHCP _____	84
AutoIP _____	84
BOOTP _____	85
ARP and Telnet _____	85
F: Binary to Hexadecimal Conversions	86
Converting Binary to Hexadecimal _____	86
Conversion Table _____	86
Scientific Calculator _____	87
G: Compliance	88
RoHS, REACH and WEEE Compliance Statement _____	89
Index	90

List of Figures

Figure 2-1. Serial Tunneling Example	12
Figure 2-2. Direct TCP/IP or Redirector Configuration	12
Figure 2-3. Product Label	14
Figure 3-1. UDS2100 Connected to Serial Device and Network	15
Figure 5-1. Web Manager Login Window	24
Figure 5-2. Lantronix Web Manager	24
Figure 5-3. Network Settings	25
Figure 5-4. Server Settings	28
Figure 5-5. Hostlist Settings	30
Figure 5-6. Channel Serial Settings	31
Figure 5-7. TCP Connection Settings	33
Figure 5-8. UDP Connection Settings	36
Figure 5-9. Apply Settings and Apply Defaults	38
Figure 6-1. MAC Address	40
Figure 6-2. Setup Menu Options	40
Figure 7-1. Network Settings	42
Figure 8-1. Serial Port Settings	45
Figure 8-2. Interface Mode	46
Figure 8-3. Hostlist Option	51
Figure 9-1. Expert Settings	60
Figure 9-2. Security Settings	62
Figure 10-1. TFTP Window	67
Figure A-1. Diagnostic, Power, and Serial Port LEDs	73
Figure B-1. Serial Interface	77
Figure B-2. DB9 Male RS232 Serial DTE Connector	77

List of Tables

Table 7-1. BootP/DHCP/AutoIP options	42
Table 7-2. Standard IP Network Netmasks	43
Table 8-1. Interface Mode Options	46
Table 8-2. Common Interface Mode Settings	46
Table 8-3. Flow Control Options	47
Table 8-4. Reserved Port Numbers	47
Table 8-5. Connect Mode Options	48
Table 8-6. Manual Connection Address Example	50
Table 8-7. Modem Mode Messages	53
Table 8-8. Modem Mode Commands	54
Table 8-9. Disconnect Mode Options	56
Table 8-10. Flush Mode Options	57
Table 8-11. Pack Control Options	57
Table 10-1. Firmware Files	66
Table 11-1. Monitor Mode Commands	70
Table 11-2. Command Response Codes	71
Table A-1. UDS2100 LEDs	73
Table A-2. Problems and Error Messages	74
Table C-1. UDS2100 Technical Specifications	80

1: Using This Guide

Purpose and Audience

This guide provides the information needed to configure, use, and update the UDS2100 device server. It is for system administrators and those responsible for installing and maintaining the UDS.

Chapter Summary

The remaining chapters in this guide include:

Chapter	Description
2: Introduction	Describes the main features of the UDS and the protocols it supports.
3: Installation of UDS2100	Provides information for installing your unit and getting it up and running using DeviceInstaller or a serial port connection.
4: Using DeviceInstaller	Instructions for viewing the current configuration using DeviceInstaller.
5: Configuration Using Web Manager	Details using the Web Manager to set parameters such as port and server properties.
6: Configuration via Telnet or Serial Port (Setup Mode)	Provides instructions for accessing Setup Mode (command line interface) using a Telnet connection through the network or a terminal or terminal emulation program through the serial port.
7: Setup Mode: Server Configuration	Details the network (server) settings
8: Setup Mode: Channel Configuration	Details the serial port settings.
9: Setup Mode: Advanced Settings	Details expert and security settings and explains how to reset the unit to factory default values.
10: Firmware Upgrades	Provides instructions for obtaining the latest firmware and updating the UDS.
11: Monitor Mode	Provides instructions for accessing and using the command line interface to monitor the network and diagnose problems.
A: Troubleshooting and Contact Information	Describes common problems and error messages and how to contact Lantronix Technical Support.
B: Connections and Pinouts	Provides descriptions and illustrations of connection hardware.
C: Technical Specifications	Lists technical specifications for the UDS.
D: Mounting Brackets	Provides drawings and dimensions of the unit's mounting brackets.

Chapter	Description
E: Alternative Ways to Assign an IP Address	Provides detailed information about using DHCP, AutoIP, BOOTP, ARP, and Telnet to assign an IP address.
F: Binary to Hexadecimal Conversions	Provides instructions for converting binary values to hexadecimals.
G: Compliance	Provides Lantronix compliance information.

Additional Documentation

Visit the Lantronix Web site at www.lantronix.com/support/documentation for the latest documentation and the following additional documentation.

Document	Description
<i>UDS2100 Quick Start</i>	Provides the steps for getting the UDS2100 up and running.
<i>DeviceInstaller Online Help</i>	Provides instructions for using the Windows-based utility to configure the UDS2100 and other Lantronix device servers.
<i>“Live” Tutorials on the Lantronix Web Site (English)</i>	Explain and demonstrate assigning an IP address to the UDS and setting up the UDS and Com Port Redirector. See http://ltxfaq.custhelp.com/app/answers/detail/a_id/1119 .
<i>Com Port Redirector User Guide</i>	Provides information on using the Windows-based utility to create a virtual com port.

2: Introduction

The UDS2100 is a 2-port device server that provides a quick, simple, and cost-effective way to bring the advantages of data accessibility and remote management to devices not currently connected to a network.

Applications


The UDS family of Device Servers allows serial devices, such as those listed below, to connect and communicate over Ethernet networks using the IP protocol family (TCP for connection-oriented stream applications and UDP for datagram applications).

- ◆ Security alarms
- ◆ Access control devices
- ◆ Fire control panels
- ◆ Time/attendance clocks and terminals
- ◆ ATM machines
- ◆ Data collection devices
- ◆ RFID readers
- ◆ Universal Power Supply (UPS) management units
- ◆ Telecommunications equipment
- ◆ Data display devices
- ◆ Virtually any asynchronous RS-232, RS422, or RS485 device

Application Examples


Using a method called serial tunneling, the UDS encapsulates serial data into packets and transports them over Ethernet. Using two UDS units, connected by a network, virtual serial connections can extend across a facility or around the world.

Figure 2-1. Serial Tunneling Example

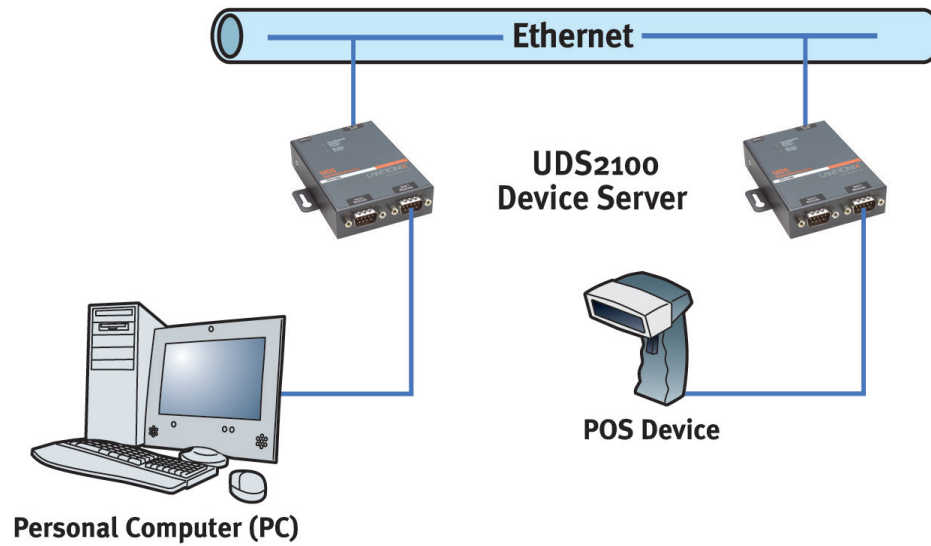

The Com Port Redirector software available for download at www.lantronix.com/support/downloads simplifies the integration process by extending the functionality of COM-port-based Windows™ applications. Virtual COM ports, mapped to remote device servers on the network, can replace direct serial connections.

Figure 2-2. Direct TCP/IP or Redirector Configuration

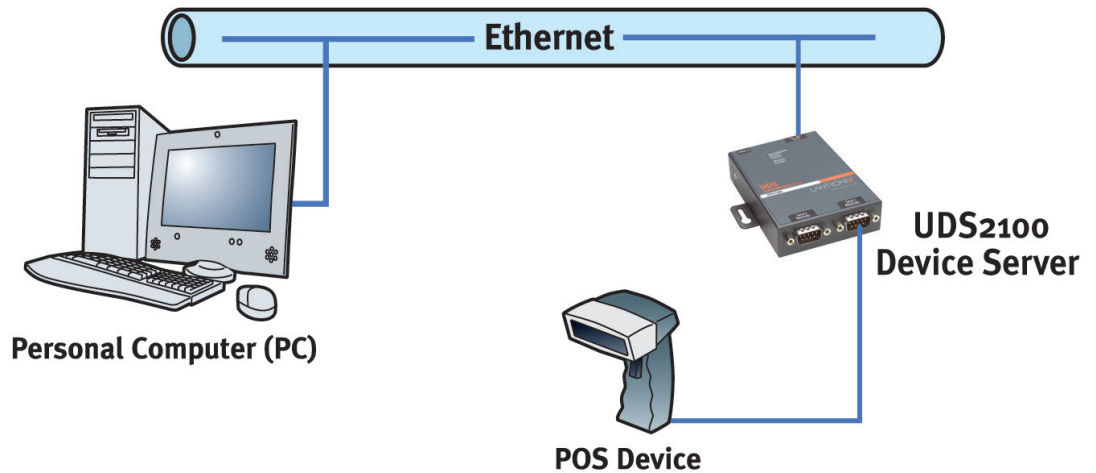

Note: For step-by-step instructions on configuring the UDS for serial tunneling or for use with the Com Port Redirector, see UDS Configuration Tutorials on the Lantronix web site: www.lantronix.com/support.

Protocol Support

The UDS uses the Internet Protocol (IP) for network communications and the Transmission Control Protocol (TCP) to assure that no data is lost or duplicated and that everything sent to the connection arrives correctly at the target.

Supported protocols include:

- ◆ ARP, UDP, TCP, BOOTP, ICMP, Telnet, TFTP, AutoIP, DHCP, HTTP, and SNMP for network communications.
- ◆ TCP, UDP, and Telnet for connections to the serial port.
- ◆ TFTP for firmware updates.
- ◆ IP for addressing, routing, and data block handling over the network.
- ◆ User Datagram Protocol (UDP) for typical datagram applications in which devices interact with other devices without a point-to-point connection.

Additional Features

Modem Emulation: In modem emulation mode, the UDS can replace dial-up modems. The unit accepts modem AT commands on the serial port and then establishes a network connection to the end device. This arrangement leverages network connections and bandwidth to eliminate dedicated modems and phone lines.

Built-in Web Server: The UDS includes a built-in web server for configuring the unit and displaying operating and troubleshooting information on the attached links to online support.

Configuration Methods

After installation, the UDS requires configuration. For the unit to operate correctly on a network, it must have a unique IP address on the network. There are three basic methods for logging into the UDS and assigning IP addresses and other configurable settings:

DeviceInstaller: Configure the IP address and other network settings on the UDS using a Graphical User Interface (GUI) on a PC attached to a network. (See [4: Using DeviceInstaller](#).)

Web Manager: Through a web browser, configure the UDS settings using the Lantronix Web Manager. (See [5: Configuration Using Web Manager](#).)

Serial and Telnet Ports: Use Setup Mode, a command line interface. There are two approaches to accessing Setup Mode: making a Telnet connection to the network port (9999) or connecting a terminal (or a PC running a terminal emulation program) to the unit's serial port. See [6: Configuration via Telnet or Serial Port \(Setup Mode\)](#).

Product Information Label

The product information label on the underside of the unit contains the following information about your specific unit:

- ◆ Bar Code
- ◆ Part Number
- ◆ Revision
- ◆ Manufacturing Date Code
- ◆ Serial Number (also the hardware Address or MAC Address)

Figure 2-3. Product Label



3: Installation of UDS2100

This chapter describes how to install your UDS2100 and get it up and running in the shortest possible time.


Package Contents

Verify and inspect the contents of the UDS2100 package using the following list. If any item is missing or damaged, contact your place of purchase immediately.

- ◆ UDS2100
- ◆ DB9F-to-DB9F Null Modem Cable (P/N 500-164-R)
- ◆ Power Supply
- ◆ Quick Start Guide

Installing the UDS

Figure 3-1. UDS2100 Connected to Serial Device and Network

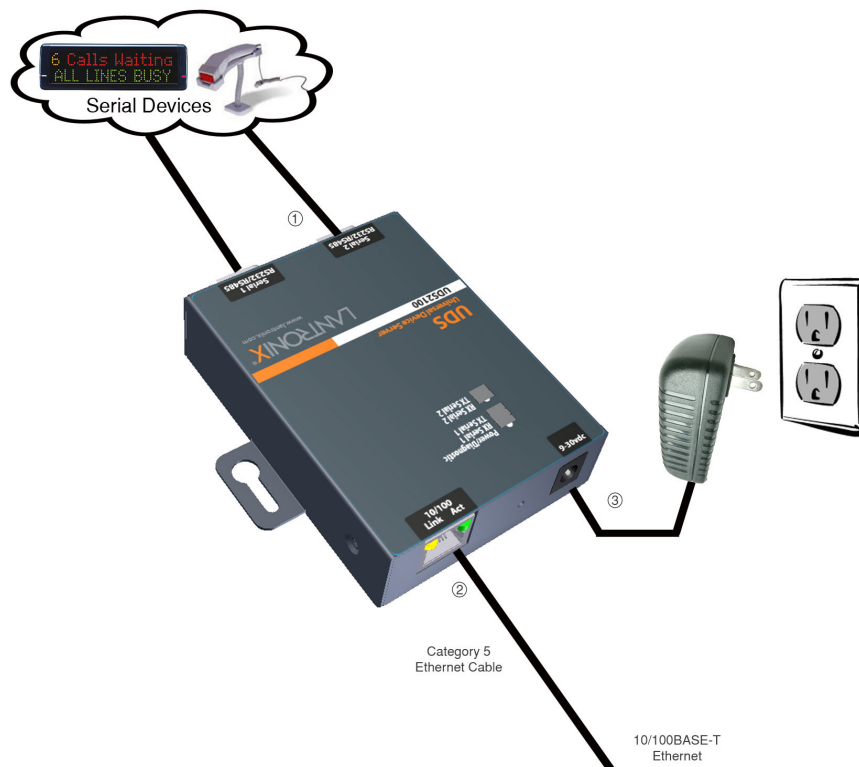

To install the unit:

To install the unit, complete the following steps in order. Refer to the numbers in the previous figure.

1. Connect a serial device to your unit. See [2: Introduction](#) for more information about what kinds of device attachments the unit supports.
2. Connect an Ethernet cable to the 10/100 port.
3. Supply power to your unit using the power supply that was included in the packaging.

Note: The required input voltage is 9-30 VDC (center +) (1.8W maximum power).

4. Supply power to the serial device.

Note: If you encounter a problem, please see [A: Troubleshooting and Contact Information](#).

Required Information

Before configuring the UDS, have the following information available:

Hardware Address

Take note of the unit's hardware address (also known as the Ethernet or MAC address). It is on the product label (see [Product Information Label](#)).

Hardware Address: 00 – 20 - 4a - _____ - _____ - _____

Or

Hardware Address: 00 - 80 - A3 - _____ - _____ - _____

Note: Make note of the MAC address. It is needed to locate the UDS2100 module using DeviceInstaller.

IP Address

The UDS must have a unique IP address on your network. This address references the specific unit. By default, the unit is DHCP-enabled and automatically assigned an IP address on DHCP-enabled networks. If you are assigning a static IP address, the systems administrator generally provides the IP address, subnet mask, and gateway.

Note: The factory default IP address is 0.0.0.0 to enable DHCP, BOOTP, and AutoIP. When the units boots, it sends a DHCP broadcast to try and get an IP address. If it receives no reply from a DHCP server, the UDS tries BOOTP. If the UDS does not receive a response from BOOTP, it reverts to an AutoIP address.

IP Address: _____ - _____ - _____ - _____

Subnet Mask: _____ - _____ - _____ - _____

Gateway: _____ - _____ - _____ - _____

You have several options for assigning an IP address and related network settings to your unit. This chapter provides information about using the DeviceInstaller (graphical user interface) and serial port login (command line interface) methods.

Note: For information about other methods of assigning the IP address, such as DHCP, AutoIP, ARP, and Telnet, see [E: Alternative Ways to Assign an IP Address](#).

4: Using DeviceInstaller

This chapter covers the steps for getting the UDS2100 device server online and for viewing its current configuration.

Note: *DeviceInstaller* is a free utility program provided by Lantronix that discovers, configures, upgrades, and manages Lantronix Device Servers. It can be downloaded from the Lantronix website at www.lantronix.com/support/downloads.

For instructions on using *DeviceInstaller* to configure the IP address and related settings or for more advanced features, see the *DeviceInstaller Online Help*.

Installing DeviceInstaller

To install DeviceInstaller:

1. Download the latest version of DeviceInstaller from <http://www.lantronix.com/support/downloads>.
2. Run the executable to start the installation process.
3. Respond to the installation wizard prompts. (If prompted to select an installation type, select **Typical**).


Assigning an IP Address

The unit's IP address must be configured before it can work correctly on a network. The unit's IP address is normally set to 0.0.0.0 at the factory. The hardware address is on the product label. The unit is DHCP enabled as the default.

To assign an IP address manually:

1. Click **Start → Programs → Lantronix → DeviceInstaller 4.4 → DeviceInstaller**. If your PC has more than one network adapter, a message displays. Select an adapter and click **OK**.

Note: *If the unit already has an IP address (e.g., DHCP has assigned an IP address), click the **Search** icon  and select the unit from the list of Lantronix device servers on the local network.*


2. Click the **Assign IP** icon .
3. If prompted, enter the hardware address (on the product label) and click **Next**.

4. Select **Assign a specific IP address** and click **Next**.
5. Enter the **IP address**. The **Subnet mask** displays automatically based on the IP address; if desired, you may change it. On a local network, you can leave the **Default gateway** blank (all zeros). Click **Next**.
6. Click the **Assign** button and wait several seconds until a confirmation message displays. Click **Finish**.
7. Select the device from the main window list and select **Ping** from the **Tools** menu. The Ping Device dialog box shows the IP address of the selected unit.
8. From the **Tools** menu, click the **Ping** button. The results display in the Status window. Click the **Clear Status** button to clear the window so you can ping the device again.

Note: *If you do not receive "Reply" messages, make sure the unit is attached to the network properly and the IP address assigned is valid for the particular network segment you are working with. If you are not sure, check with your systems administrator.*

9. Click the **Close** button to close the dialog box and return to the main window.

Adding the Unit to the Manage List

Now add the unit to the list of similar Lantronix devices on the network so you can manage and configure it. To perform this step, click the **Search** icon .

DeviceInstaller locates the unit and adds it to the list. Now you can manage (configure) the unit so it works with the serial device on the network.

Accessing the UDS2100 Using DeviceInstaller

1. Click **Start**→**Programs** → **Lantronix**→**DeviceInstaller**→**DeviceInstaller**.
2. Click the UDS folder. The list of available Lantronix UDS2100 devices displays.
3. Expand the list of UDS2100s by clicking the **+** symbol next to the UDS2100 icon. Select the UDS2100 unit by clicking on its IP address to view its configuration.

Viewing the Current Configuration

DeviceInstaller provides a view of the unit's configuration.

To view the unit's current settings:

1. Follow the instructions above to locate the UDS2100.
2. In the right pane, click the **Device Details** tab. The current UDS2100 configuration displays:

Name	Configurable field. A name that identifies the UDS2100. Double-click the field, type in the value, and press Enter to complete. This name is not visible on other PCs or laptops using DeviceInstaller.
DHCP Device Name	Non-configurable field. Displays the name associated with UDS2100's current IP address, if the IP address was obtained dynamically. To change the DHCP device name, see Configuration Using Web Manager or Configuration via Telnet or Serial Port (Setup Mode) .
Group	Configurable field. A group name to categorize the UDS2100. Double-click the field, type in the value, and press Enter to complete. This group name is not visible on other PCs or laptops using DeviceInstaller.
Comments	Configurable field. Information about the UDS2100. Double-click the field, type in the value, and press Enter to complete. This description or comment is not visible on other PCs or laptops using DeviceInstaller.
Device Family	Non-configurable field. Displays the UDS2100's device family as UDS.
Type	Non-configurable field. Displays the device type as UDS2100.
ID	Non-configurable field. Displays the UDS2100's ID embedded within the box.
Hardware Address	Non-configurable field. Displays the UDS2100's hardware (or MAC) address.
Firmware Version	Non-configurable field. Displays the firmware currently installed on the UDS2100.
Extended Firmware Version	Non-configurable field. Displays the full version nomenclature of the firmware.
Online Status	Non-configurable field. Displays the UDS2100's status as online, offline, unreachable (the UDS2100 is on a different subnet), or busy (the UDS2100 is currently performing a task).
IP Address	Non-configurable field. Displays the UDS2100's current IP address. To change the IP address, see Assigning an IP Address .
IP Address was Obtained	Non-configurable field. Displays "Dynamically" if the UDS2100 automatically received an IP address (e.g., from DHCP). Displays "Statically" if the IP address was configured manually. If the IP address was assigned dynamically, the following fields appear: <ul style="list-style-type: none"> ◆ Obtain via DHCP with value of True or False ◆ Obtain via BOOTP with value of True or False ◆ Obtain via RARP with value of True or False ◆ Obtain via Auto IP with value of True or False
Subnet Mask	Non-configurable field. Displays the UDS2100's current subnet mask. To change the subnet mask, see Assigning an IP Address .
Gateway	Non-configurable field. Displays the UDS2100's current gateway. To change the gateway, see Assigning an IP Address .
Number of COB partitions supported	Non-configurable field. Displays the number of COB partitions supported.

Number of Serial Ports	Non-configurable field. Displays the number of ports on the UDS2100.
TCP Keepalive	Non-configurable field. Displays the UDS2100's TCP keepalive value. The value is in the range 1-65s , and the default setting is 45 .
Telnet Supported	Non-configurable field. Indicates if Telnet sessions are permitted. Displays True .
Telnet Port	Non-configurable field. Displays the UDS2100's port for telnet sessions.
Web Port	Non-configurable field. Displays the UDS2100's port for Web Manager configuration.
Maximum Baud Rate Supported	Non-configurable field. Displays the UDS2100's maximum baud rate. <i>Note: The UDS2100 may not currently be running at this rate.</i>
Firmware Upgradeable	Non-configurable field. Displays True , indicating the UDS2100's firmware is upgradeable as newer version become available.
Supports Configurable Pins	Non-configurable field. Displays False .
Supports Email Triggers	Non-configurable field. Displays False .
Supports AES Data Stream	Non-configurable field. Displays False .
Supports 485	Non-configurable field. Displays True . UDS2100 supports the RS-485 protocol.
Supports 921K Baud Rate	Non-configurable field. Displays True . UDS2100 supports a baud rate up to 921600.
Supports HTTP Server	Non-configurable field. Displays True .
Supports HTTP Setup	Non-configurable field. Displays True .
Supports 230K Baud Rate	Non-configurable field. Displays True . UDS2100 supports a baud rate of 230400.
Supports GPIO	Non-configurable field. Displays False , indicating the UDS2100 does not support General Purpose Input Output (GPIO).

Next Step

Now that the UDS has an IP address and other initial settings, you can configure it.

1. Double-click the unit in the list. Details about the unit display.
2. You have the following options:
 - ♦ To configure the unit using a Web browser, click the **Web Configuration** tab. The Lantronix Web Manager window displays in your browser. Continue with [5: Configuration Using Web Manager](#).

Note: To assign Expert and Security settings, you must use the Setup Mode window in a Telnet session.

- ◆ To configure the unit using a Telnet session, click the **Telnet Configuration** tab. The Setup Mode window displays. Continue with [6: Configuration via Telnet or Serial Port \(Setup Mode\)](#).

Assigning the IP Address: Serial Port Login

To assign the IP address and other network settings using a serial connection:

1. Connect a console terminal or a PC running a terminal emulation program to the unit's serial port. The default serial port settings are **9600 baud, 8 bits, no parity, 1 stop bit, no flow control**.
2. To enter Setup Mode, cycle the unit's power (power off and back on). After power-up, the self-test begins and the red Diagnostic LED starts blinking. **You have one second** to enter three lowercase **x** characters.

Note: The easiest way to enter Setup Mode is to hold down the **x** key at the terminal (or emulation) while powering up the unit.

3. Select **0** (Server Configuration) and follow the prompts until you get to **IP address**.
4. Enter the new IP address, subnet mask, and gateway (if applicable).
5. Do one of the following:
 - ◆ Continue with [6: Configuration via Telnet or Serial Port \(Setup Mode\)](#).
 - ◆ Select **9** to save and exit Setup Mode. The unit performs a power reset.

5: Configuration Using Web Manager

You must configure the unit so it can communicate on a network with your serial device. For example, you must set the way the unit will respond to serial and network traffic, how it will handle serial packets, and when to start or close a connection.

The unit's configuration is stored in nonvolatile memory and is retained without power. You can change the configuration at any time. The unit performs a reset after you change and store the configuration.

In this chapter, we describe how to configure the UDS2100 using Web Manager, Lantronix's browser-based configuration tool. (For information on using Setup Mode, our command line configuration interface, see [6: Configuration via Telnet or Serial Port \(Setup Mode\)](#).)

Note: The examples in this section show a typical device. Your device may have different configuration options.

Accessing UDS2100 Using DeviceInstaller

Note: For more information on DeviceInstaller, see [4: Using DeviceInstaller](#).

1. Run DeviceInstaller and search for the list of available Lantronix device servers.
2. Click on the **UDS** folder. The list of available UDS products display.
3. Expand the list of UDS2100s by clicking the + symbol next to the UDS2100 icon.
4. Select the UDS2100 unit by clicking its hardware address.
5. In the right pane, click the Web Configuration tab.
6. To view the UDS2100 unit's Web Manager in the current DeviceInstaller window, click the **Go** button. To open the Web Manager in a web browser, click the **External Browser** button.

Note: Alternatively, to open Web Manager, open your web browser and enter the IP address of the UDS2100.

A dialog box appears to prompt for a **User Name** and **Password**.

Figure 5-1. Web Manager Login Window

The dialog box is titled "Authentication Required" and contains a question mark icon. The text inside says "Enter username and password for http://172.19.205.3". There are two input fields: "User Name:" and "Password:". Below the fields are "OK" and "Cancel" buttons.

7. Perform one of the following:

- ♦ If no telnet password has been defined, leave both fields blank and click **OK**.
- ♦ If a telnet password has been defined, leave the username blank, type in the password, and then click **OK**.

The Web Manager displays.

Note: We recommend that you always use the enhanced password setting and create a strong 16 character password. See [Security Settings \(Option 6\)](#) on page 62.

Figure 5-2. Lantronix Web Manager

The screenshot shows the Lantronix Web Manager interface for a UDS2100 device. The left sidebar contains a main menu with options: Network, Server, Serial Tunnel, Hostlist, Channel 1, Serial Settings, Connection, Channel 2, Serial Settings, Connection, Apply Settings, and Apply Defaults. The main content area is titled "Device Status" and displays the following information:

Product Information	
Firmware Version:	V6.11.0.0
Build Date:	08-May-2015
Network Settings	
MAC Address:	00-20-4A-C1-0C-50
Network Mode:	Wired
DHCP HostName:	< None >
IP Address:	172.19.205.11
Default Gateway:	0.0.0.0
DNS Server:	0.0.0.0
MTU:	1400
Line settings	
Line 1:	RS232, 9600, 8, None, 1, None.
Line 2:	RS232, 9600, 8, None, 1, None.

At the bottom of the interface, it shows "WebManager Version: 2.0.0.7" and "Copyright © Lantronix, Inc. 2007-2015. All rights reserved."

The main menu is in the left pane of the Web Manager window.

Network Configuration

The unit's network values display when you select **Network** from the main menu. The following sections describe the configurable parameters on the Network Settings page.

Figure 5-3. Network Settings

Network Settings

Network Mode: Wired Only ▾

IP Configuration

Obtain IP address automatically

Auto Configuration Methods

BOOTP: Enable Disable

DHCP: Enable Disable

AutoIP: Enable Disable

DHCP Host Name:

Use the following IP configuration:

IP Address:

Subnet Mask:

Default Gateway:

DNS Server:

Ethernet Configuration

Auto Negotiate

Speed: 100 Mbps 10 Mbps

Duplex: Full Half

Network Mode

1. Click **Network** from the main menu.
2. Note the following:

Network Mode	For the UDS2100, Wired Only is the only choice. It enables the Ethernet network connectivity.
---------------------	--

Automatic IP Address Configuration

An IP address can be assigned automatically. You then enter related network settings.