



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts,Customers Priority,Honest Operation,and Considerate Service",our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





**Manual Crimping Tool
Specification Sheet
Order No. 19294-0008
Engineering No. - SKT-840**



FEATURES

- Compact and easy to use
- Inexpensive for lower volume production or field repairs
- Designed to crimp closed barrel terminals

DESCRIPTION:

This Manual Tool is used for crimping non-insulated 8AWG thru 4/0 closed barrel terminals. This tool can be used with a hammer or vise. This tool is not UL listed with any Molex products.

OPERATION

WARNING: Make sure that the wire or cable is Disconnected from any power source.

1. Position the Manual Crimping Tool on a solid surface with the base down.
2. Place a thumb on the tool body behind the ram.
3. Use an index finger under the lift lever and push up. See Figure 1.
4. Insert the desired terminal or splice in the nest making sure the crimp barrel is centered.
5. For butt splices, center half of the barrel into the nest.
6. Release the lift lever, allowing the ram to contact the terminal or splice.
7. Insert the proper stripped wire into the barrel of the terminal. See Figure 2.

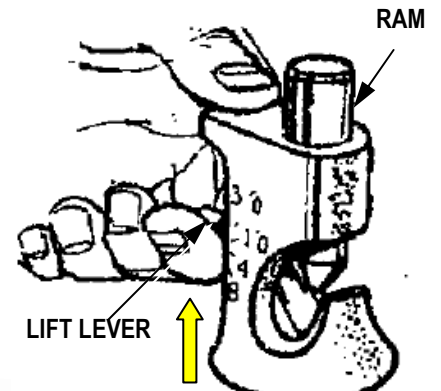


Figure 1

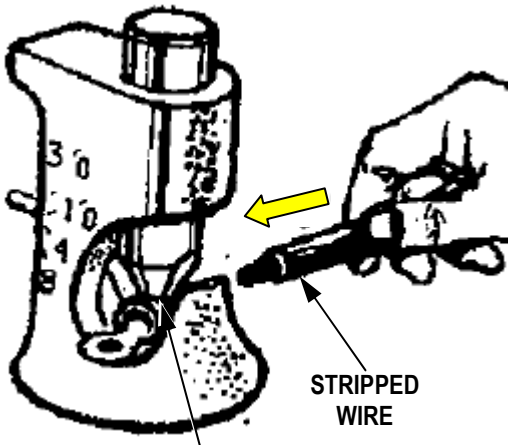


Figure 2
CENTER BARREL OVER NEST
STRIPPED WIRE

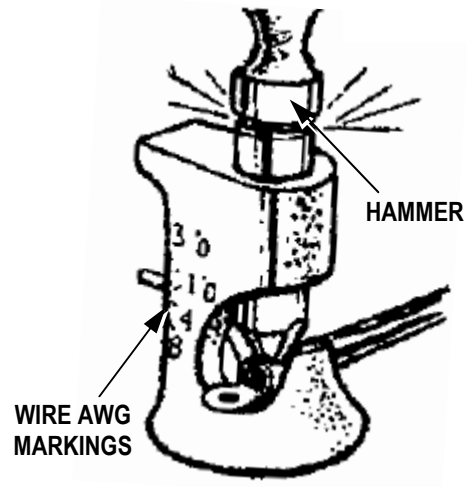


Figure 3
WIRE AWG MARKINGS
HAMMER

⚠ CAUTION	
	Risk of flying debris. Risk of eye injury. Wear safety glasses when using this tool.

8. Using a 2lb hammer strike the top of the ram until the lift lever is lined up with the correct AWG marking located on the side of the tool. See Figure 3.
9. Lift the ram by pulling up on the lift lever and removing the crimped assembly. For butt splices repeat this procedure on the opposite side of the barrel. See Figure 4.

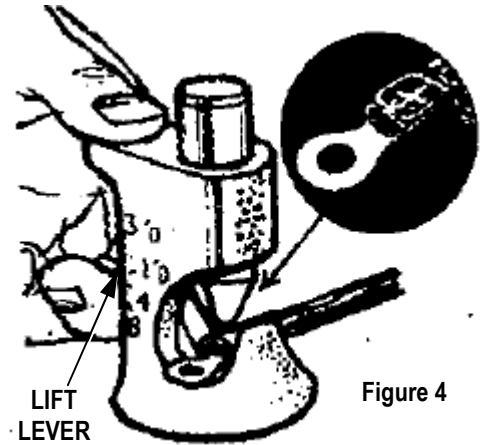


Figure 4

Maintenance

It is recommended that each operator of the tool be made aware of, and responsible for, the following maintenance steps:

1. Remove dust, moisture, and other debris with a clean brush, or soft, lint free cloth.
2. Do not use any abrasive materials that could damage the tool.
3. Make certain all movable parts such as ram is oiled regularly. Light oil (such as SAE30W oil) should be used.
4. When the tool is not in use, store it in a clean, dry area.

Warranty

All tools are warranted to be free of manufacturing defects for a period of 30 days. Should such a defect occur, the tool will be exchanged free of charge. This exchange will not be applicable to altered, misused, or damaged tools. This tool is designed for hand use only.

Americas Headquarters
Lisle, Illinois 60532 U.S.A.
1-800-78MOLEX
amerinfo@molex.com

Far East North Headquarters
Yamato, Kanagawa, Japan
81-462-65-2324
feninfo@molex.com

Far East South Headquarters
Jurong, Singapore
65-6-268-6868
fesinfo@molex.com

European Headquarters
Munich, Germany
49-89-413092-0
eurinfo@molex.com

Corporate Headquarters
2222 Wellington Ct.
Lisle, IL 60532 U.S.A.
630-969-4550
Fax: 630-969-1352

Visit our Web site at <http://www.molex.com>