



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts,Customers Priority,Honest Operation,and Considerate Service",our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





## Web Panels with TFT Display

User manual  
UM EN WEB PANELS

# User manual

## Web Panels with TFT Display

2014-07-01

---

Designation: UM EN WEB PANELS

Revision: 02

Order No.: —

This user manual is valid for:

| Designation | Order No. |
|-------------|-----------|
| WP 04T      | 2913632   |
| WP 06T      | 2913645   |
| WP 07T/WS   | 2700307   |
| WP 09T/WS   | 2700309   |
| WP 10T      | 2700934   |
| WP 15T      | 2700935   |

---

## How to contact us

### Internet

Up-to-date information on Phoenix Contact products and our Terms and Conditions can be found on the Internet at:

[phoenixcontact.com](http://phoenixcontact.com)

Make sure you always use the latest documentation.

It can be downloaded at:

[phoenixcontact.net/catalog](http://phoenixcontact.net/catalog)

### Subsidiaries

If there are any problems that cannot be solved using the documentation, please contact your Phoenix Contact subsidiary.

Subsidiary contact information is available at [phoenixcontact.com](http://phoenixcontact.com).

### Published by

PHOENIX CONTACT GmbH & Co. KG  
Flachsmarktstraße 8  
32825 Blomberg  
GERMANY

Should you have any suggestions or recommendations for improvement of the contents and layout of our manuals, please send your comments to

[tecdoc@phoenixcontact.com](mailto:tecdoc@phoenixcontact.com)

### General terms and conditions of use for technical documentation

Phoenix Contact reserves the right to alter, correct, and/or improve the technical documentation and the products described in the technical documentation at its own discretion and without giving prior notice, insofar as this is reasonable for the user. The same applies to any technical changes that serve the purpose of technical progress.

The receipt of technical documentation (in particular user documentation) does not constitute any further duty on the part of Phoenix Contact to furnish information on modifications to products and/or technical documentation. You are responsible to verify the suitability and intended use of the products in your specific application, in particular with regard to observing the applicable standards and regulations. All information made available in the technical data is supplied without any accompanying guarantee, whether expressly mentioned, implied or tacitly assumed.

In general, the provisions of the current standard Terms and Conditions of Phoenix Contact apply exclusively, in particular as concerns any warranty liability.

This manual, including all illustrations contained herein, is copyright protected. Any changes to the contents or the publication of extracts of this document is prohibited.

Phoenix Contact reserves the right to register its own intellectual property rights for the product identifications of Phoenix Contact products that are used here. Registration of such intellectual property rights by third parties is prohibited.

Other product identifications may be afforded legal protection, even where they may not be indicated as such.

WP 04T, WP 06T, WP 07T/WS, WP 09T/WS, WP 10T, WP 15T

---

# Table of Contents

|   |  |    |
|---|--|----|
| 1 | Important Notes .....  | 7  |
|   | 1.1 Symbols .....  | 7  |
|   | 1.2 Safety Notes .....                                       | 7  |
|   | 1.3 Intended Use .....                                       | 8  |
|   | 1.4 Target Group .....                                       | 8  |
| 2 | Installation and Commissioning .....                         | 9  |
|   | 2.1 Unpacking the Device.....                                | 9  |
|   | 2.2 Mounting the Device.....                                 | 9  |
|   | 2.2.1 Front Panel Dimensions .....                           | 10 |
|   | 2.2.2 Mounting Cutout .....                                  | 16 |
|   | 2.2.3 Side View, Mounting Depth .....                        | 22 |
|   | 2.3 Connecting the Device .....                              | 28 |
|   | 2.3.1 Supply Voltage .....                                   | 28 |
|   | 2.3.2 Grounding .....  | 29 |
|   | 2.4 Switching On .....                                       | 30 |
|   | 2.4.1 Loading Procedure on Windows CE Operating System ..... | 30 |
| 3 | Control and Display Elements .....                           | 43 |
|   | 3.1 Touchscreen .....  | 43 |
|   | 3.2 Display.....   | 43 |
| 4 | Interfaces of the Device .....                               | 45 |
|   | 4.1 Standard Interfaces .....                                | 45 |
|   | 4.1.1 Ethernet (X5) .....                                    | 46 |
|   | 4.1.2 USB (X9, X10) .....                                    | 47 |
| 5 | Maintenance and Servicing .....                              | 49 |
|   | 5.1 Front Panel.....   | 49 |
|   | 5.2 Fuse .....   | 49 |
| 6 | Technical Data .....   | 51 |
|   | 6.1 General.....   | 51 |
|   | 6.2 WP 04T .....   | 53 |
|   | 6.3 WP 06T .....   | 54 |
|   | 6.4 WP 07T/WS.....   | 55 |
|   | 6.5 WP 09T/WS.....   | 56 |
|   | 6.6 WP 10T .....   | 57 |

6.7 WP 15T .....58

# 1 Important Notes

## 1.1 Symbols

The symbols in this manual are used to draw your attention on notes and dangers.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

There are three different categories of personal injury that are indicated with a signal word.



### **DANGER**

This indicates a hazardous situation which, if not avoided, will result in death or serious injury.



### **WARNING**

This indicates a hazardous situation which, if not avoided, could result in death or serious injury.



### **CAUTION**

This indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



### **NOTICE**

This symbol together with the signal word NOTE and the accompanying text alert the reader to a situation which may cause damage or malfunction to the device, hardware/software, or surrounding property.



This symbol and the accompanying text provide the reader with additional information or refer to detailed sources of information.

## 1.2 Safety Notes

- Read this manual carefully before using the operating device. Keep this manual in a place where it is always accessible to all users.
- Proper transportation, handling and storage, placement and installation of this product are prerequisites for its subsequent flawless and safe operation.
- This user manual contains the most important information for the safe operation of the device.
- The user manual, in particular the safety notes, must be observed by all personnel working with the device.
- Observe the accident prevention rules and regulations that apply to the operating site.
- Installation and operation must only be carried out by qualified and trained personnel.



### 1.3 Intended Use

- The device is designed for use in the industry.
- The device is state-of-the art and has been built to the latest standard safety requirements. However, dangerous situations or damage to the machine itself or other property can arise from the use of this device.
- The device fulfills the requirements of the EMC directives and harmonized European standards. Any modifications to the system can influence the EMC behavior.

**NOTICE: Radio Interference**

This is a class A device. This device may cause radio interference in residential areas. In this case, the user may be required to introduce appropriate countermeasures, and to bear the cost of same.

### 1.4 Target Group

The use of products described in this manual is oriented exclusively to:

- Qualified electricians or persons instructed by them, who are familiar with applicable standards and other regulations regarding electrical engineering and, in particular, the relevant safety concepts.
- Qualified application programmers and software engineers, who are familiar with the safety concepts of automation technology and applicable standards.

## 2 Installation and Commissioning

### 2.1 Unpacking the Device

Unpack all parts carefully and check the contents for any visible damage in transit. Also check whether the shipment matches the specifications on your delivery note.

If you notice damages in transit or discrepancies, please contact Phoenix Contact immediately.

### 2.2 Mounting the Device



**NOTICE: Damage**

When installing the device, leave a gap of at least 30 mm (1.181") around the device to ensure sufficient air circulation.



**NOTICE: Damage**

When the operating device is installed horizontally, please note that additional sources of heat beneath the operating device may result in heat accumulation.

Make sure to allow sufficient heat dissipation!

Please observe the permissible temperature range specified in the technical data of the user manual when operating the device.



**NOTICE: Damage**

In order to ensure the degree of protection specified in the technical data, always make sure that the seal lies flat against the mounting surface and the threaded pins of the mounting brackets are tightened uniformly to a maximum torque of 1 Nm.

The device can be easily and quickly mounted from the rear of the device. A panel thickness of 1 mm to 6 mm (0.039" to 0.236") is permitted for proper mounting.

1. Insert the device in the mounting cutout from the front.

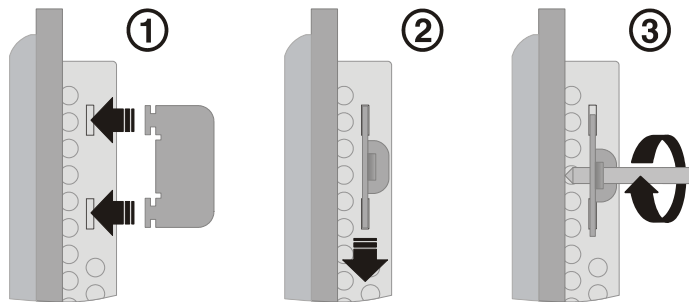


Figure 2-1 Mounting the device using a mounting bracket

2. Insert the mounting brackets into the appropriate openings (figure 1) and pull the brackets downwards until they lock in place (2).
3. Fasten the device into position using the threaded pins (3).

## 2.2.1 Front Panel Dimensions

### 2.2.1.1 WP 04T

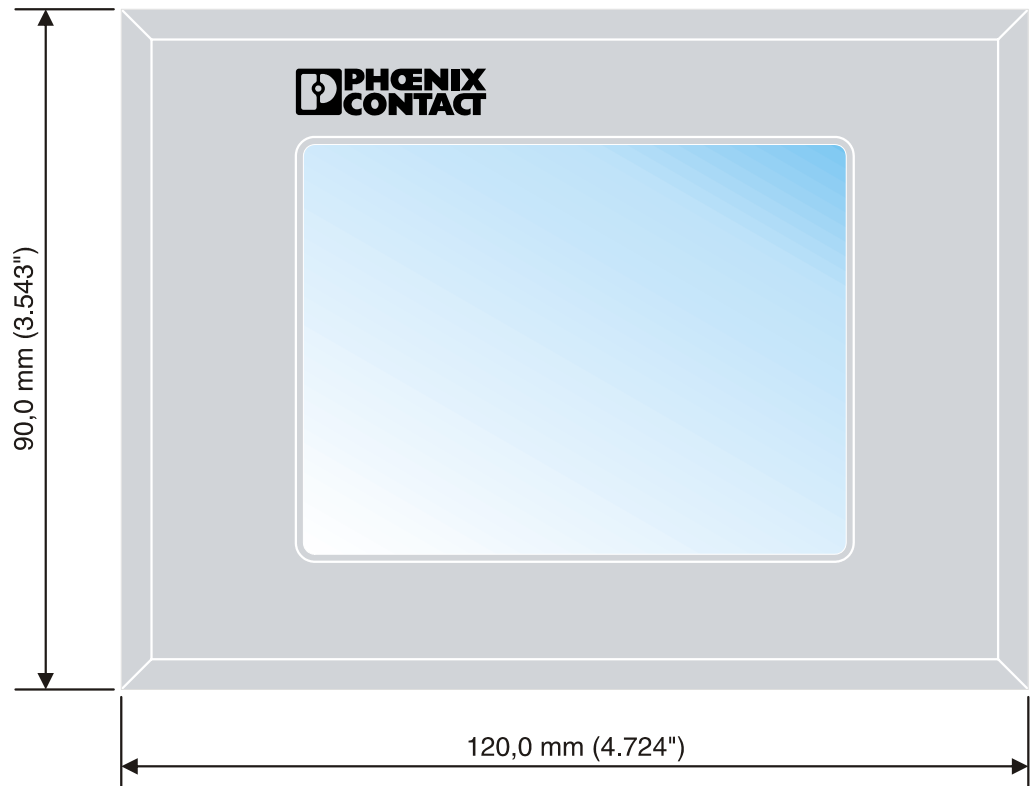


Figure 2-2 WP 04T

2.2.1.2 WP 06T

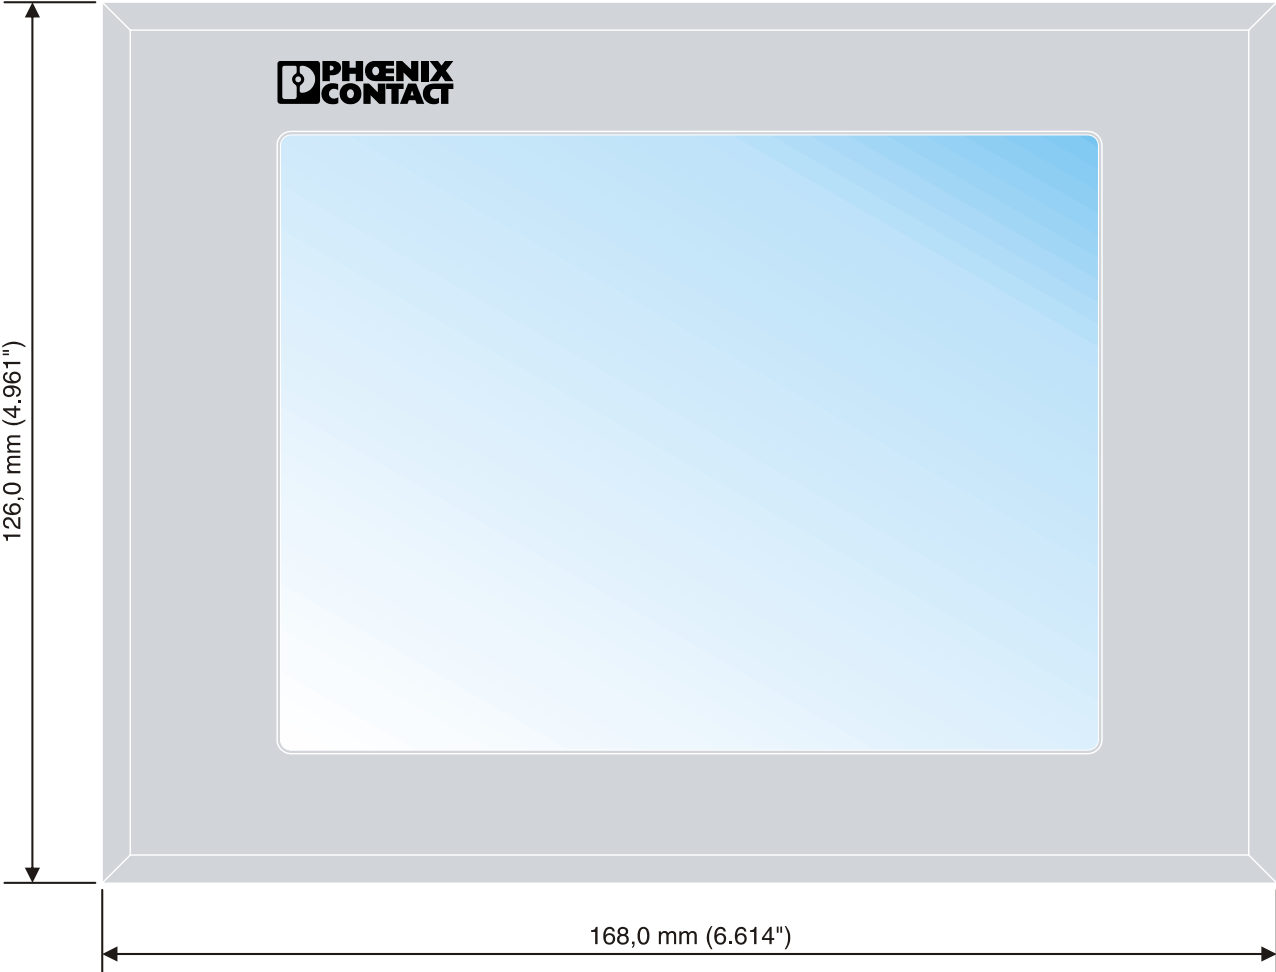


Figure 2-3 WP 06T

2.2.1.3 WP 07T/WS

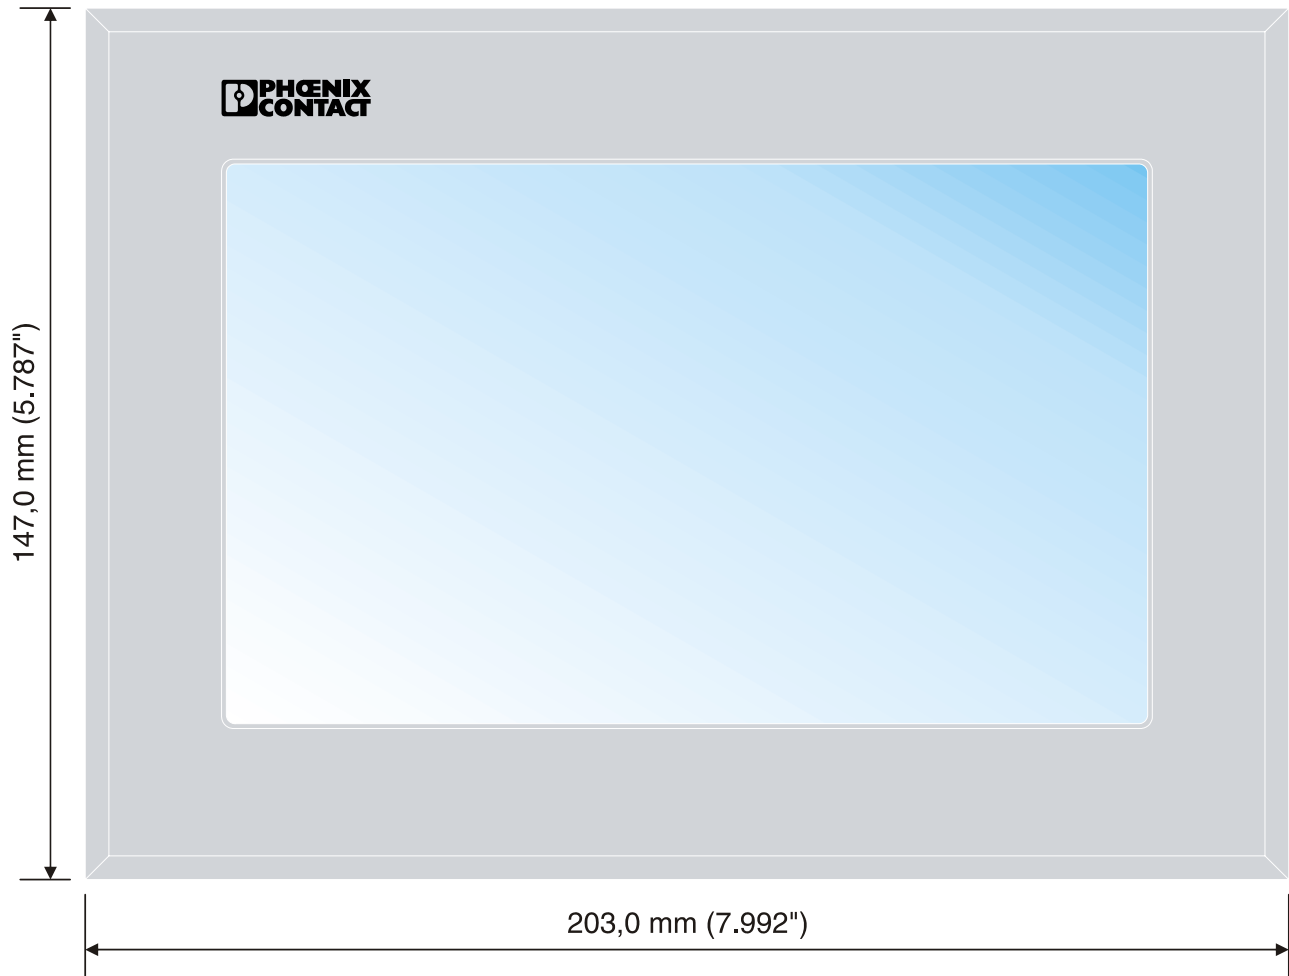


Figure 2-4 WP 07T/WS

2.2.1.4 WP 09T/WS



Figure 2-5 WP 09T/WS

2.2.1.5 WP 10T



Figure 2-6 WP 10T

2.2.1.6 WP 15T

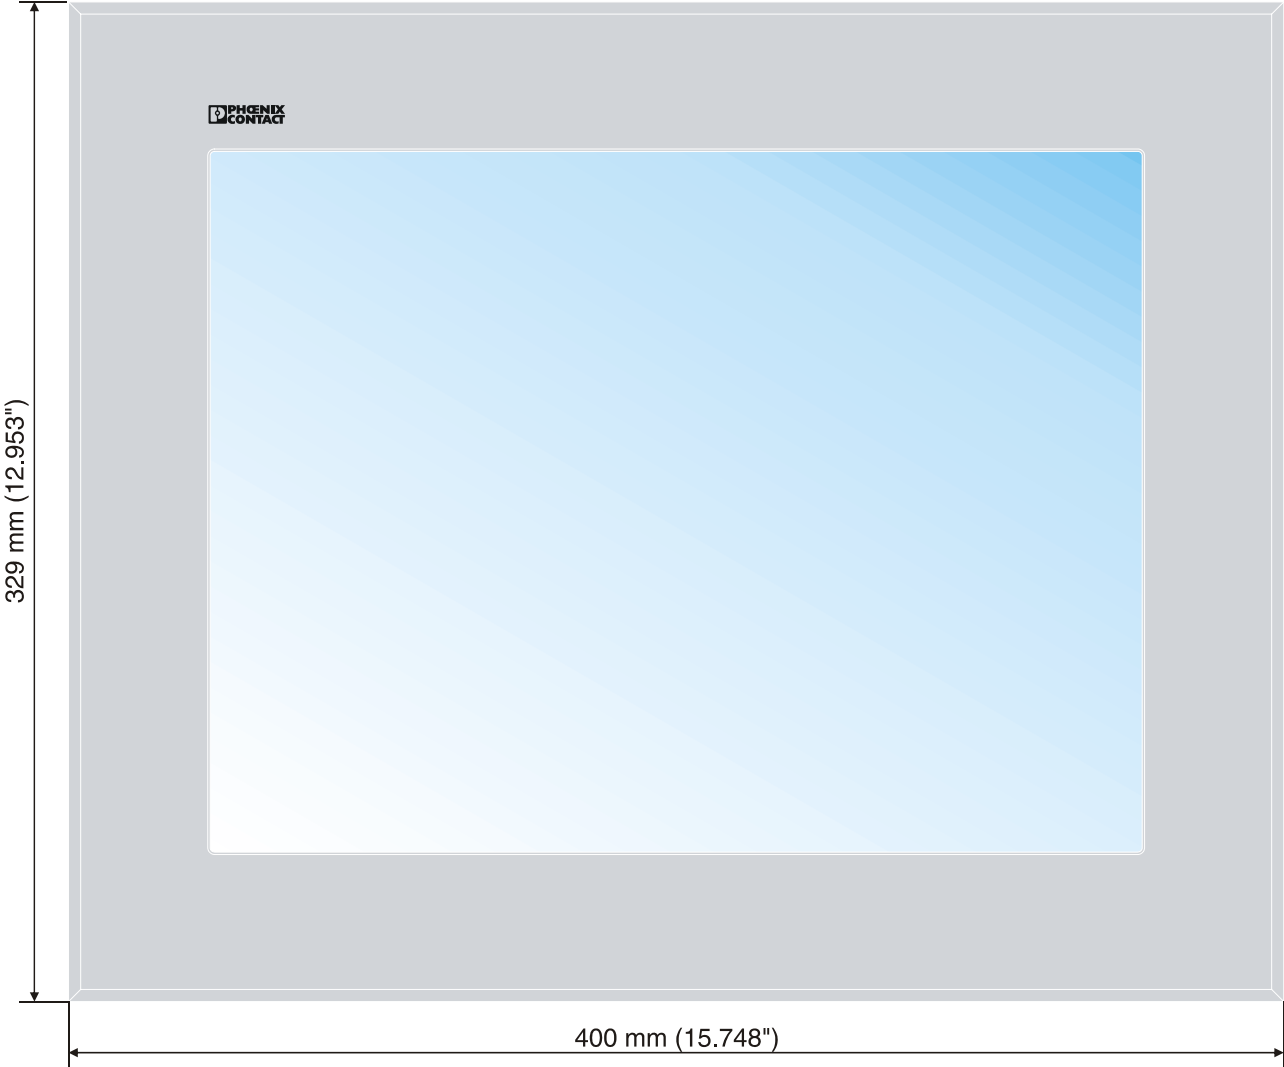


Figure 2-7 WP 15T



## 2.2.2 Mounting Cutout

### 2.2.2.1 WP 04T

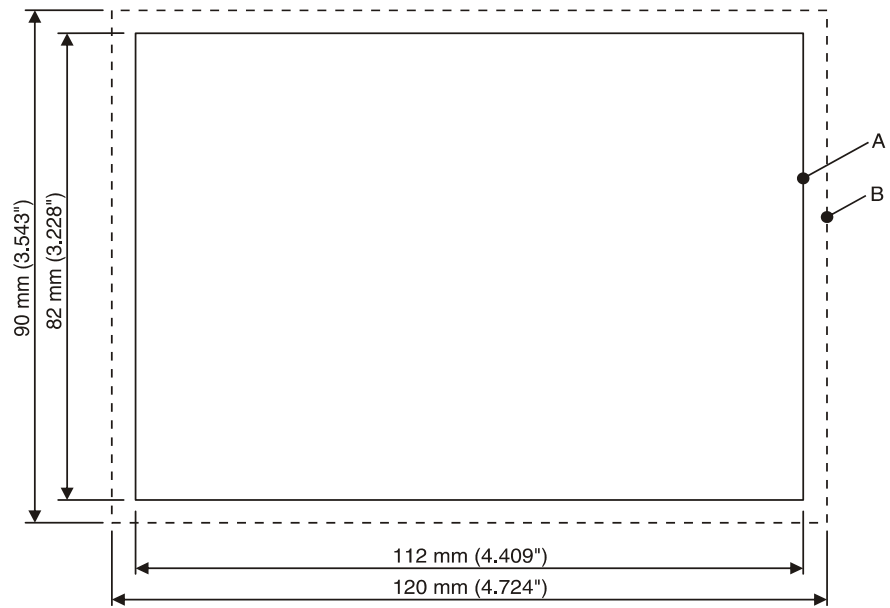


Figure 2-8 WP 04T

- A Mounting Cutout
- B Front Panel

2.2.2.2 WP 06T



Figure 2-9 WP 06T

- A Mounting Cutout
- B Front Panel

2.2.2.3 WP 07T/WS

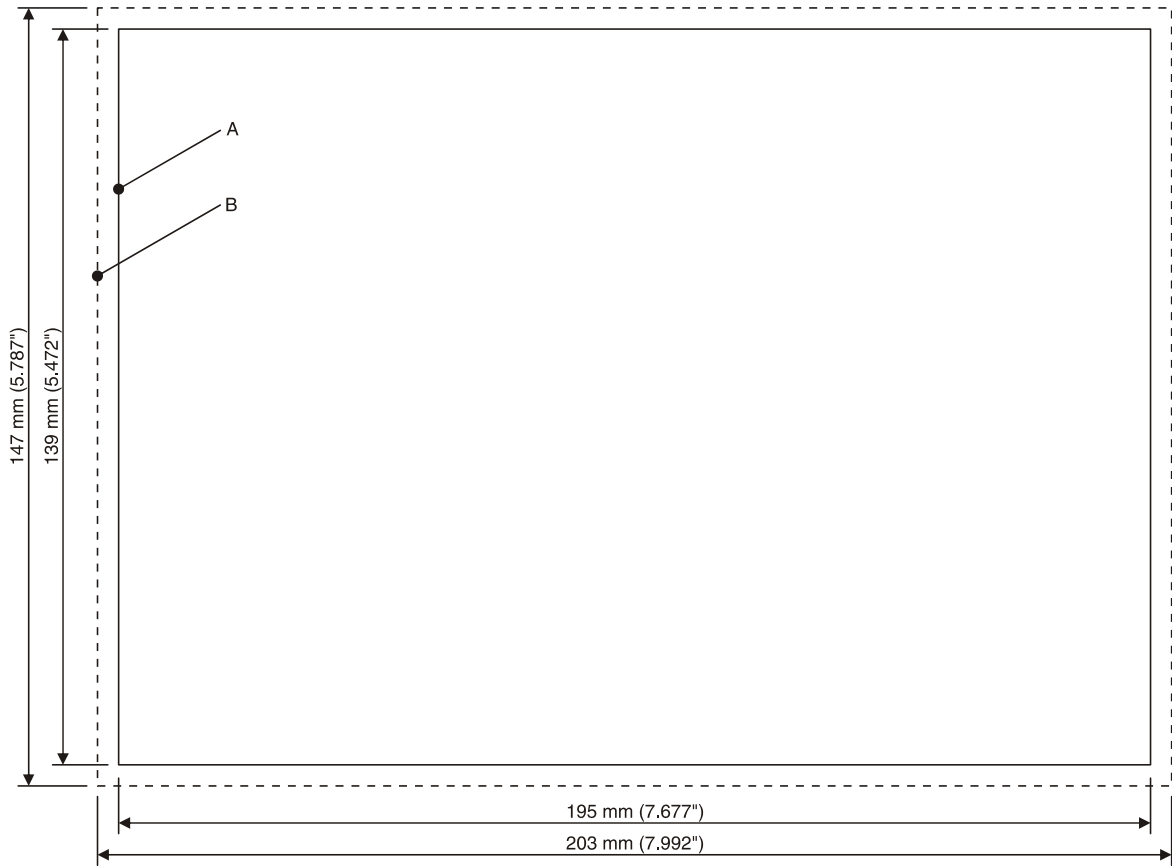


Figure 2-10 WP 07T/WS

- A** Mounting Cutout
- B** Front Panel

2.2.2.4 WP 09T/WS



Figure 2-11 WP 09T/WS

- A** Mounting Cutout
- B** Front Panel

2.2.2.5 WP 10T



Figure 2-12 WP 10T

- A** Mounting Cutout
- B** Front Panel

2.2.2.6 WP 15T

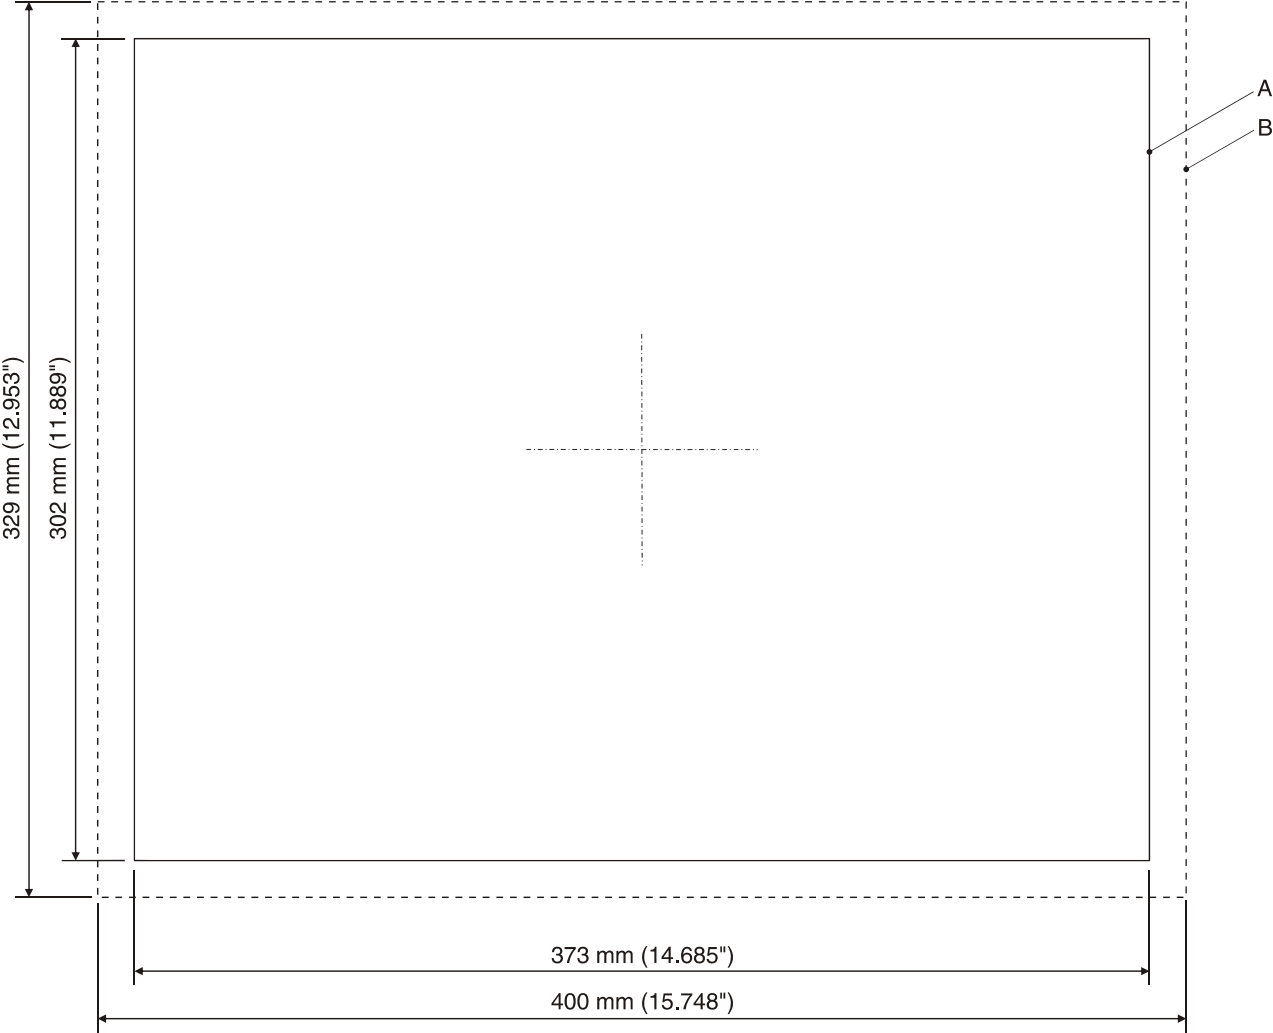


Figure 2-13 WP 15T

- A Mounting Cutout
- B Front Panel

## 2.2.3 Side View, Mounting Depth

### 2.2.3.1 WP 04T

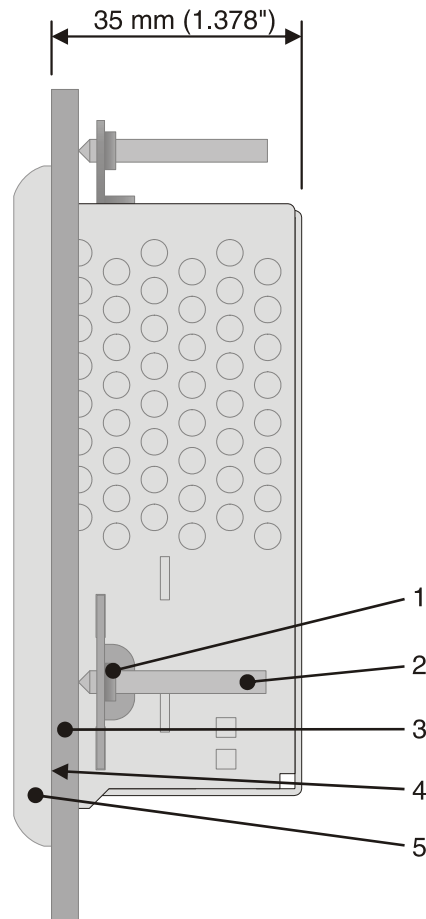


Figure 2-14 WP 04T

- 1 Mounting Bracket
- 2 Threaded Pin
- 3 Mounting Surface Thickness 1 mm to 6 mm
- 4 Circumferential Seal
- 5 Front Panel

2.2.3.2 WP 06T

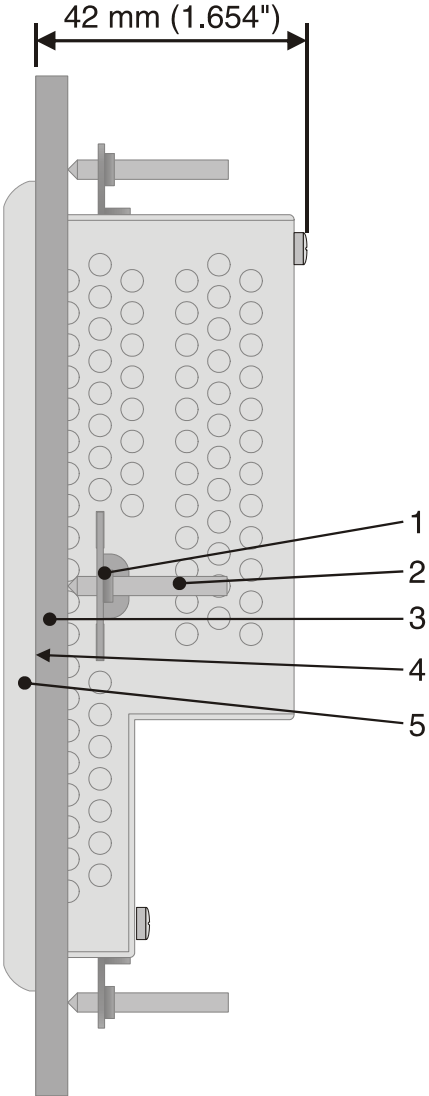


Figure 2-15 WP 06T

- 1 Mounting Bracket
- 2 Threaded Pin
- 3 Mounting Surface Thickness 1 mm to 6 mm
- 4 Circumferential Seal
- 5 Front Panel



2.2.3.3 WP 07T/WS

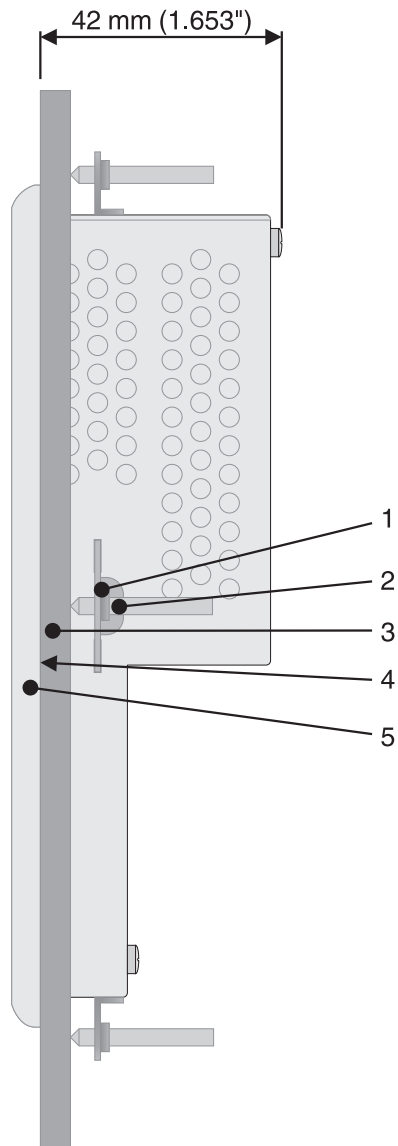


Figure 2-16 WP 07T/WS

- 1 Mounting Bracket
- 2 Threaded Pin
- 3 Mounting Surface Thickness 1 mm to 6 mm
- 4 Circumferential Seal
- 5 Front Panel

2.2.3.4 WP 09T/WS

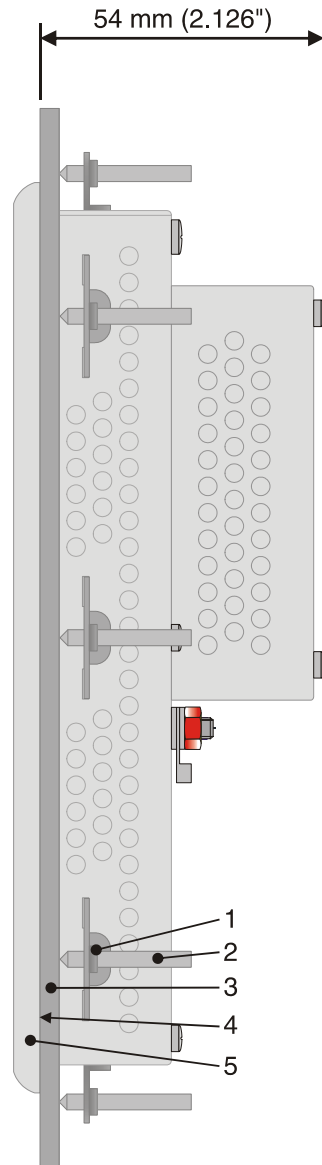


Figure 2-17 WP 09T/WS

- 1 Mounting Bracket
- 2 Threaded Pin
- 3 Mounting Surface Thickness 1 mm to 6 mm
- 4 Circumferential Seal
- 5 Front Panel