



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!




Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



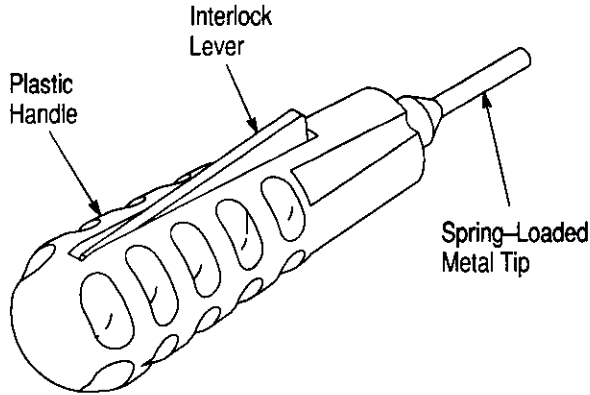

EXTRACTION TOOL			CONTACT SIZE
PART NUMBER	TIP DIMENSION (mm [in.])		
	LENGTH	DIAMETER	
318822-1	15.2 [.60]	2.62 [.103]	20
318828-1	19.8 [.78]	3.48 [.137]	16 to 20
218842-1	12.7 [.50]	4.80 [.189]	12

Figure 1

1. INTRODUCTION

AMP* Extraction Tools 318822-1, 318828-1, and 318842-1 are designed to remove pin and socket contact sizes 20 through 12 from AMP Multimate connectors. See Figure 1. Read these instructions thoroughly before attempting to remove any contacts.

NOTE

Dimensions on this sheet are in metric units [with U.S. customary units in brackets]. Figures are not drawn to scale.

2. DESCRIPTION (Figure 1)

The extraction tool consists of a spring-loaded metal tip with an integral plunger mounted to a plastic handle with an interlock lever. When the interlock lever is depressed, the plunger is held until the contact locking lances are depressed by the tip. After the lever is released, the plunger is released, permitting the contact to be pushed out the rear of the connector.

3. EXTRACTION PROCEDURE (Figure 2)

1. Determine the contact to be removed and grasp the wire attached to that contact.
2. Move the contact forward as far as possible by pushing the wire toward the connector.

NOTE

If pushing the wire by hand is difficult, use AMP Insertion Tool 91002-1.

3. Depress the extraction tool interlock lever and insert the tip of the tool into the contact cavity in the mating face of the connector. Make sure that the tip is completely bottomed in the cavity.
4. While holding the extraction tool in position and pulling back on the wire, release the interlock lever and push the tool handle forward. The wire and contact should pull out of the connector.

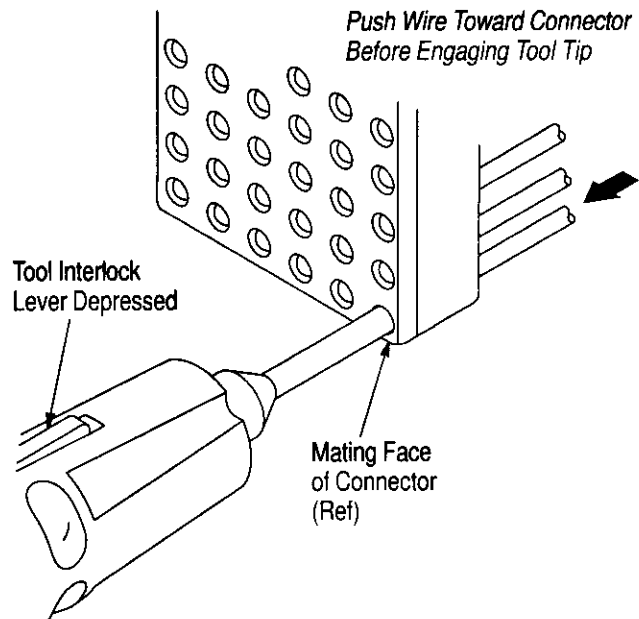


Figure 2

NOTE

Before using the contact again, reset the locking lances to their original positions. To obtain the correct setting dimensions for the locking lances, consult the AMP Customer Drawing covering the specific contact, or contact AMP engineering.

4. TOOL MAINTENANCE

It is recommended that the tool be inspected when you receive it and at regularly scheduled intervals. The tool is not repairable and should be replaced when it is worn or damaged. Store the extraction tool in a clean, dry place and clean the extraction tool with a soft, lint-free cloth.

Additional tools can be purchased from:

CUSTOMER SERVICE (38-25)
AMP INCORPORATED
PO BOX 3608
HARRISBURG PA 17105-3608