



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



AMP

AMP INCORPORATED
HARRISBURG, PA 17105

CUSTOMER HOTLINE
1 800 722-1111

LATCH DISENGAGEMENT TOOL 58382-1 FOR AMP* UNIVERSAL MATE-N-LOK* II CONNECTOR HOUSINGS

REDUCED FOR PACKAGING

IS 9436

RELEASED
7-13-88

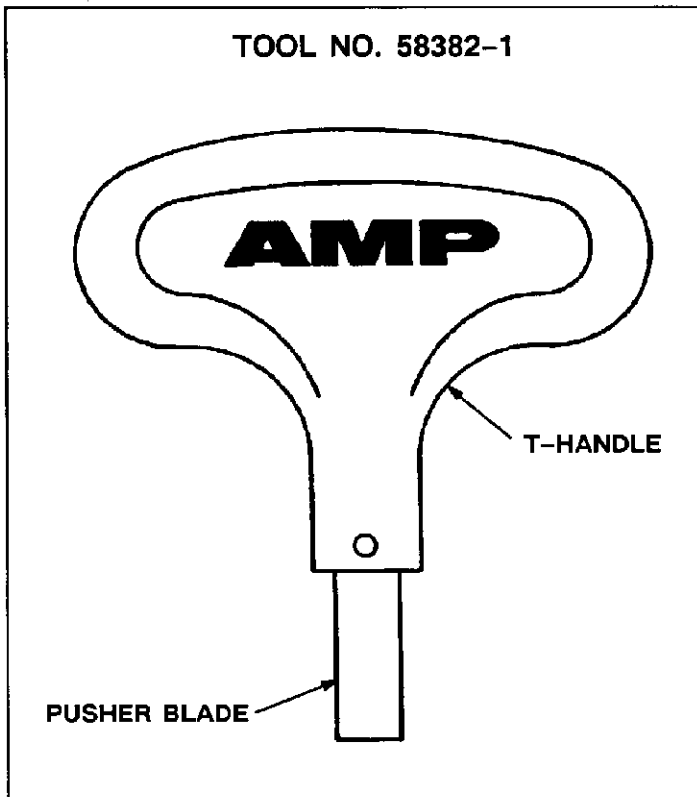


Fig. 1

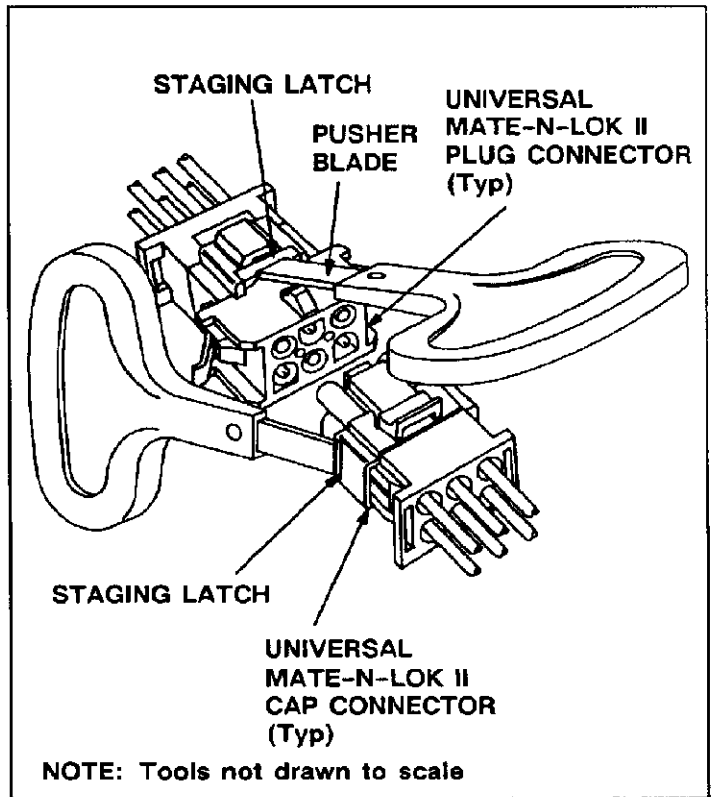


Fig. 2

1. INTRODUCTION

This instruction sheet covers use of Latch Disengagement Tool 58382-1. The tool is used to disengage the staging latch on Universal MATE-N-LOK II connector housings, thereby releasing terminated contacts within the housings for replacement or repair.

2. DESCRIPTION (Figure 1)

The tool is used to disengage the staging latches on both plugs and caps of Universal MATE-N-LOK II connector housings, and features a plastic T-handle attached to a flat steel pusher blade, with a V-shaped groove across the width of its tip.

3. DISENGAGEMENT PROCEDURE (Figure 2)

Support the connector housing on a stable surface, if possible, grip the front half of housing between thumb

and forefinger, and hold the tool with other hand. Proceed as follows:

1. Place the groove in the tip of the steel pusher blade against edge of the staging latch as indicated in the illustration.
2. Holding the tool at a 45° angle to the side of the connector housing, depress the latch by pushing on the tool handle.
3. Continue to apply pressure and rotate the tool toward the side of the housing so that the tool tip pushes the staging latch into the latch shroud.
4. Remove the tool and repeat Steps 1 through 3 for the other staging latch of the connector.

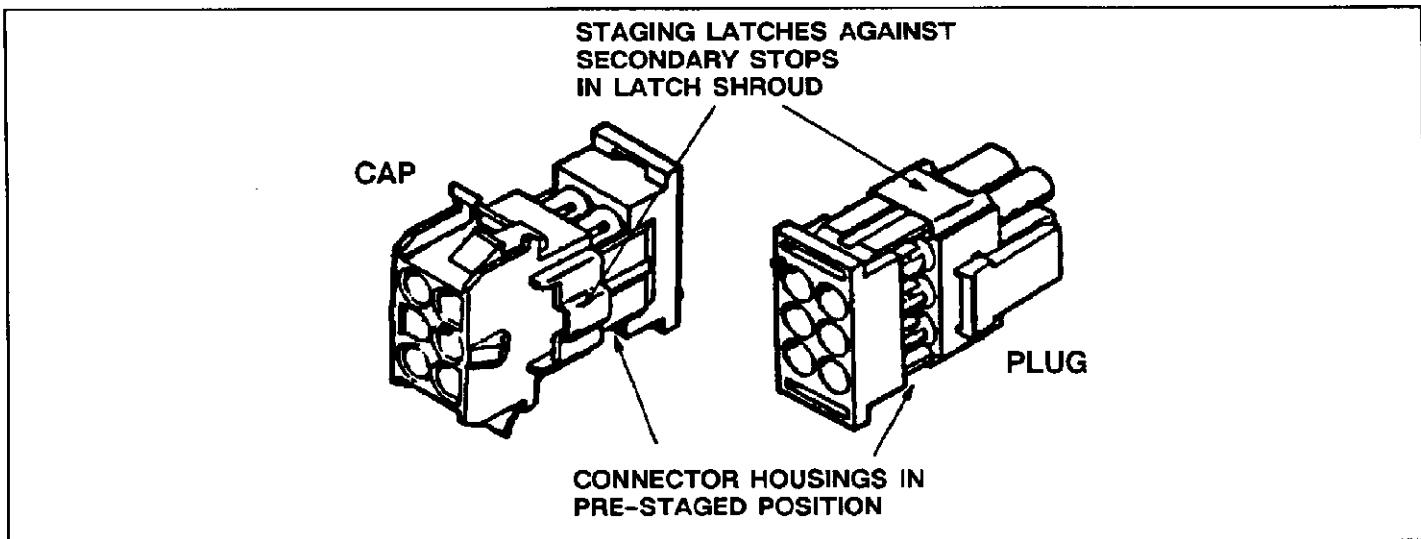


Fig. 3

With both staging latches released, the connector housing may now be pulled apart to the pre-staged position (staging latches against the secondary stops in the latch shrouds) which permits removal and replacement of terminated contacts. See Figure 3. Once contacts have been removed or replaced, the connector housing is pushed back together, thereby securing terminated contacts within the connector housing.

4. MAINTENANCE

The tool requires little maintenance other than to wipe

it clean and to store it in a clean, dry area when not in use. Examine it periodically for burrs or deformation of the pusher blade. Additional tools may be purchased from:

AMP Incorporated
P.O. Box 3608
Harrisburg, PA 17105-3608

or a wholly-owned subsidiary of AMP Incorporated.