

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China










A-MP* EXTRACTION TOOL 91038-3 FOR TYPE XI PIN AND SOCKET CONTACTS



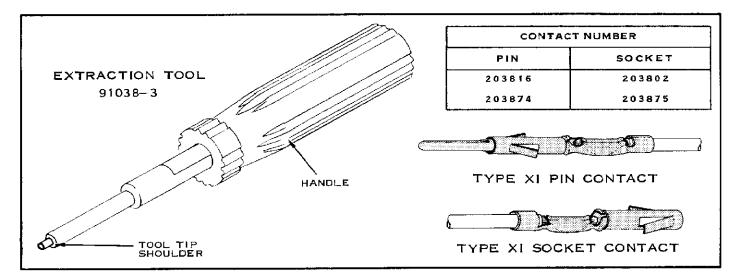


FIGURE 1

1. INTRODUCTION

The A-MP Extraction Tool 91038-3 is designed to remove the Type XI Pin and Socket Contacts shown in Figure 1 from AMP-INCERT★ Rack and Panel Connectors.

2. EXTRACTION PROCEDURE

CAUTION

(2)

© 1466 , 1970 by AMP Incorporated. All international rights reserved. A-MP products covered by U.S. and foreign parents and/or patents pending.

The Shoulder of the Tool Tip must bottom on the face of the connector BEFORE the tool handle is depressed.

A. Extract Pin Contacts as follows:

1. Position the Pin in the hollowed portion of the tool tip. Then push the Tip straight in until the

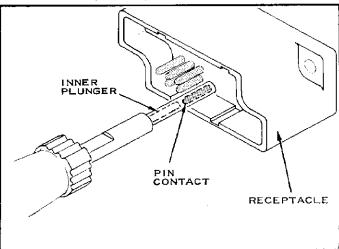


FIGURE 2

Shoulder bottoms on the face of the connector as shown in Figure 2.

2. Depress the spring-loaded handle and the pin will back out of the connector cavity.

B. Extract Socket Contacts as follows:

- 1. Align the tool so that the contact will enter the hollowed portion of the tip.
- 2. Push the Tip straight into the cavity until the Shoulder bottoms on the face of the connector as shown in Figure 3.
- 3. Depress the spring-loaded handle and the socket will back out of the cavity.

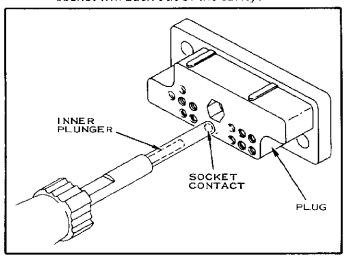


FIGURE 3

* TRADEMARK OF AMP INCORPORATED