



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China




### Controlled Cycle Ferrule Crimp Heads For CT-2500 Family Battery Operated Tools OPERATION, INSPECTION and MAINTENANCE INSTRUCTIONS

© Panduit Corp. 2016

Fig. 1

#### CT-2523CH Crimp Head

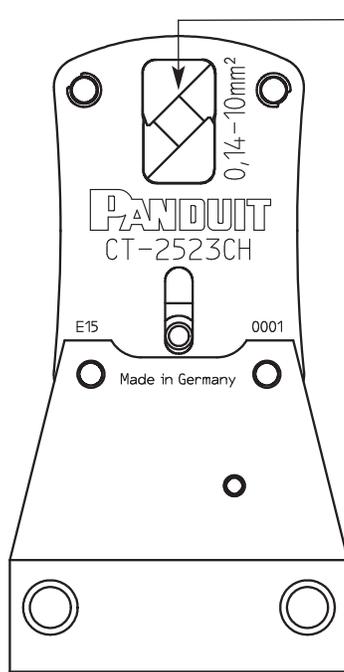

Self-adjusting crimp die for Insulated and non-insulated ferrules. Ferrule size dependent on wire gage. Refer to ferrule packaging for proper ferrule and wire combinations.

(CT-2504CH not shown)



#### CAUTION:


Verify power is "OFF" before working on wiring with these tools. The plastic grips are for the user's comfort, and are not intended to insulate against electrical shock while working on live electrical circuits.

#### CT-2504CH and CT-2523CH CRIMP HEADS

1. With the tool in the open position, insert the ferrule into the crimp pocket. Make sure that the ferrule is inserted fully into the crimp die (see Figure 2). Activate tool trigger until dies just slightly grip ferrule.
2. Insert the stripped wire into the ferrule until the wire stops. Refer to ferrule packaging for wire strip length.
3. Crimp the ferrule by completing tool activation until the tool automatically retracts crimp die; and the crimped ferrule can be removed.

**NOTE:** Crimp entire uninsulated ferrule length. This may require additional crimps.

Fig. 2

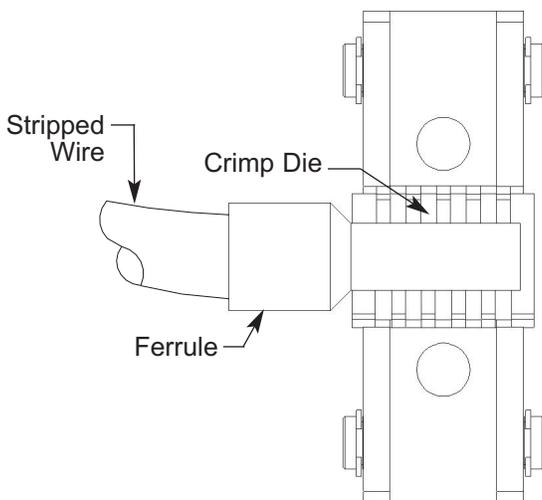

#### INSPECTION / MAINTENANCE

##### NEW TOOLS - BEFORE PLACING INTO SERVICE:

All Panduit crimping tools are inspected before they are shipped from the factory. All new tools should be inspected before being used.

New tools are shipped, factory lubricated, in protective packaging. After inspection, simply clean any excess oil from the crimping dies and place into service.

When the tool is not in use, keep the crimp head in the protective sleeve to prevent objects from becoming lodged in the crimping area. Store the tool in a clean, dry area.

E-mail:  
techsupport@panduit.com

**PANDUIT**  
www.panduit.com

For Technical Support:  
1-800-777-3300

**IN SERVICE TOOLS -  
AFTER TOOLS HAVE BEEN IN SERVICE:**

It is recommended that each operator of the tool be made aware of - and responsible for following these maintenance steps:

In-service tools should be cleaned and inspected at least ONCE A MONTH. To clean - wipe with a clean cloth.

In-service tools should be lubricated ONCE A WEEK, and after every cleaning. Lubricate all pins, pivots and bearing surfaces with DOW CORNING® Molykote BR2 Plus.

Be sure to clean any excess oil from the crimping dies before using.

® Molykote BR2 Plus is the Registered Trademark of DOW CORNING.

**VISUAL INSPECTION**

1. Visually inspect the tool for missing or loose pins; then close the tool and note the return action of the die halves.
2. Inspect the crimping dies for worn, chipped or broken edges.
3. If parts are missing, defective or damaged; contact Panduit for information on repair or replacement of tools.
4. Check for debris in dies. Any debris will need to be removed prior to tool use.