# imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



## Slim Digital Pressure Sensor E8CB/E8CC

# E8CC with Built-in Microcomputer and Digital Display

- Withstands a pressure of 490 kPa and highly reliable.
- Incorporates a two-turn pressure adjuster ensuring easy pressure setting.



Be sure to read *Safety Precautions* on page 5.

#### **Ordering Information**

Digital display	Press	ure range	ON/OFF output	Linear output	Model
No	Positive pressure	0 to 100 kPa	NPN open collector	1 to 5 V	E8CB-01C
	Negative pressure	0 to –100 kPa			E8CB-CN0C2B
Yes	Positive pressure	0 to 98 kPa			E8CC-A01C
	Negative pressure	0 to -101 kPa			E8CC-AN0C
	Positive pressure	0 to 980 kPa			E8CC-B10C

### **Ratings and Specifications**

Item Mod	lel E8CB-01C	E8CB-CN0C2B*	E8CC-A01C	E8CC-AN0C*	E8CC-B10C		
Power supply voltage	12 to 24 VDC ±10	VDC $\pm 10\%$ with a ripple (p-p) of 5% max.					
Current consumption	20 mA max.						
Pressure type	Gauge pressure						
Permissible pressure range	0 to 100 kPa	0 to -100 kPa	0 to 98 kPa	0 to -101 kPa	0 to 980 kPa		
Pressure setting range	0 to 100 kPa	0 to -100 kPa	0 to 98 kPa	0 to -101 kPa	0 to 980 kPa		
Pressure indication unit			kPa				
Withstand pressure	490 kPa	490 kPa 1.5 MPa					
Applicable material		Noncorrosive and nonflammable gases					
Repeat accuracy (ON/OFF output)	±1% FS max.						
Accuracy (linear output)	±3% FS max.	±3% FS max.					
Differential travel (ON/OFF output)	2% FS max.	2% FS max.					
Linearity (linear output)	±1% FS max.						
Response time		5 ms max. 1 to 5 V with an output impedance of 20 $\Omega$ and a permissible resistive load of 10 k $\Omega$ min.					
Linear output			20 $\Omega$ and a permission	sible resistive load	of 10 k $\Omega$ min.		
ON/OFF output		NPN open collector					
Load current	80 mA max.						
Output applied voltag							
Residual voltage		load current of 80 m/	,		of 20 mA)		
Protection circuits		supply connection a		•			
Display (See note.)	Operation indicat	or (red)	2 <sup>1</sup> / <sub>2</sub> -digit LCD, operation indicator (red)				
Display accuracy		+3% FS ±1 digit max. (within a temperature range between 0°C a ±4% FS ±1 digit max. (within a temperature range between 50°C ±5% FS ±1 digit max. (within a temperature range between -10°C			50°C and 55°C)		
	Operating: –10°C to 55°C (with no icing)						
Ambient temperature		o 70°C (with no icing					
Ambient humidity	-	e: 35% to 95% (with					
Temperature influence		$\pm 0.12\%$ FS/°C between 0°C and 50°C and $\pm 0.2\%$ FS/°C max. between $-10^\circ\text{C}$ and 0°C or 50°C					
Voltage influence	±1.5% FS max.	±1.5% FS max.					
Insulation resistance	50 MΩ min. (at 5	50 M $\Omega$ min. (at 500 VDC) between current carrying parts and case					
Dielectric strength		1,000 VAC for 1 min					
Vibration resistance (destruction		-mm double amplitue	de or 100 m/s <sup>2</sup> for 2	2 hours each in X, Y	, and Z directions		
Shock resistance (destruction)		es each in X, Y, and I					
Degree of protection	IEC 60529 IP50						
Pressure inlet		R(PT)1/8, and M5 female screw					
Connection method		Pre-wired (Standard cable length: 2 m)					
Weight (packed state)	Approx. 70 g Approx. 80 g						
Material Pressure port	Aluminum						
Accessories	Instruction manua	al	Instruction manua	al, DIN track mounti	ng bracket		
Note: An example of a 2 <sup>1</sup> / <sub>2</sub> -digit display is s				,	<u> </u>		


Note: An example of a 21/2-digit display is shown below.


	Rated pressure range	Digital display				
	hated pressure range		3rd digit	2nd digit	1st digit	
Positive pressure	0 to 98 kPa			9	8	
r ositive pressure	0 to 980 kPa			9	8	
Negative pressure	0 to -101 kPa		1	0	1	

Note: The display values shown above are for when the maximum rated pressure is applied. \* These models are negative-pressure models.

### **Engineering Data (Typical)**


#### Linear Output Fluctuation vs. Temperature E8CB-01C E8CC-A01C

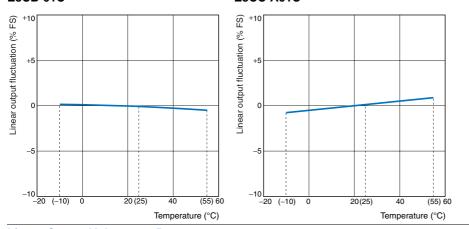

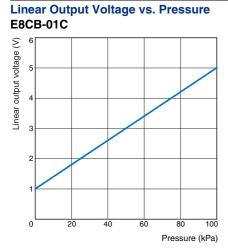





E8CC-A01C

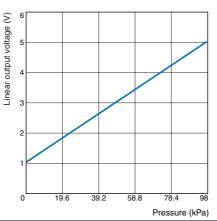




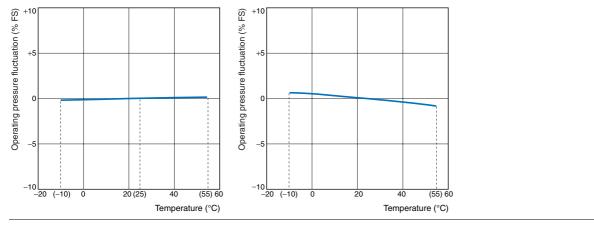

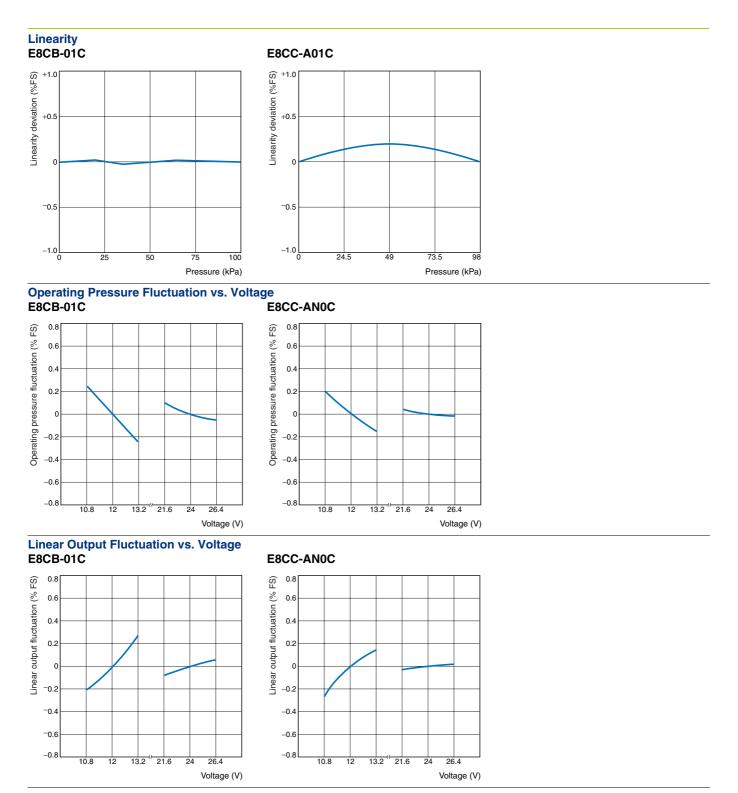

#### I/O Circuit Diagrams

#### **NPN Output**

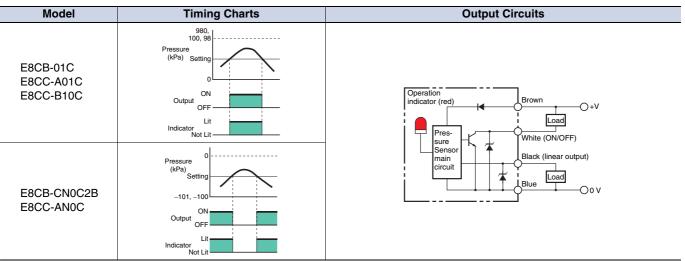

#### **Safety Precautions**

#### 🔥 WARNING

This product is not designed or rated for ensuring safety of persons. Do not use it for such purposes.

#### **Precautions for Correct Use**

Do not use the product in atmospheres or environments that exceed product ratings.


#### Mounting

#### Diaphragm

• If the diaphragm is damaged, the Pressure Sensor will not operate properly. Do not insert a screwdriver or steel wire into the interior of the pressure-sensitive parts through the pressure inlet.

#### Mounting

- The pressure inlet has an R (PT)1/8 taper screw and an M5 female screw. Apply sealing tape around a screw that conforms to JIS Standards so that no pressure leakage will occur.
- Do not apply a tightening torque higher than 3.9 N·m.
- If the Pressure Sensor is directly connected to a conduit, be sure to apply a wrench to the pressure inlet. Do not apply the wrench to the plastic case.

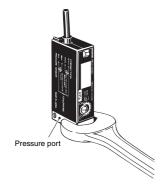


#### **DIN Track Mounting Bracket (E8CC)**

#### Mounting

- 1. Fit the front part onto the bracket.
- 2. Press the rear part onto the bracket.

#### Removing

3. Apply a flat-blade screwdriver to the rear hook. Then the Pressure Sensor can be removed with ease.

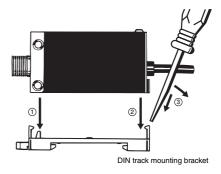

#### • Wiring

• If no linear output is used, cut off the black lead wire and apply insulation tape to the lead wire so that it will not come in contact with any other terminal.

RUN -

#### Adjustment

#### Setting the Pressure on the E8CC

1. Set the mode selector to SET.

RUN -SET -

2. Turn the pressure adjuster to the desired pressure.




#### Indications

3. Set the mode selector to RUN. The E8CC has, however, normal output in SET mode. Change in pressure setting is possible in RUN mode by turning the pressure adjuster. Do not turn the pressure adjuster after the pressure adjuster has been set to the desired pressure.

	Mode	Operating status		Permissible range			
Display			Description	Positive pressure		Negative pressure	
		oluluo		E8CC -A01C	E8CC -B10C	E8CC -AN0C	
(for 30 kPa)	RUN	Normal	Displays the imposed pressure within the permissible range.			0 to –101 kPa	
	SET	Normal	Displays the ON-point setting pressure within the per- missible range		0 to 980 kPa		
	RUN	Abnormal pressure imposition	<ul> <li>Positive Pressure: Indicates that the imposed pressure is lower than the permissible range.</li> <li>Negative Pressure: Indicates that the imposed pressure is higher than the permissible range. The E8CC is, however, in normal output operation in both cases.</li> </ul>	0 to 98 kPa			
	SET	Abnormal pressure setting	<ul> <li>Positive Pressure: Indicates that ON-point setting pressure value is lower than the permissible range.</li> <li>Negative Pressure: Indicates that ON-point setting pressure is higher than the permissible range. The E8CC is, however, in normal output operation in both cases.</li> </ul>				
F F	RUN	Abnormal pressure imposition	Indicates that the imposed pressure is higher than the permissible range.				
	SET	Abnormal pressure setting	<ul> <li>Positive Pressure: Indicates that ON-point setting pressure value is higher than the permissible range.</li> <li>Negative Pressure: Indicates that ON-point setting pressure is lower than the permissible range. The E8CC is, however, in normal output operation in both cases.</li> </ul>			0 to –101 kPa	
1 1	RUN	Load over-	Indicates that the output transistor has excessive load or is turned OFF and this display flashes until the condition				
15	SET	current	if this display flashes.			- acpar mining	
58	RUNElementSETdestruction		Indicates that the Pressure Sensor element is damaged due to the imposition of excessive pressure or other reasons, in which case, the output of the E8CC is turned OFF. If this display appears, the E8CC can no longer be used.				

#### Dimensions

(Unit: mm)

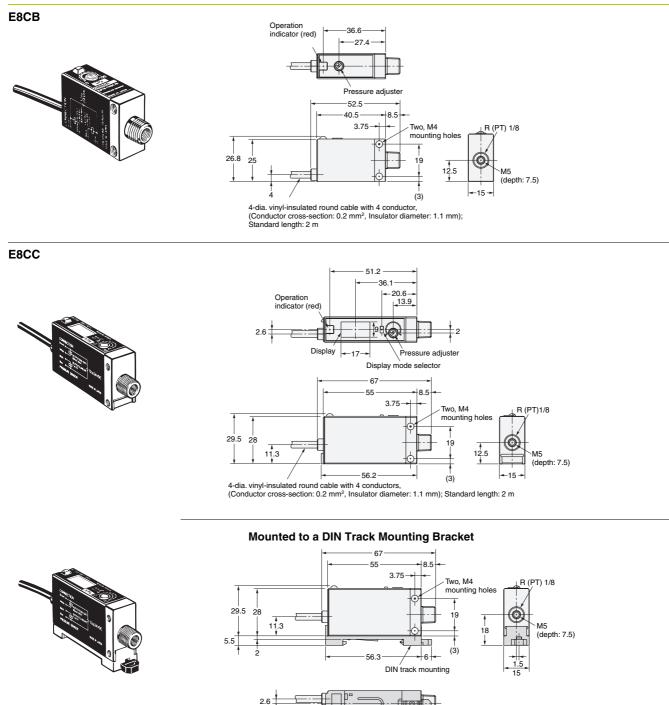

In the interest of product improvement, specifications are subject to change without notice.