



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



OVERVIEW

Included with the MSO-MICTOR cable shipment are the following:

- Qty 1 - 36 channel Mictor cable
- Qty 1 – MSO-MICTOR Instruction sheet (this document)
- Qty 1 - Mictor Connector Shroud.

Note: Additional shrouds can be purchased in a 3 pack. The LeCroy part number is MSO-MICTOR-SHROUD.

OPERATING ENVIRONMENT

Before using the MSO-MICTOR cable, ensure that its operating environment will be maintained within these parameters:

Temperature:	5 to 40 °C
Humidity:	≤ 80% RH (non-condensing)

SAFETY REQUIREMENTS



CAUTION

To avoid personal injury or damage to the MSO-MICTOR or any equipment connected to it, review and comply with the following safety precautions.

- **Use only as intended.** The MSO-MICTOR cable is intended to be used only with LeCroy MS-250, MS-500 or MS-500-36 Mixed Signal Oscilloscope options. Use of the MSO-MICTOR and/or the equipment it is connected to in a manner other than specified may impair the protection mechanisms.
- **Connect and disconnect properly.** Avoid damage to cables thru excessive bending. When disconnecting the MSO-MICTOR cable from the MS-250, MS-500, MS-500-36 or Device Under Test NEVER pull on the blue wires, pull only the black plastic housing.
- **For indoor use only.** The MSO-MICTOR cable and associated test equipment is intended for indoor use and should be operated in a clean, dry, environment.

BASIC OPERATION

Connecting the MSO-MICTOR to the MS-500 or MS-500-36

- Connect the end of the cable labeled D0 – D17 to the corresponding input of the MS-500 or MS-500-36 labeled D0 – D17 and fasten thumb screws
- Connect the end of the cable labeled D18 – D35 to the corresponding input of the MS-500 or MS-500-36 labeled D18 – D35 and fasten thumb screws


Connecting the MSO-MICTOR to the Device Under Test

- The MSO-MICTOR cable mates with the Tyco Electronics Pb free part# 2-5767004-2 Mictor connector.

Looking into Mictor Connector:

Connector Pin #	2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38
	D35	NC	D34	D33	D32	D31	D30	D29	D28	D27	D26	D25	D24	D23	D22	D21	D20	D19	D18
	D17	Gnd	D16	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
Connector Pin #	1	3	5	7	9	11	13	15	17	19	21	23	25	27	29	31	33	35	37

Recommended PCB Layout for Mictor Connector and Shroud

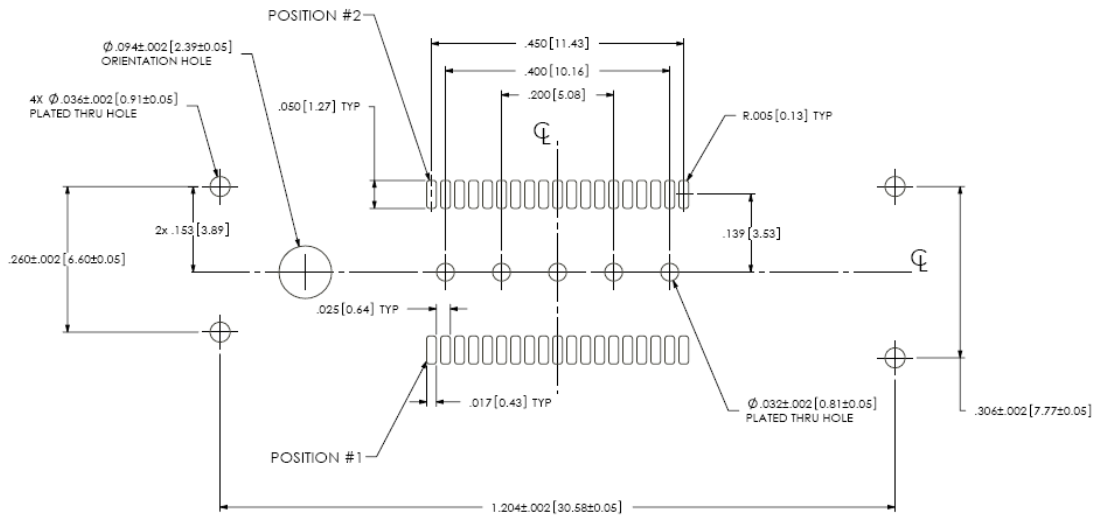

SPECIFICATIONS

Input Impedance	100 k Ω
Attenuation	10:1
Maximum Input Voltage	± 30 V

All specifications are for the MSO-MICTOR cable used with the MS-500 or MS-500-36

