imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us


Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





200A Current Probe Set

Model PQ34-2

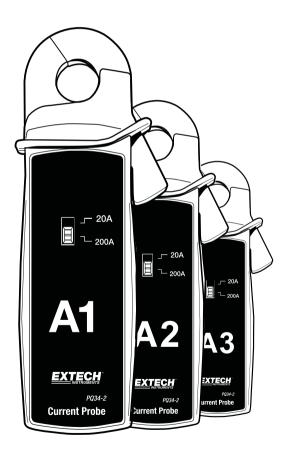

Introduction

Congratulations on your purchase of this Extech Current Probe Set. A set of three 200A current probes designed to be used with the Extech PQ3450 or PQ3470 Power Analyzers. These probes are shipped fully tested and calibrated and, with proper use, will provide years of reliable service.

Safety



This symbol, adjacent to another symbol or terminal, indicates the user must refer to the manual for further information.

This symbol, adjacent to a terminal, indicates that, under normal use, hazardous voltages may be present




Double insulation

Cautions

- Read and understand this user manual before operating the meter. •
- Improper use of this meter can cause damage, shock, injury or death, •
- Inspect the condition of the leads and the meter itself for any damage before operating the • meter.
- Use great care when making measurements if the voltages are greater than 25VAC rms or • 35VDC. These voltages are considered a shock hazard.
- Do not attempt to measure Current that exceeds specified limits ٠
- Do not operate this instrument in wet or dusty environments. ٠
- Do not operate this instrument in the presence of combustible or explosive gas •
- Do not touch exposed metal parts or unused terminals.
- Use protective gloves near high current or voltage circuits. •
- If the equipment is used in a manner not specified by the manufacturer, the protection provided • by the equipment may be impaired.

Probe Description

- 1. Current Sensing Jaws
- 2. Jaw Trigger
- 3. 1200A-200A-20A range switch
- 4. Signal output plug (+, red)
- 5. Signal output plug (-, black)
- 6. DCV power plug

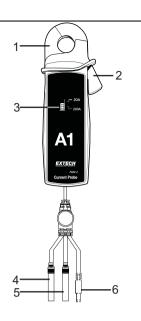

Operation

- 1. Connect the "A1" signal output cables to the matching input sockets on the top of the analyzer.
- 2. Connect the "A1" power cable to the matching power socket on the top of the analyzer.
- 3. Set the "200A-20A" range switch to the range appropriate for the application.

Note: Make sure the range set on the clamp matches the range set in the analyzer.

- 4. Connect the "A2" and "A3" clamps as above, if needed.
- 5. Press the "Trigger" to open the jaws and clamp around a single conductor.
- 6. Power on the power analyzer



20A and 200A, switch selectable
10mV/A (20A range) 1mV/A (200A range)
AC coupled.
± 1% F.S. @ 23 ± 5°C (50/60Hz)
45 to 400 Hz.
< ± 1° (50/60Hz)
100 K ohm for specified accuracy
UL 94-V0 rated
IEC 1010, Category III 600V
8V± 1V (supplied from meter)
19 mm (0.75 inch) Dia.
0°C to 50°C (32°F to 122°F)
Less than 80% RH
179.9 x 66.9 x 40.1mm. (7.0 X 2.6 X 1.57"inch)
4 meters (13.1 feet)
5.5 mm x 2.5 mm DIA.
330 g (0.73lb)

www.extech.com