



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





Test Procedure for the STK673-010GEVB Evaluation Board

[Supply Voltage] Vcc1 (10 to 30V) : Power Supply for stepping motor
 Vref (0 to 2.5V) : Const. Current Control for Reference Voltage
 Vcc2 (5V) : Power Supply for internal logic IC

[Slide Switch State] ON Side: Low (GND)
 OFF Side: High (5V pull up resistors)

[Operation Guide]

1. Motor Connection:
 Connect the stepping motor to U,V,W.
2. Initial Condition Setting:
 Set "ON" the slide switch Reset, and set "ON or OFF" ModeA to ModeB depend on step mode, and set "ON or OFF" CW/CCW, and set low clock.
3. Power Supply:
 At first, supply DC voltage to Vcc2, and VREF.
 Next, supply DC voltage to Vcc1.
4. Ready for Operation from Standby State:
 Turn "OFF" the slide switch Reset.
5. Motor Operation: Input the Clock signal into the terminal Clock.

[Setting the motor current]

The motor current IOH is set by the Vref voltage on the hybrid IC pin 10. The following formula gives the relationship between IOH and Vref.

STK673-010(-011)-E

$$IO \text{ peak} = Vref \div K, K = 0.63 (V/A)$$


Where $Vref \leq 0.5 \times VCC2$

$$Vref = VCC2 \times Rox \div (R01 + Rox)$$

$$Rox = (R02 \times 4.0k\Omega) \div (R02 + 4.0k\Omega)$$

In case of IOH=1.7A, $Vref=1.7 \times 0.63=1.071V$

Wave of IOH

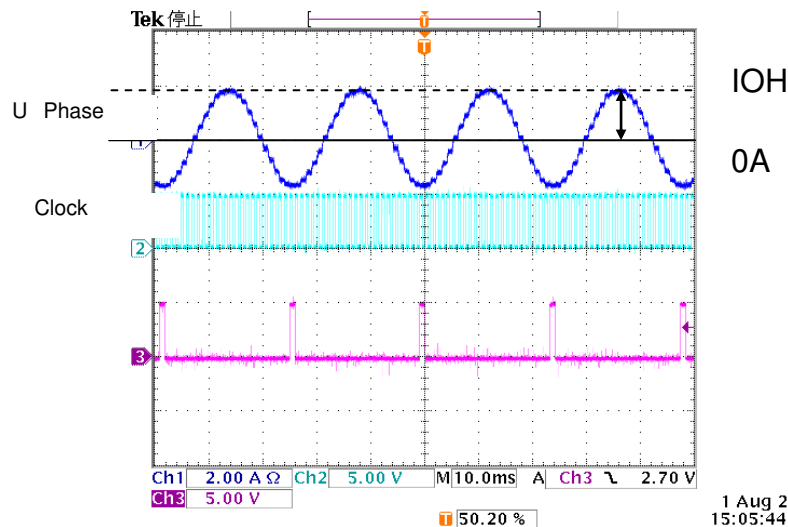



Notes in design:

(1) Allowable operating range

Operation of this product assumes use within the allowable operating range. If a supply voltage or an input voltage outside the allowable operating range is applied, an overvoltage may damage the internal control IC or the MOSFET.

If a voltage application mode that exceeds the allowable operating range is anticipated, connect a fuse or take other measures to cut off power supply to the product.

(2) Input pins

If the input pins are connected directly to the PC board connectors, electrostatic discharge or other overvoltage outside the specified range may be applied from the connectors and may damage the product. Current generated by this overvoltage can be suppressed to effectively prevent damage by inserting 100Ω □ to 1kΩ □ resistors in lines connected to the input pins. Take measures such as inserting resistors in lines connected to the input pins.

(3) Power connectors

If the motor power supply VCC is applied by mistake without connecting the GND part of the power connector when the product is operated, such as for test purposes, an overcurrent flows through the Vcc1 decoupling capacitor, C1, to the parasitic diode between the Vcc2 of the internal control IC and GND, and may damage the power supply pin block of the internal control IC.

(4) Input signal lines

Do not use an IC socket to mount the driver, and instead solder the driver directly to the PC board to minimize fluctuations in the GND potential due to the influence of the resistance component and inductance component of the GND pattern wiring.

To reduce noise caused by electromagnetic induction to small signal lines, do not design small signal lines (sensor signal lines, and 5V power supply signal lines) that run parallel in close proximity to the motor output line U (Pin 4,23), V (Pin 6,24), W (Pin 5,25) phases.